

THE SWOOSSE


by CAPT. A. STOLZENBERGER

THOSE of you who have built and flown control line models no doubt have at some time held such a model in a free flight launching attitude anticipating what would happen if you were to let it go. Well, if the model were properly trimmed about all three axes a spectacular flight should be expected; but, oh my aching back—the landing! Yes, just the thought is reason enough to harness that impulse unless it's an old model and you don't mind bending down more than once to pick it up after the first landing.

The free flight model presented here is similar to a control line model insofar as construction, weight and performance are concerned; however, its landing characteristics are much different from what would be expected from a control line model in free flight. The exceptionally clean lines, flat glide angle, and the fact that water landings eliminate the high impact and concentrated loads normally encountered with the high wing loaded wheel models, presents a model that introduces a different class of free flight job that may appeal to those interested in a fast flying smashproof ship. The author is not necessarily an exponent of speed models but is more interested in the smashproof feature, aerodynamic cleanliness, simplified construction, and is really an enthusiast about water flying—full scale or otherwise.

Model builders who have successfully built and flown seaplane models will no doubt agree that the landlubber is passing up an experience worth much more than the price of admission. So if you care to experience something really different in model building and flying, get out your pins and razor blades—I promise you will be in for more than just wet feet with this model.

This configuration does not adhere to any particular design or class but was worked out as a practical fast, free flight float model based on the author's past experience with this type. Don't let the rigid full cantilever construction frighten you; after all our airport is made of H₂O which is still soft at model speeds. This model has entered the water at angles over 45° and suffered no more damage than a wet sparkplug and points. In crosswind or single float landings there is ample resiliency in the hard balsa float struts to insure against damage, and then too with the high gull wing there is little danger of snagging a wing tip. Even if the model does go over on its back, it is safe to assume that no damage other than wet batteries and water in the fuel will result, and then after a quick change the model should be all set to go again. Incidentally, you need not carry

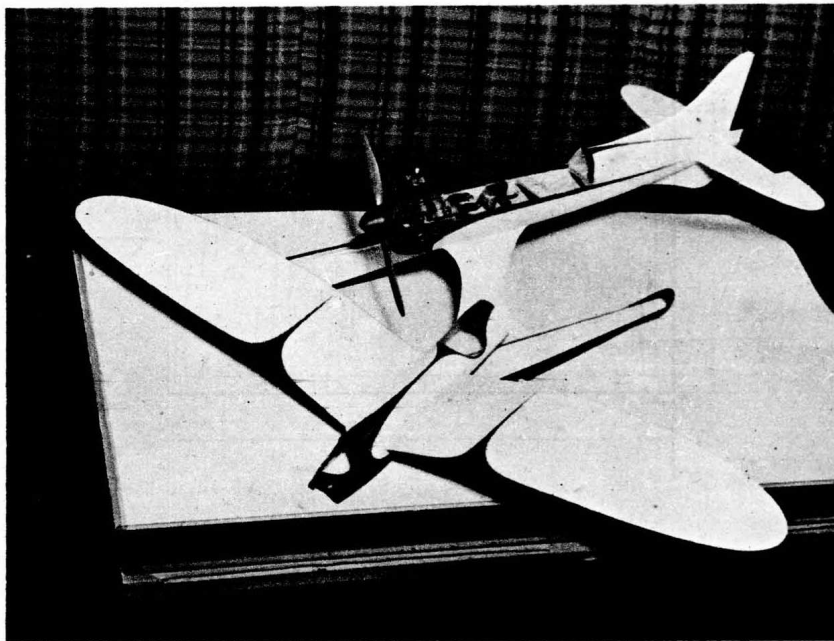

This beautiful twin-float seaplane was designed to fly like a real airplane, not a skyrocket, and to make realistic landings and takeoffs



The Swoose

spare props with you when flying this ship, that item of upkeep is completely eliminated no matter how the model comes in.

During takeoff, below the hump speed, the *Swoose* trims by stern and kicks up a sizable spray. As the speed increases she rises up out of the water onto the step with little effort and without any indication of porpoising. At this time the *Swoose* looks very much like a full scale ship for she skims along on the step for a considerable run before breaking water, and once in the air she picks up speed like a trophy cup racer and looks the part too. After takeoff, when properly trimmed, the *Swoose* does not zoom up and hang on her prop but climbs at a shallow angle and at a good clip. In the air she is very stable and is not greatly affected by slight winds. When the engine quits there is no noticeable change in trim and the *Swoose* slowly settles down in a fast flat glide. Upon contact with the water the long toed floats kick the nose up immediately at which time she will ride along high out of the water for a surprisingly long run before settling in.

Since the accompanying drawings are self-explanatory and since it is quite obvious that this model is not intended for the beginner, step by step instructions will be omitted here; however, a general discussion about the design, construction and a few hints may prove of value.

The wings are built up of hard balsa and ribs, soft balsa intermediate ribs and soft balsa skin. The skin thickness is 1/16" during construction and then sanded from slightly under 1/16" at the leading edge to almost 1/32" at the trailing edge. The fuselage is carved from medium soft balsa and hollowed out to a wall thickness of 3/16" from the nose to the cockpit enclosure and then tapered to approximately 1/8" thickness at the aft end. The plywood ribs fastened at the wing root fillets on the fuselage before carving will serve as templates while shaping and as rigid supporting members for securing the wing to the fuselage during final assembly. The stabilizer, vertical fins and dorsal are cut from medium soft balsa 3/32" thick and sanded to 1/32" at the edges. The rudder

SHAPING

ADHESIVE

COLORING

FINISHING



Plastico Rok

AMAZING AID TO MODEL BUILDERS!

Here is truly the plastic of tomorrow! Perfected for your greater usage today . . . you'll marvel at the ease with which Plastico Rok meets so many different requirements.

SHAPING

Model Builders everywhere are delighted with the speed of Plastico Rok. They can complete the shaping of intricate parts in no time! It can be generously applied . . . forming as you go. It can also be carved, sandpapered, or sawed. Plastico Rok is indispensable for reshaping "mistakes" in your original layouts.

SURFACING

Plastico Rok is used extensively as a paint base or undercoat. The Rok penetrates the pores of the wood and gives a hard smooth finish when sanded that will not chip or peel. First warm the tube or can of Rok. Next you thin the Rok with a very little warm water so that you can brush it on smoothly. Allow to become bone dry then sand to a plate glass finish. Use fairly coarse sandpaper first and finish with "00" sandpaper. For flat surfaces it is best to use sandpaper on a small block of wood. It is best to use the same color Rok for the undercoat that you will use for the finished coat. The Rok undercoat absorbs brush marks insuring smooth finish.

ADHESIVE

Plastico Rok is peerless among adhesives . . . Model builders who once use Plastico Rok never buy another type of adhesive. Plastico Rok readily adheres even to glass and metal surfaces. For Household uses, too, it settles into cracks, joints, or surfaces and permanently welds them into solid constructions.

ROK IS MADE IN WHITE AND 12 PRACTICAL COLORS:

Red	Orange	Olive Drab	Green	Light Oak
Blue	Dark Oak	Battleship Grey	Yellow	Mahogany

Standard 3-Oz. Tubes.....\$.30

1/4-Pt. Can Approx. Wt. 8-Ozs.45

UTILITY KIT 7 ASST'D COLORS—30c tubes.....1.95


See your dealer first—or remit for colors needed.
Add 10 per cent for postage. Please name colors.

STEWART P. ELLIOTT
820 Mission St. San Francisco 3

National Distributor to the Hobby and Toy Trade


BATTERY CLAMP for GAS PLANES

Made of aluminum, light but sturdy. Securely holds round or square batteries. Bracket mounts anywhere with 2 screws. A useful clamp for many purposes.

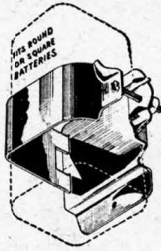

35c

"ELECTRALINE" INSULATED STEEL WIRE for CONTROL LINE MODELS

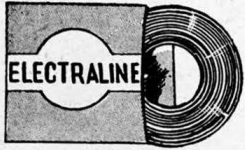

\$1.50

150 ft. Coil
Diam. .011" or .014"
State Size Desired

ELECTRALINE—The first and original insulated control line wire. Perfected to R. L. Webber specifications after 2 years of rugged experimentation. Insulated with a tough flexible rust-proof coating.

Attractively packaged with diagrams, electrical hook-up and complete instructions for use with Two Speed Control or cutoff switch.

HI-THRUST PROPS

For Higher Speeds—
Longer Flight—



Perfect air-foil section. Sharp, clean edges. Choice of 3 pitches.

PRICE LIST

Diameter	6" or 8" Pitch	10" Pitch
8" or 9"	35c	45c
10"	40c	45c
11"	40c	50c
12" or 13"	45c	60c
14"	50c	65c

ASK FOR "HI-THRUST"
AT YOUR DEALER

R. L. Webber
COMPANY

ORDER FROM 5729-31 LAKE ST CHICAGO 44

In Canada It's Harold Speaker Hobbies

1852 Danforth Ave., Toronto, Ont.
Phone HO 5707

FOR YOUR

HOBBY KITS & SUPPLIES

Largest Stock and Variety
of Any Hobby Store
in Canada

New Sole Distributors
for Keenle Model Coil

Hot spark, very low battery drain, light weight. Has already won firsts in "U" Control and free flight contests.

Motors in Stock


Send 10c for Catalog

and elevators are soft balsa 3/32" thick and hinged to the supporting surfaces with .010" soft aluminum hinges. The floats are built up of 1/16" hard sheet balsa for the bottoms, 1/16" medium soft balsa sides and 1/16" soft balsa decks. The keels and chines are hard balsa. Bulkheads are medium soft balsa with the exception of the very hard bulkheads straddled by the float struts. A 1/16" square hardwood outer keel and 1/16" hardwood skag at the step will protect the bottom during ground handling. Stern fins are 1/16" hard balsa. The float struts are 3/16" thick, very hard balsa sanded round at the leading and trailing edges. If this size balsa is not available the struts may be built up to the proper width with narrow sheets. The sheets should be scarfed on the ends with at least a 5 to 1 taper and pressure glued with a resin base glue, such as *Plascon*.

The engine installation, wiring details and equipment installation will be left up to the individual depending on the engine to be used. The *Atom* was used by the author because of size and weight limitations of the model during the design stages; however, after flying the *Swoose* the author feels reasonably safe in advising any good Class A engine. If an engine other than the *Atom* is used the builder must fair the fuselage nose contours to suit the installation. It will also be necessary in any event to check and balance the model before final installation of engine accessories. The c.g. should be

located 1-5/8" back from the leading edge of the wing root. This c.g. location should be held to a tolerance of 1/8" to insure proper static balance as well as to guarantee good hydrodynamic characteristics. Besides affecting stability in flight, a slight change in the c.g. location may cause porpoising during takeoff and/or possibly prevent takeoff entirely; therefore it is imperative that the wing, the c.g. and the floats, especially the step, bear the same relative locations, as shown. Great care should be exercised at final assembly in regard to rigging. It should be noted that the angle of thrust, float angle and wing incidence are all set at 0° or parallel. This alignment with the stabilizer setting of -1.5° should be maintained to insure against dynamic instability both in the air and on the water.

It is an accepted fact that about 75% of engine trouble is usually due to a faulty ignition system. Well, I can assure you that a faulty ignition system in the *Swoose* will raise that 75% to about 99% and you will probably spend 99% of your time drying things out or else, after the first bad landing, you will give up trying to fly again that day.* If your ignition system is airtight it will be watertight, so glue everything down securely and go over the entire wiring and all accessories with several coats of thick dope or lacquer. The battery terminals, spark-plug and points will naturally have to be left open; however, they will be accessible and easily wiped dry. Another

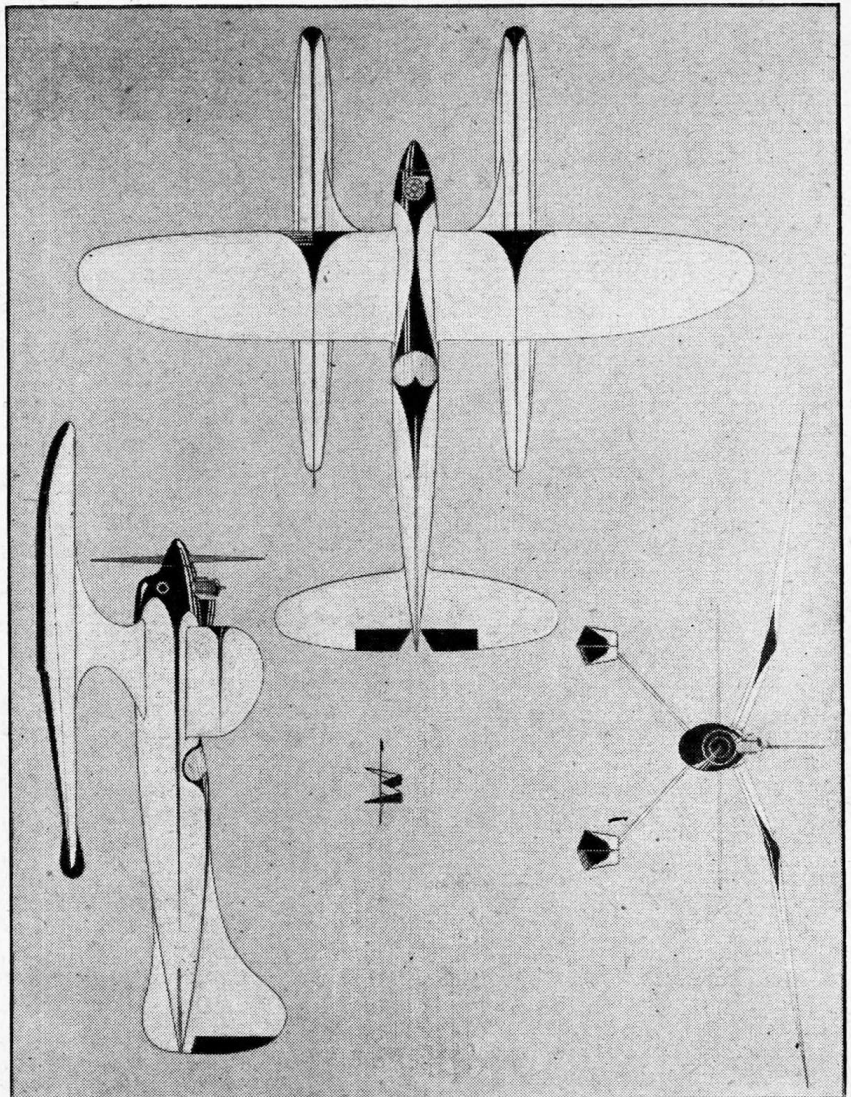

THE SWOOSE

SPAN 31 in.
LENGTH OVERALL 29 in.
FLOAT LENGTH 22 3/4 in.
BEAM 1 3/4 in.


WING AREA95 sq. ft.
STABILIZER AREA, INCL. ELEV.31 sq. ft.
FIN AREA, INCL. RUD.19 sq. ft.
WING INCIDENCE 0°

STABILIZER INCIDENCE .. -1.5°
DIHEDRAL, OUTER PANEL .. 14°
DIHEDRAL AT GULL 23°
THRUST ANGLE 0°

Hobbycraft Customers Too, Like to Hear Your Cash Register Sing!

Sure they do. When you ring up a sale that means your customer got what he wanted.

He's happy! You are happy. And that's where National comes into the picture, because successful hobbycraft dealers are depending on National to keep them supplied with the goods their customers want—they get prompt shipment of not only the steady-selling old standbys, but the new things too—when they are new—kits and supplies, tools, gadgets and what not. Now over 2500 fast-selling, advertised items in National's newest Check List, plus the very newest releases and forthcoming items in supplementary lists—every month or so. Write National today.

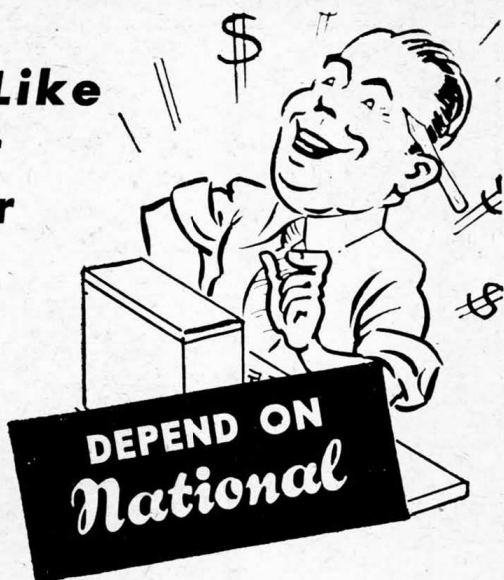

precaution against dampness is to go over the entire model, inside and out, before flying, with a thin coat of polishing wax.


In order to trim the *Swoose* for flight it will be necessary to make several power-off hand launchings onto the water. Do not attempt this on a calm day unless you have a well-controlled right arm. You will find that it will take a smart thrust into a moderate breeze to determine when the model is properly trimmed. Be sure to choose a large enough body of water in which to make the first flights, for if the model is not properly trimmed to fly in circles you may run out of airport in short order and no telling what might happen if this hot rock lands on terra firma.

*Those builders who have or can borrow a Class A Diesel engine will have an ideal powerplant for this model since there is no ignition system to give trouble after a "dunking."—Ed.

A NATIONAL SCOOP

Rush Orders for This
New Portable Paint Sprayer Outfit
HANDY JOE COMPRESSOR
HANDY MIKE SPRAY GUN

Here is what thousands of hobbycraft fans have been waiting for—a small, inexpensive, portable all-purpose compressor and spray gun. It fills a long felt need for painting and other spraying jobs around the house and for regular use in the home workshop. Weighs only 7¼ lbs. Stands 9 inches high. Works with pressures of 20 to 35 lbs. Run it with any ¼ h.p. motor.

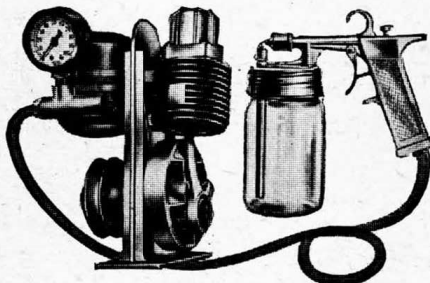

LIST PRICES—Complete (Less Motor)
\$22.20. Compressor \$14.50—Spray Gun
\$6.00. 12½ ft. hose \$1.70



NATIONAL MODEL DISTRIBUTORS

150-156 N. WACKER DRIVE • CHICAGO, 6

Now for EVERY WORK SHOP! NEW Invention Electroplates by BRUSH

Easy to Plate CHROMIUM
GOLD, SILVER, NICKEL, COPPER
... For Pleasure and Profit!

If you have a workshop—at home or in business—you need this new Warner Electroplater. At the stroke of an electrified brush, you can electroplate models and projects—you can replate worn articles, faucets, tools, fixtures, silverware, etc with a durable, sparkling coat of metal... Gold, Silver, Chromium, Nickel, Copper or Cadmium. Method is easy, simple, quick. Everything furnished—equipment complete, ready for use. *By doing a bit of work for others, your machine can pay for itself within a week.* So make your shop complete by getting a Warner Electroplater right away. Send today for FREE SAMPLE and illustrated literature. ACT AT ONCE!

WARNER ELECTRIC CO., DEPT. K-92
663 N. Wells St., Chicago 10, Illinois

FREE Details & Sample!

WARNER ELECTRIC CO., 663 N. Wells St., Chicago 10, Dept. K-92
Gentlemen: Send Free Sample and Details to:

Name _____
Address _____
City _____ State _____

NEW!

WHEEL COLLAR HUBS

LEADER brings you this outstanding addition. More realism... better flying, landing and genuine free-wheeling for your model! Very easy to install. Hold firmly in place. Machined in brass. Set screw. For ¼" and 3/32" axle. Complete with hub and back washer.

SET OF FOUR PIECES... **25¢**
By Mail, 30c

NEW MOTOR FLYWHEELS

Machined to .001 tolerance. True balance. 3 convenient sizes:

CLASS "A"	"B"	"C"
5/8" x 1-1/2"	7/8" x 2"	1" x 2-1/2"
bore: 1/4" or 3/16"	bore: 1/4"	bore: 5/16"
wt. 4 oz.	wt. 10 oz.	wt. 16 oz.
\$1	\$1.75	\$2

by mail \$1.10 by mail \$1.85 by mail \$2.15
Note: Class "A" flywheel is ideal for U CONTROL

MOTOR CONTROLLERS	FUEL PUMP BOTTLES
Movable point retainers for Ohlsson type timers each 15c p.p.	6 oz. size..... 75c by mail 85c

Ask for Leader Accessories at Your Dealer
DEALER JOBBERS WRITE

LEADER

MODEL SUPPLY COMPANY
6538 So. Ashland Ave., Chicago 36, Ill.