


FULL SIZE WORKING DRAWINGS ARE OBTAINABLE FROM YOUR LOCAL DEALER. OR BY POST FROM THE "MODEL AIRCRAFT" PLANS DEPARTMENT, 19-20, NOEL STREET, LONDON, W.1, 3s. 6d. POST FREE.

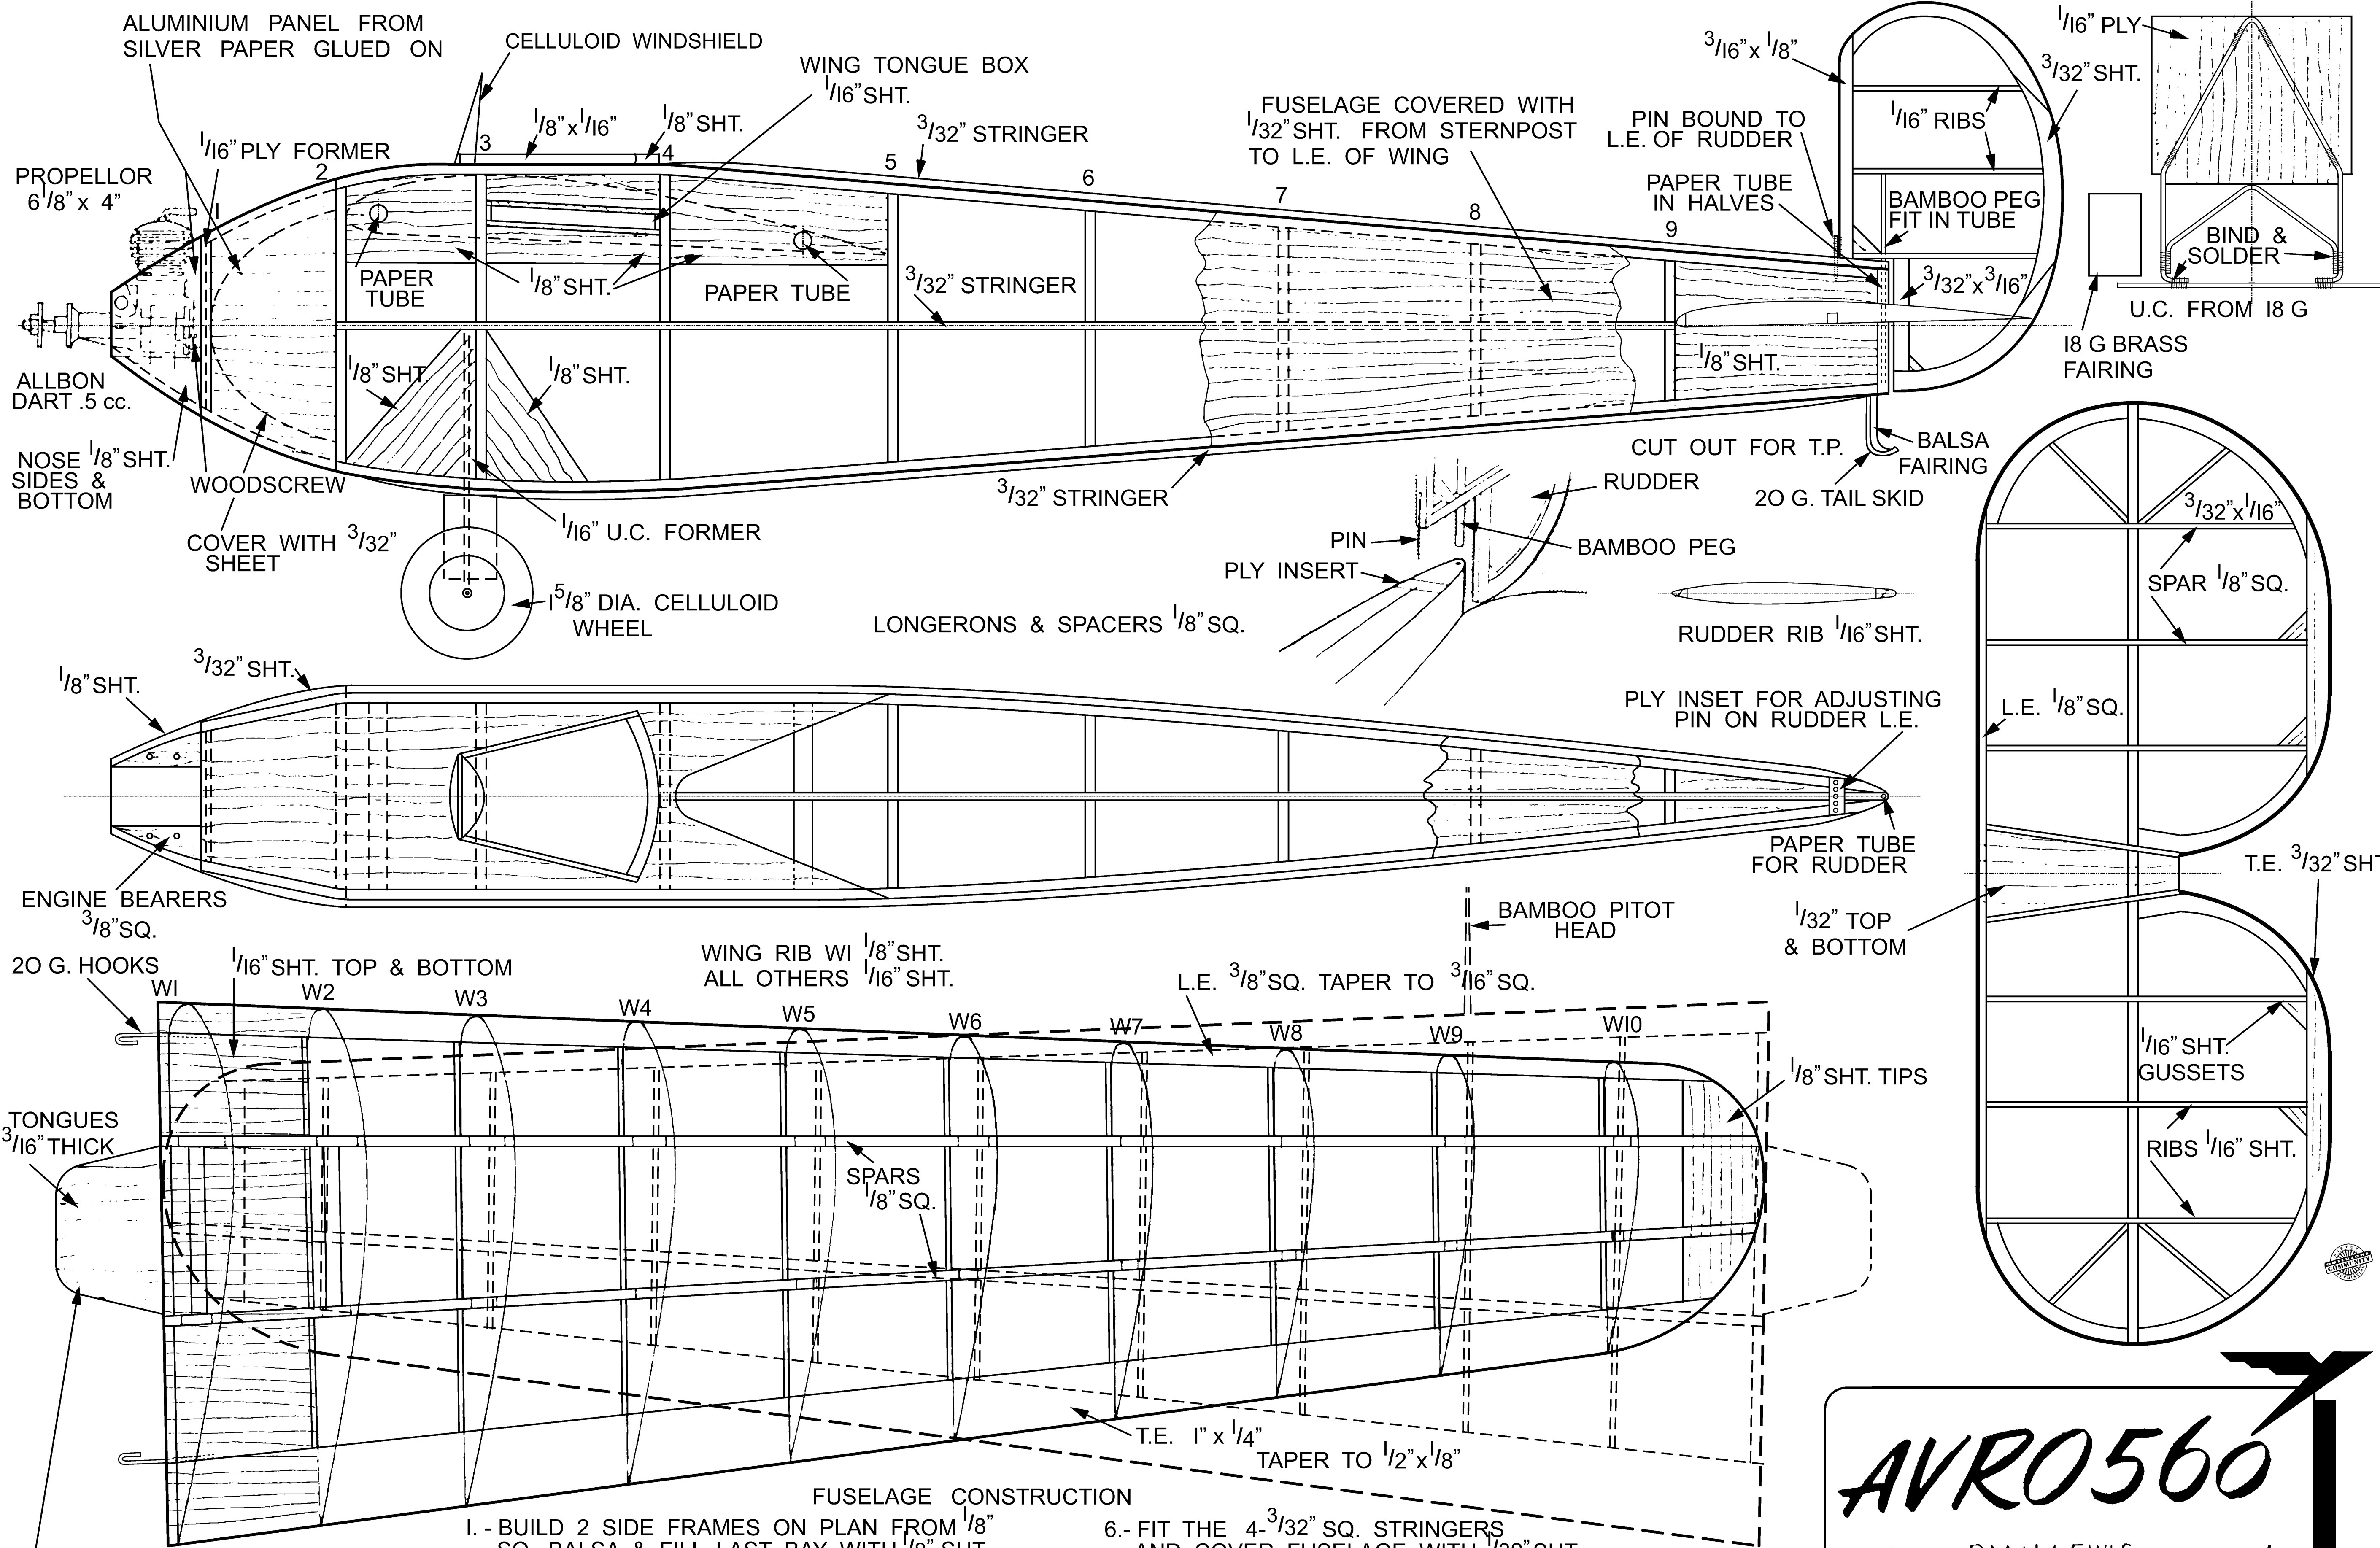

- FUSELAGE CONSTRUCTION**
- 1.- BUILD 2 SIDE FRAMES ON PLAN FROM 1/8" SQ. BALSA & FILL LAST BAY WITH 1/8" SHT.
 - 2.- JOIN AT TAIL AND FIT CROSS MEMBERS.
 - 3.- CUT U.C. FORMER; ADD U.C. & FIT TO FUSELAGE; ADD GUSSETS.
 - 4.- FILL FUSELAGE AT WING ROOTS. MAKE & FIT WING TONGUE BOXES. ADD PAPER TUBES.
 - 5.- ADD TAIL SKID, RUDDER TUBE & PLY INSET
 - 6.- FIT THE 4-3/32" SQ. STRINGERS AND COVER FUSELAGE WITH 1/32" SHT. FROM STRUT - 2 TO REAR.
 - 7.- SCREW AND CEMENT ENGINE MOUNT TO 1/16" PLY FRONT FORMER.
 - 8.- COVER FRONT OF FUSELAGE.
- COVER MODEL WITH MEDIUM WEIGHT TISSUE, WATER SPRAY & GIVE TWO COATS CLEAR DOPE, TWO SILVER

AVRO 560

MA 152 P.M.H. LEWIS 3/6

SPAN 4 1/2" LENGTH 25"

COPYRIGHT MODEL AIRCRAFT
19-20 NOEL ST LONDON W1.