
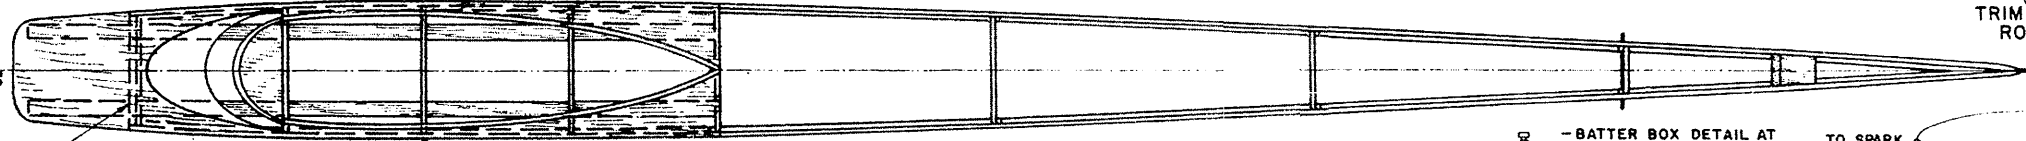
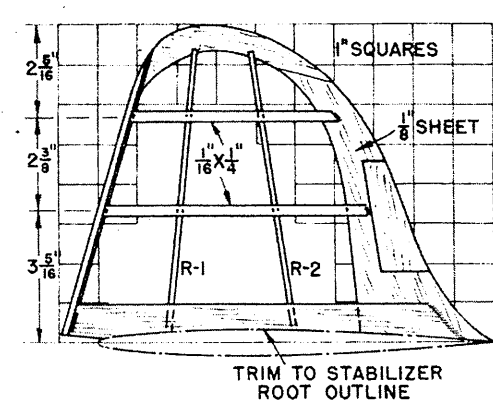
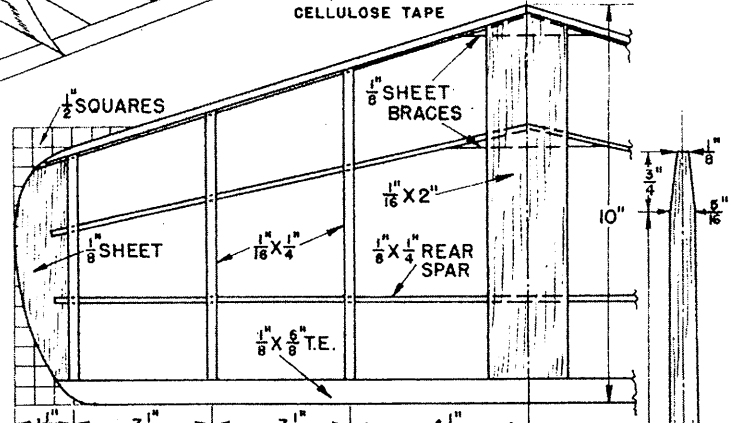
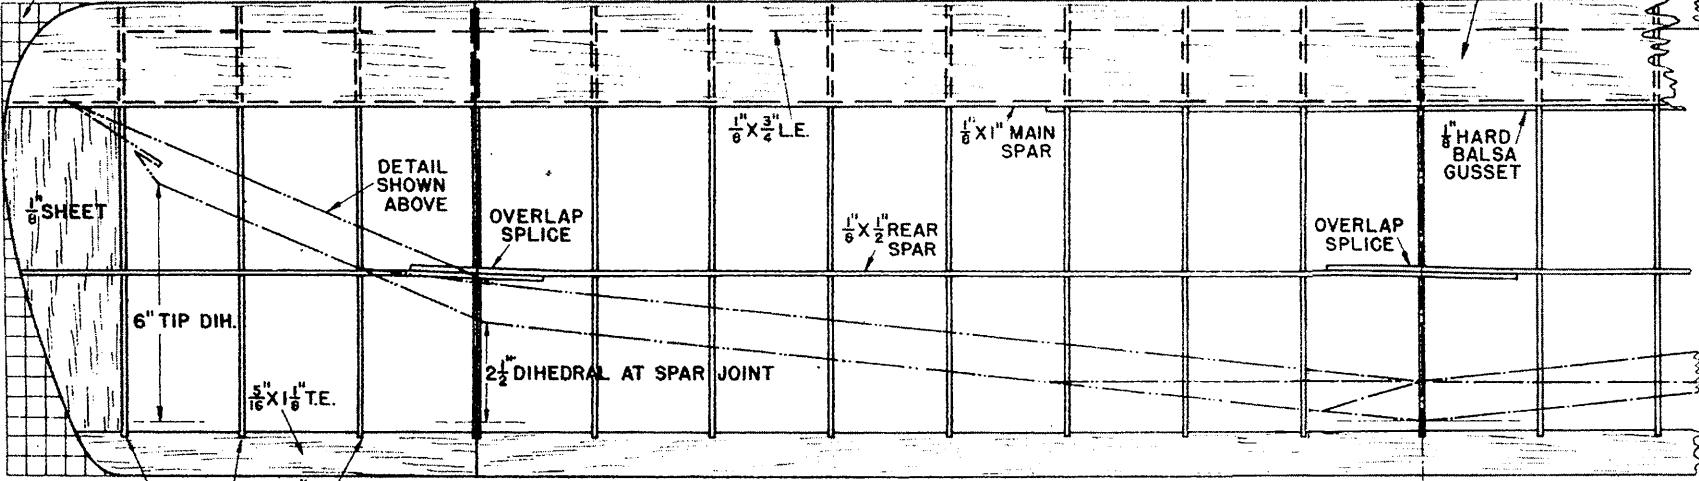
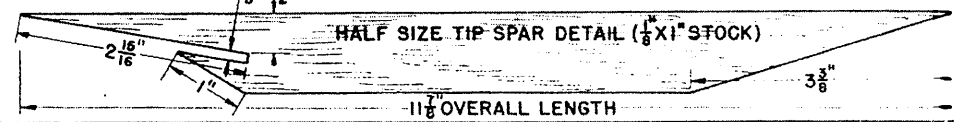
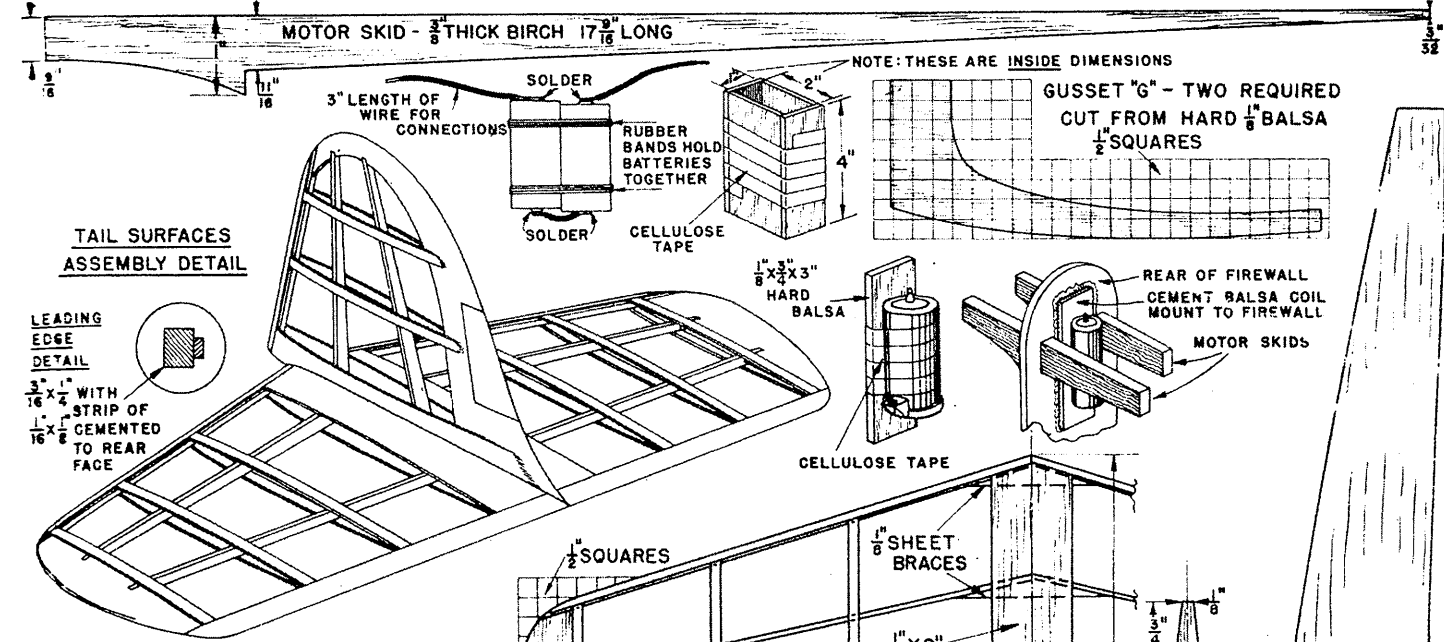






# BUZZARD BOMBSHELL

BY JOE KONEFES

PLANS BY PAUL PLECAN

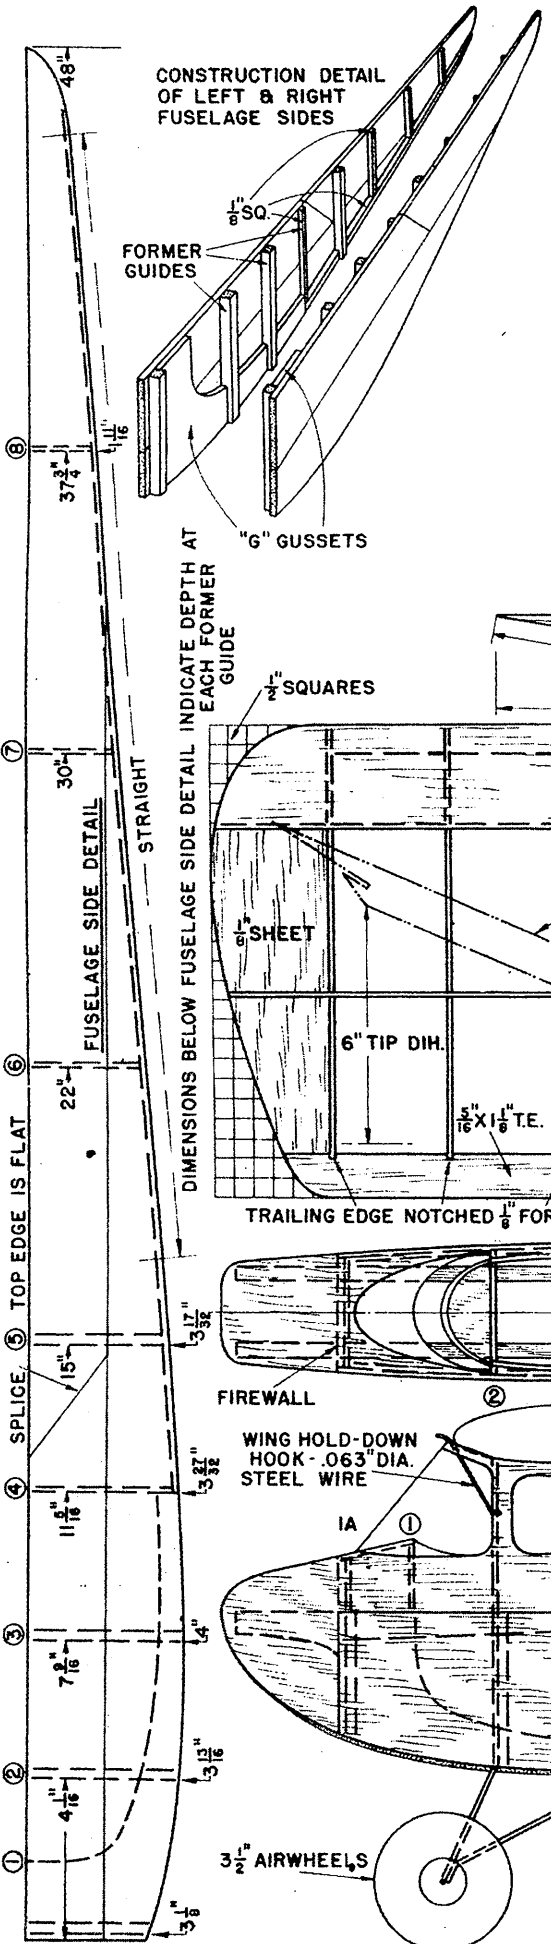


NOTE: ALL FORMERS ARE CEMENTED IN PLACE AHEAD OF THE FORMER GUIDES, WITH THE EXCEPTION OF NUMBER 8.

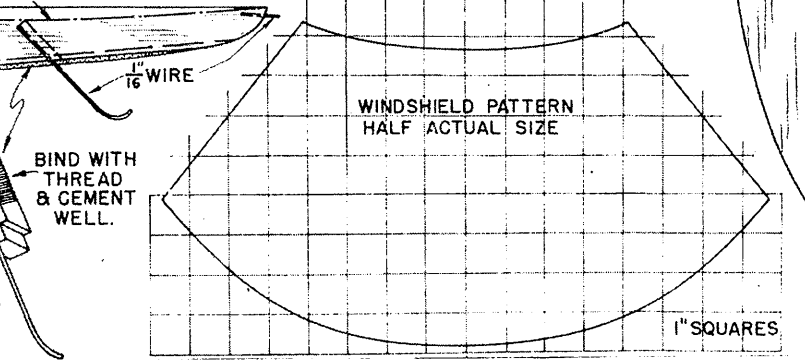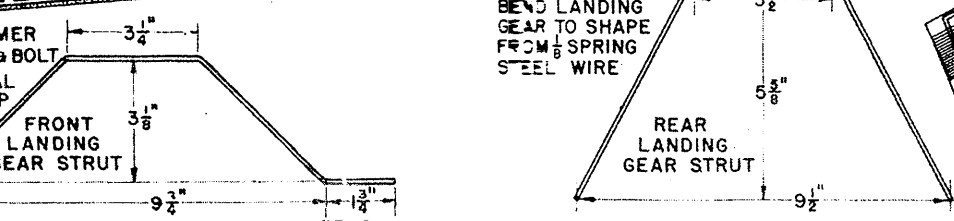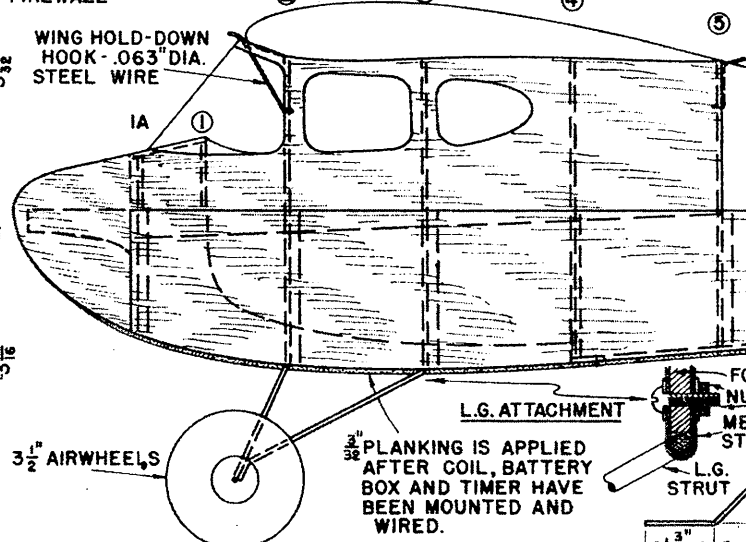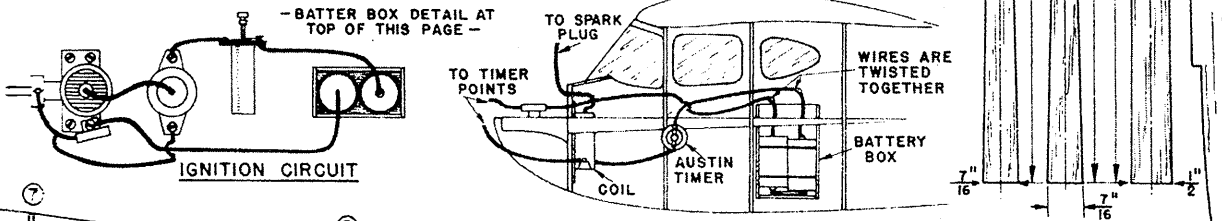


FULL SIZE WING RIB  
23 REQUIRED  
1/8 SHEET

# THE BOMBSHELL

$\frac{1}{8}$ " SHEET USED FOR FUSELAGE FORMERS UNLESS SPECIFIED OTHERWISE ON PLAN.

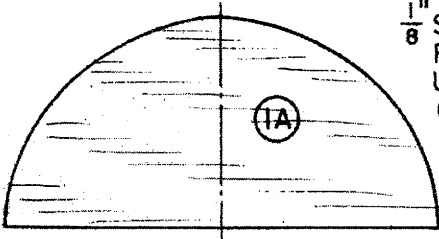

## FULL SIZE FUSELAGE FORMERS

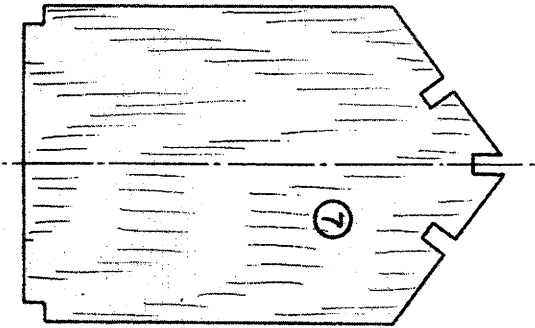

NOTE SLIGHT BEVEL ON TOP AND BOTTOM EDGES OF FIREWALL

