

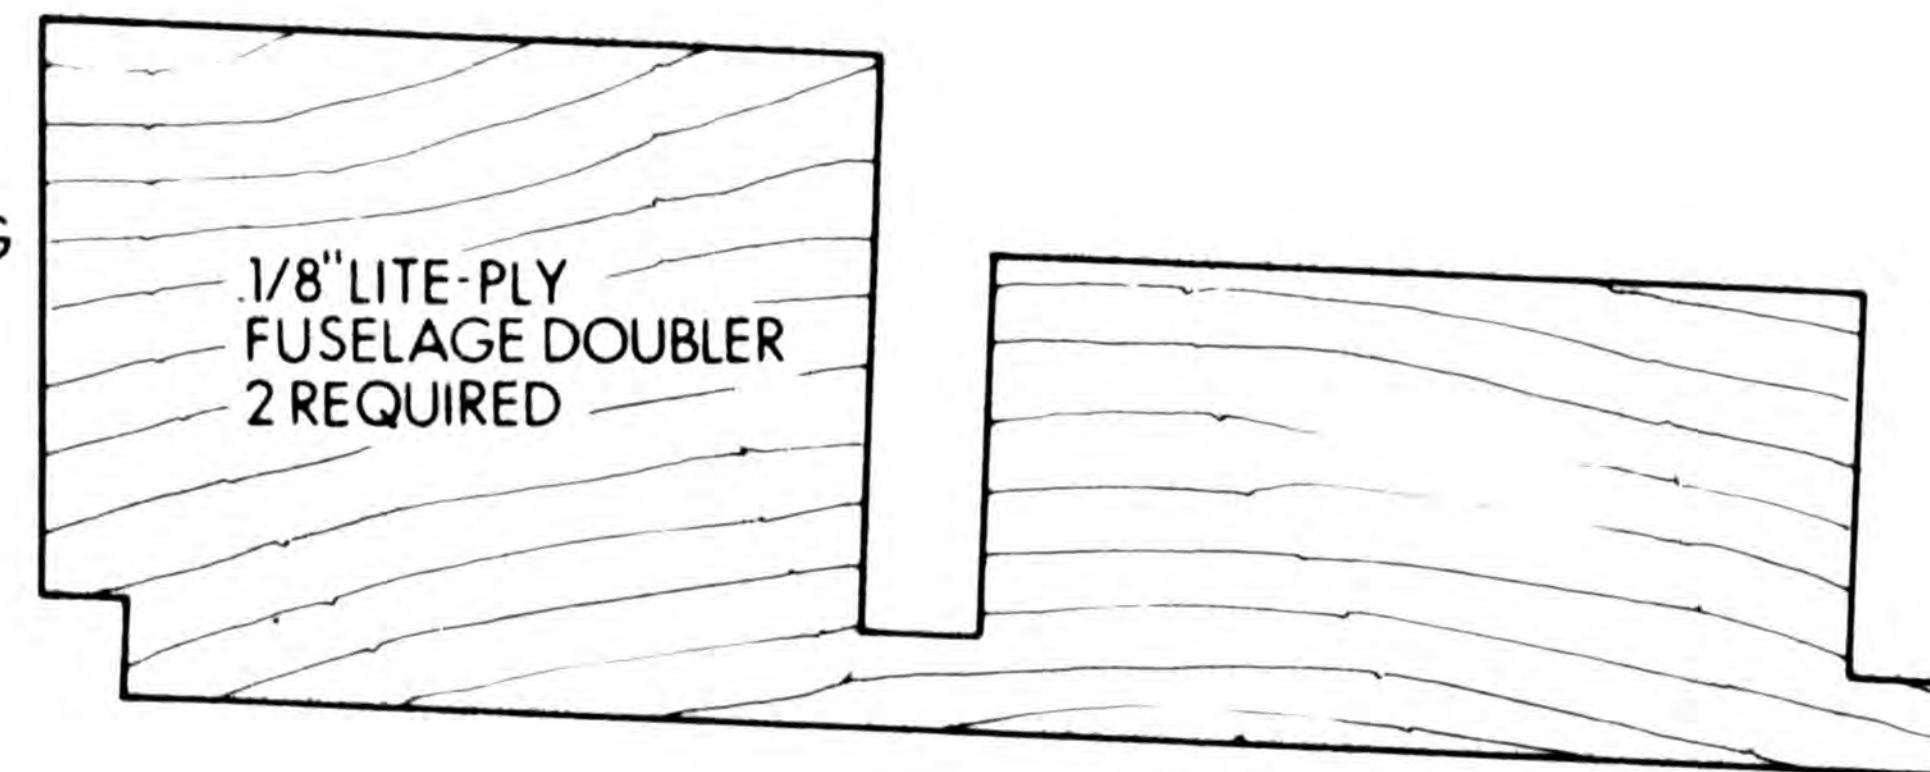
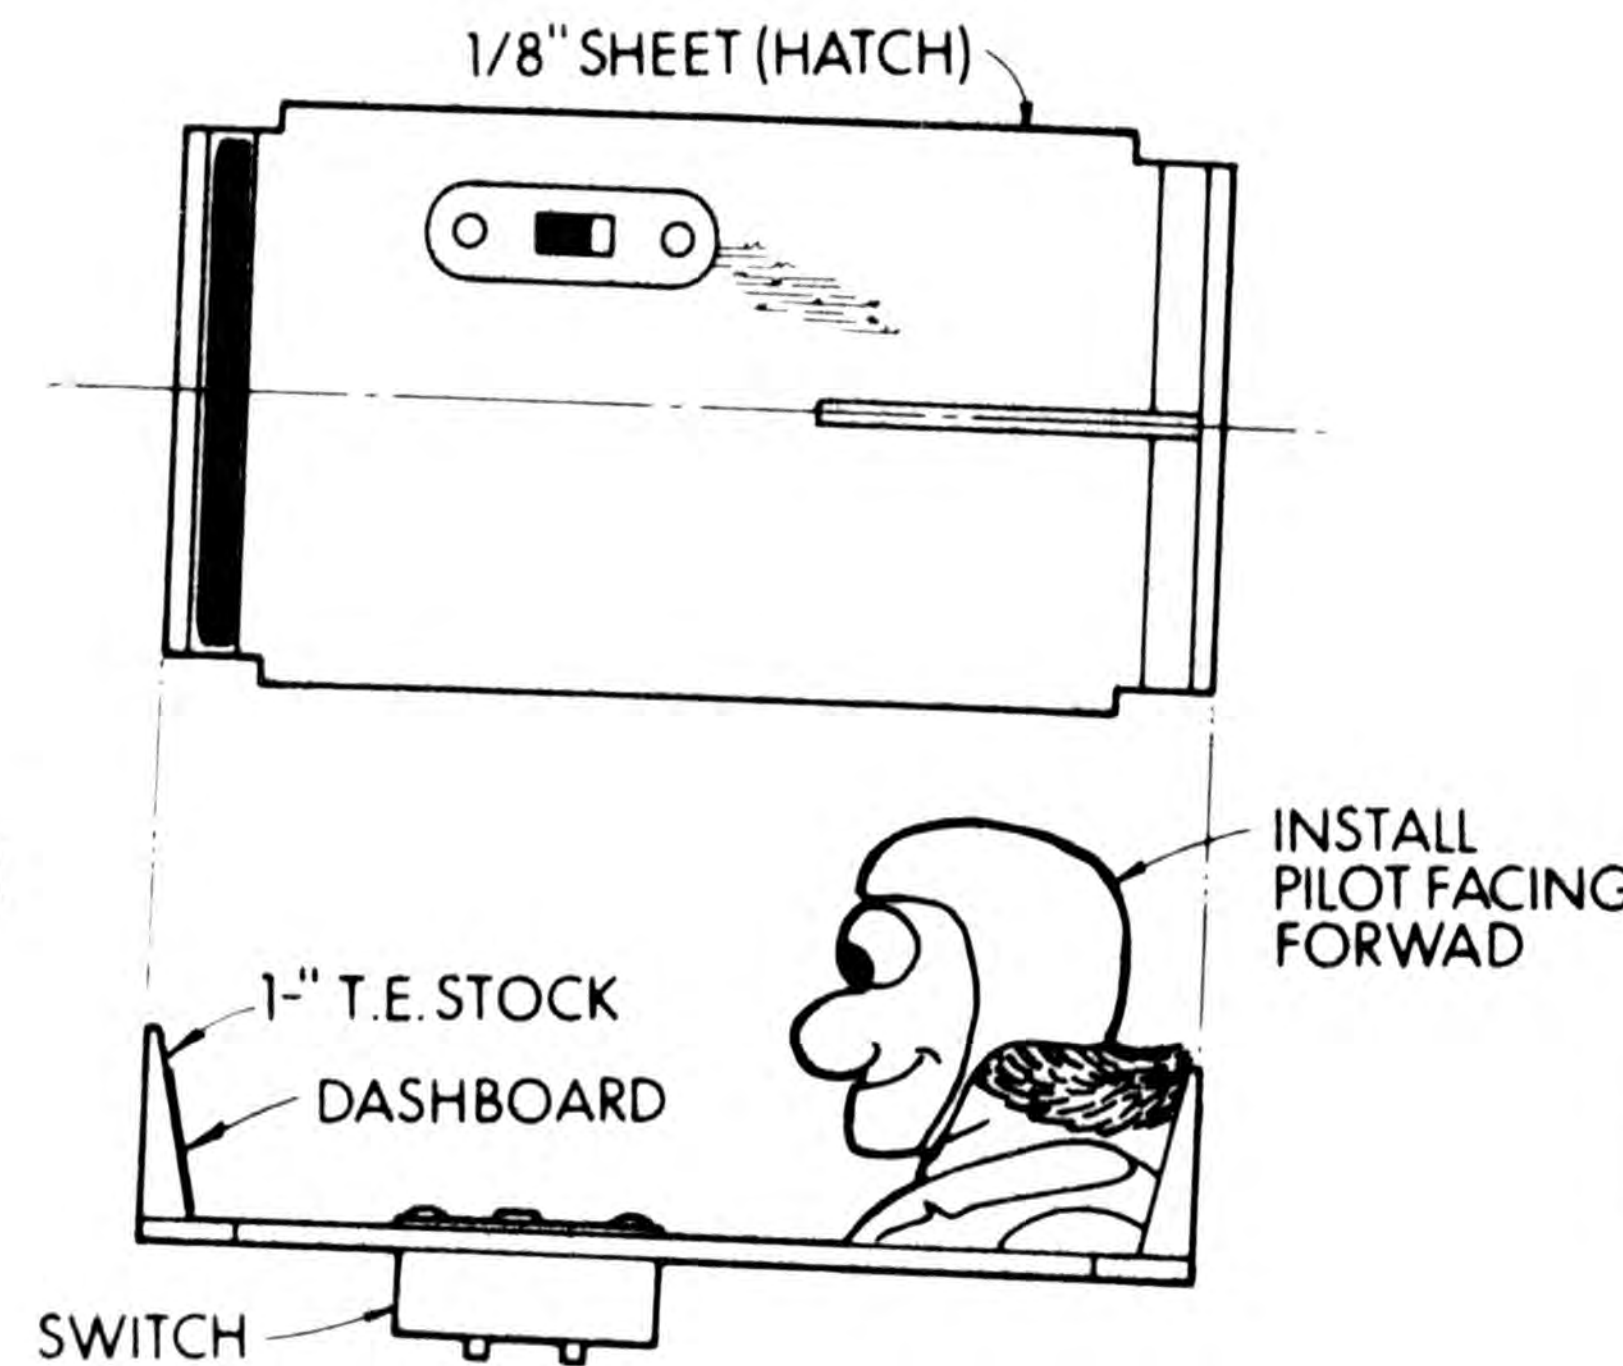
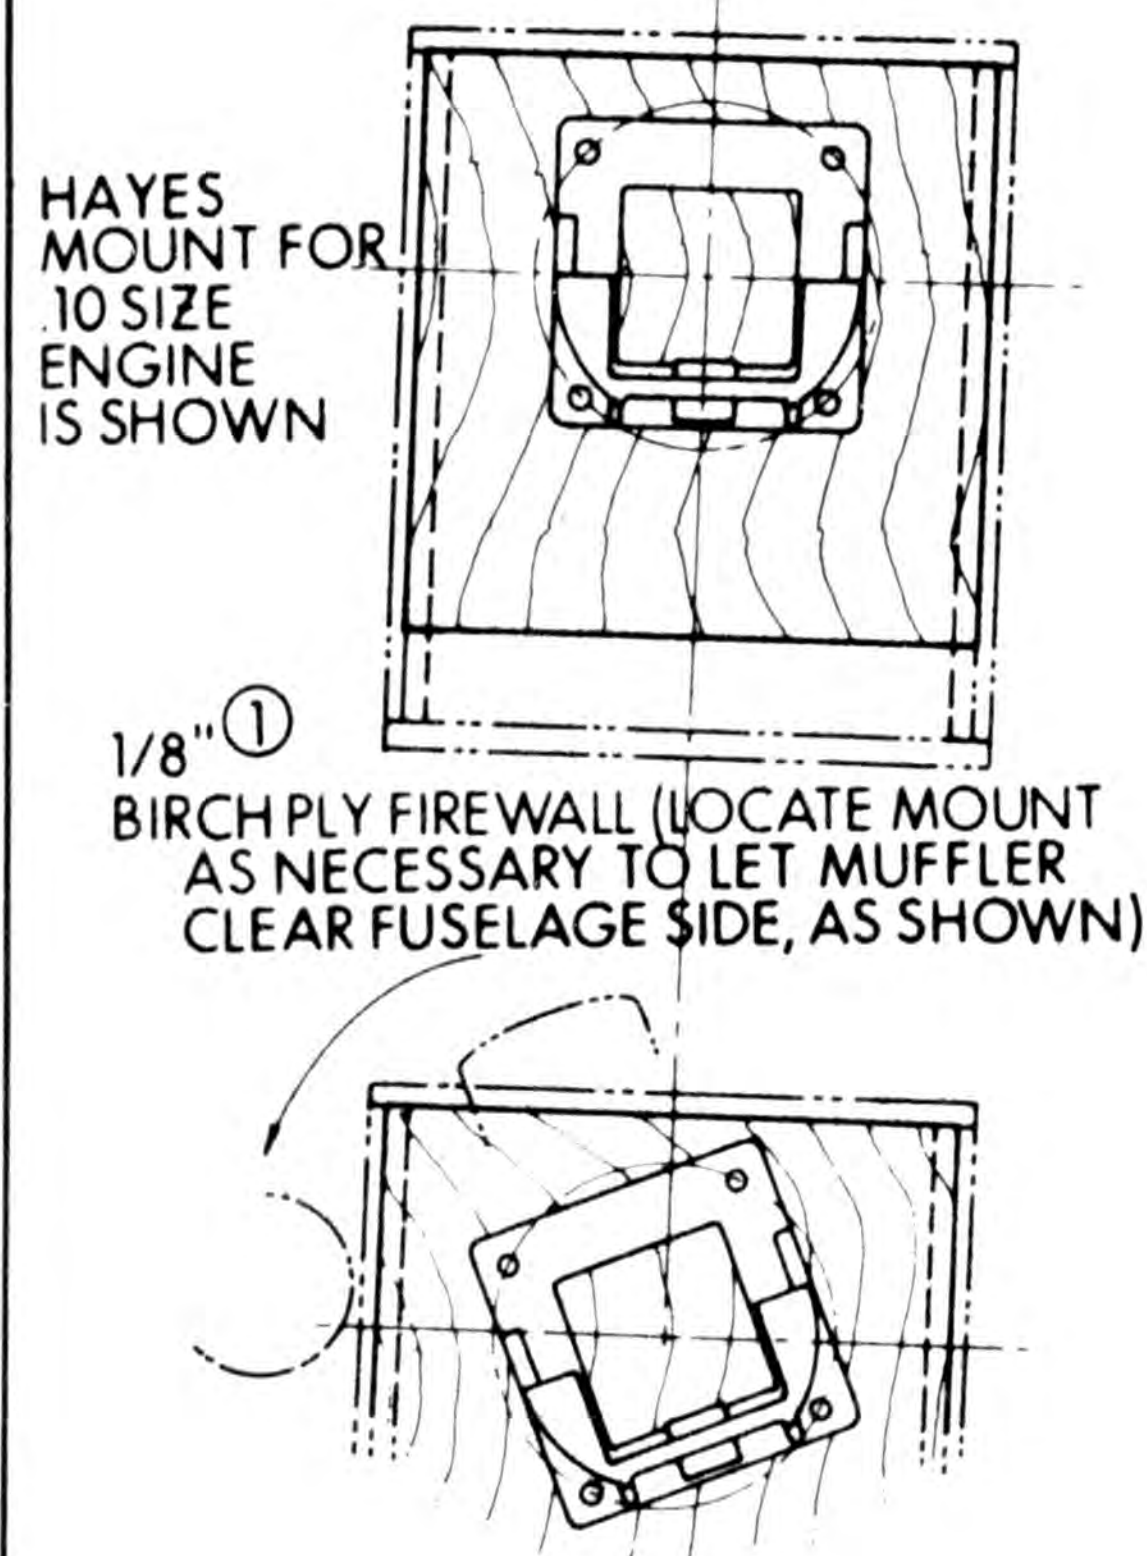
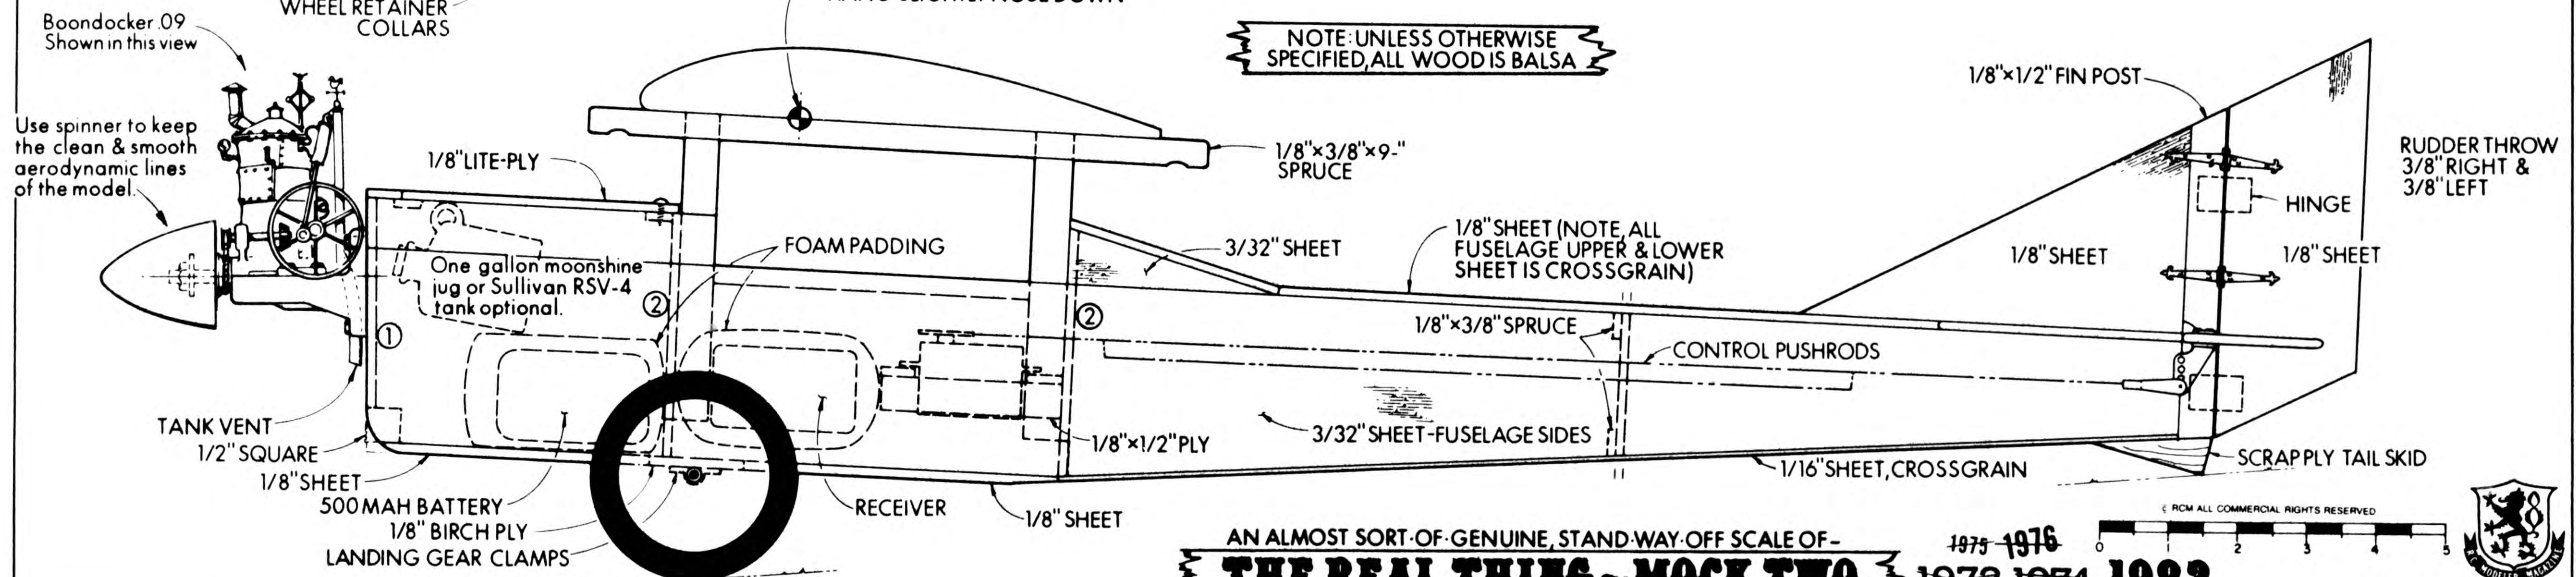
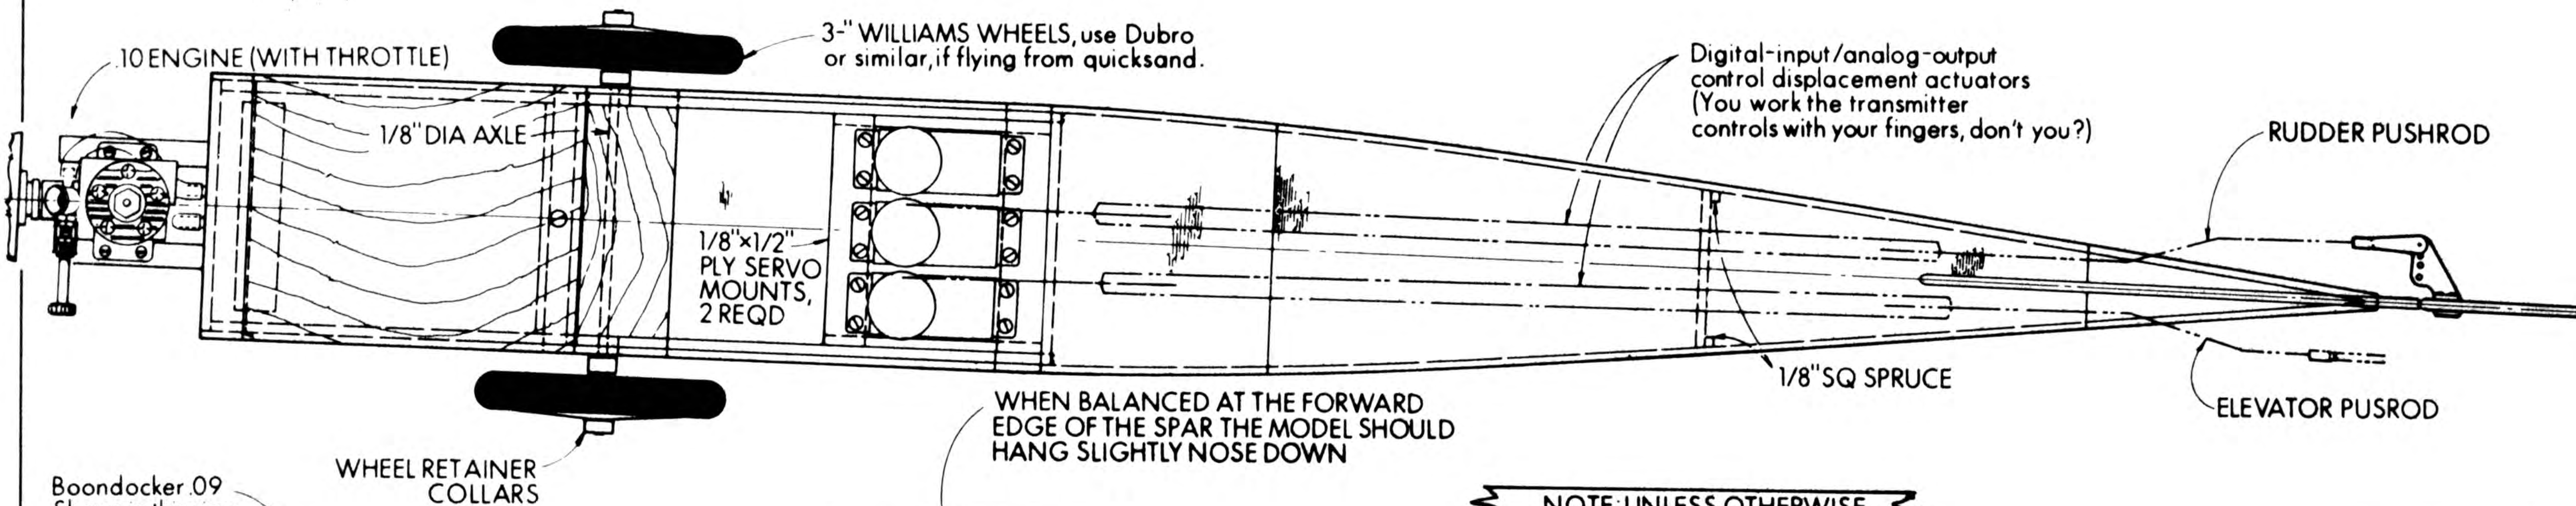


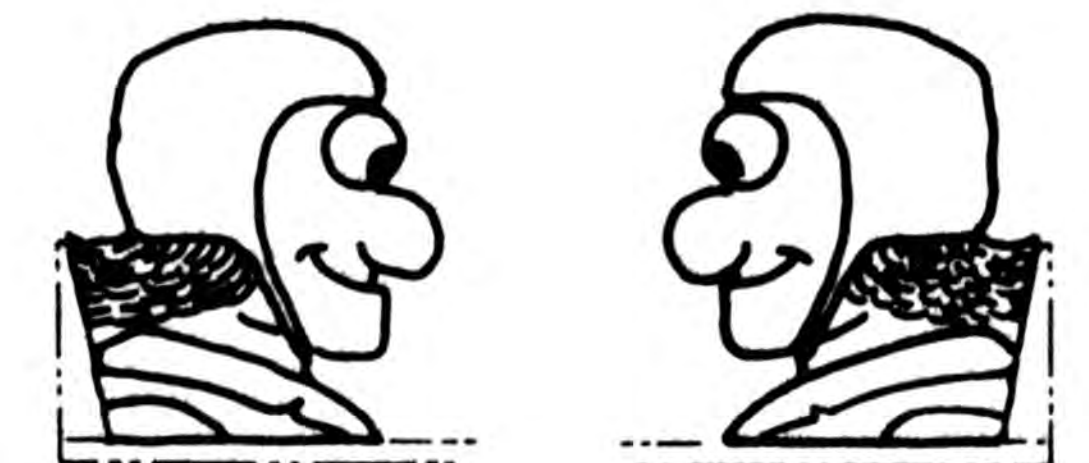

FLYING NOTES—
1-Model flies best if kept between wingtips.
2-Before flying:
a. Insure heavily.
b. Dig foxhole.
c. Notify the Pentagon.

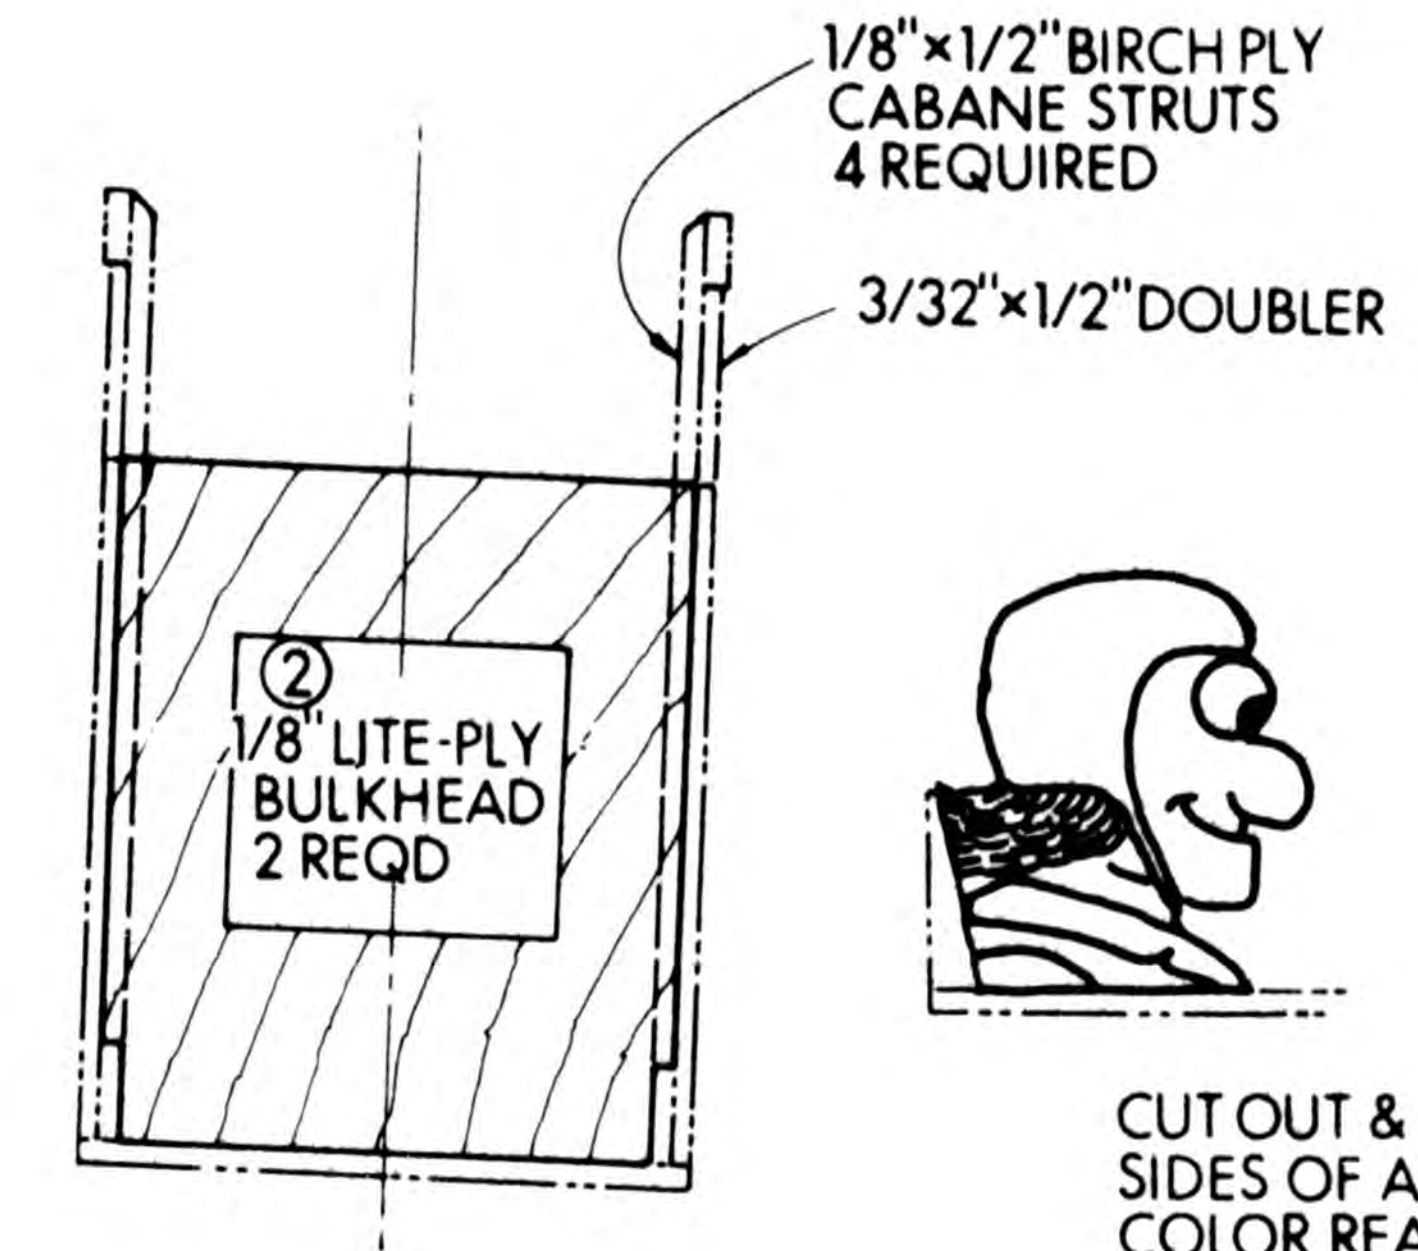

AN ALMOST SORT-OF-GENUINE, STAND-WAY-OFF SCALE OF-

THE REAL THING~MOCK TWO

1975-1976


1973 1974 1982

© RCM ALL COMMERCIAL RIGHTS RESERVED




SHEET 1 OF 2


Plan No. 877

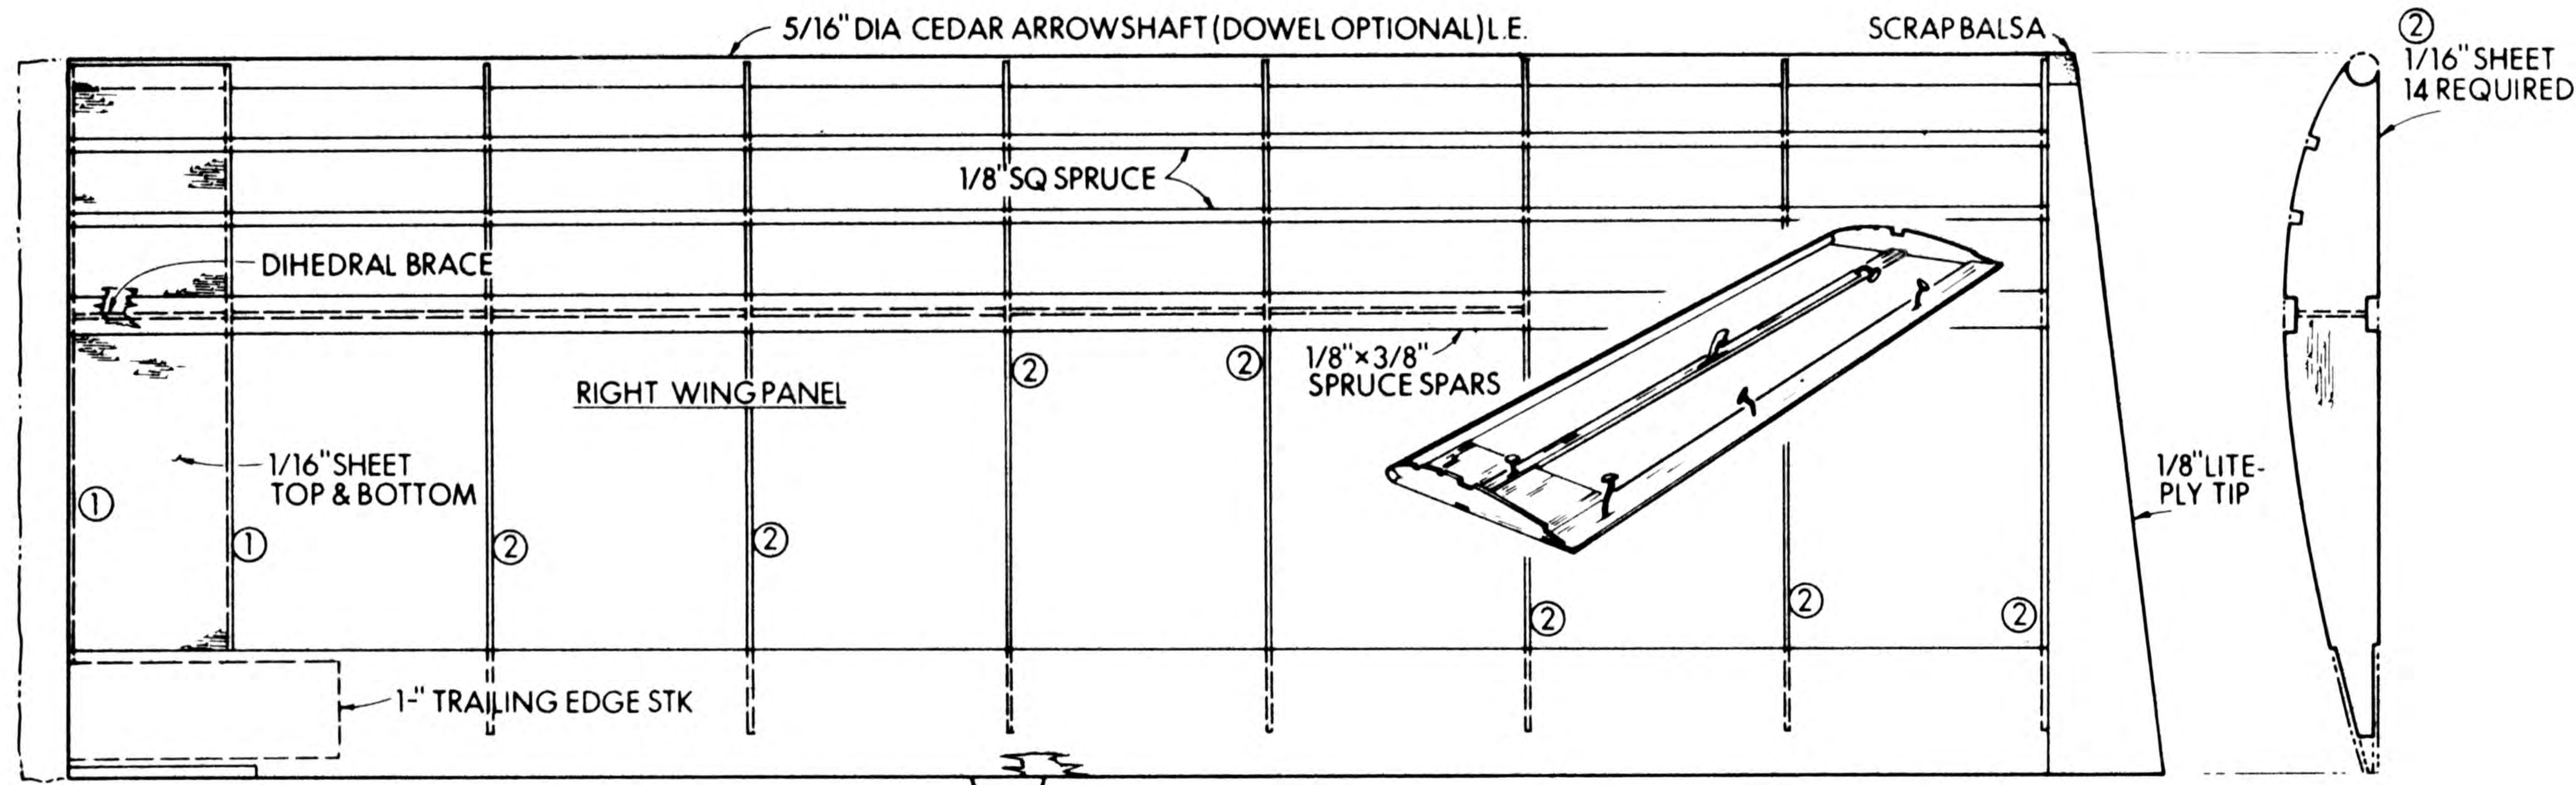

WHEN COVERING WING PANELS (AFTER ASSEMBLY) OVERLAP THE COVERING MATERIAL AT LEAST 1/2" ON THE TOP & BOTTOM SURFACES AT THE CENTER.

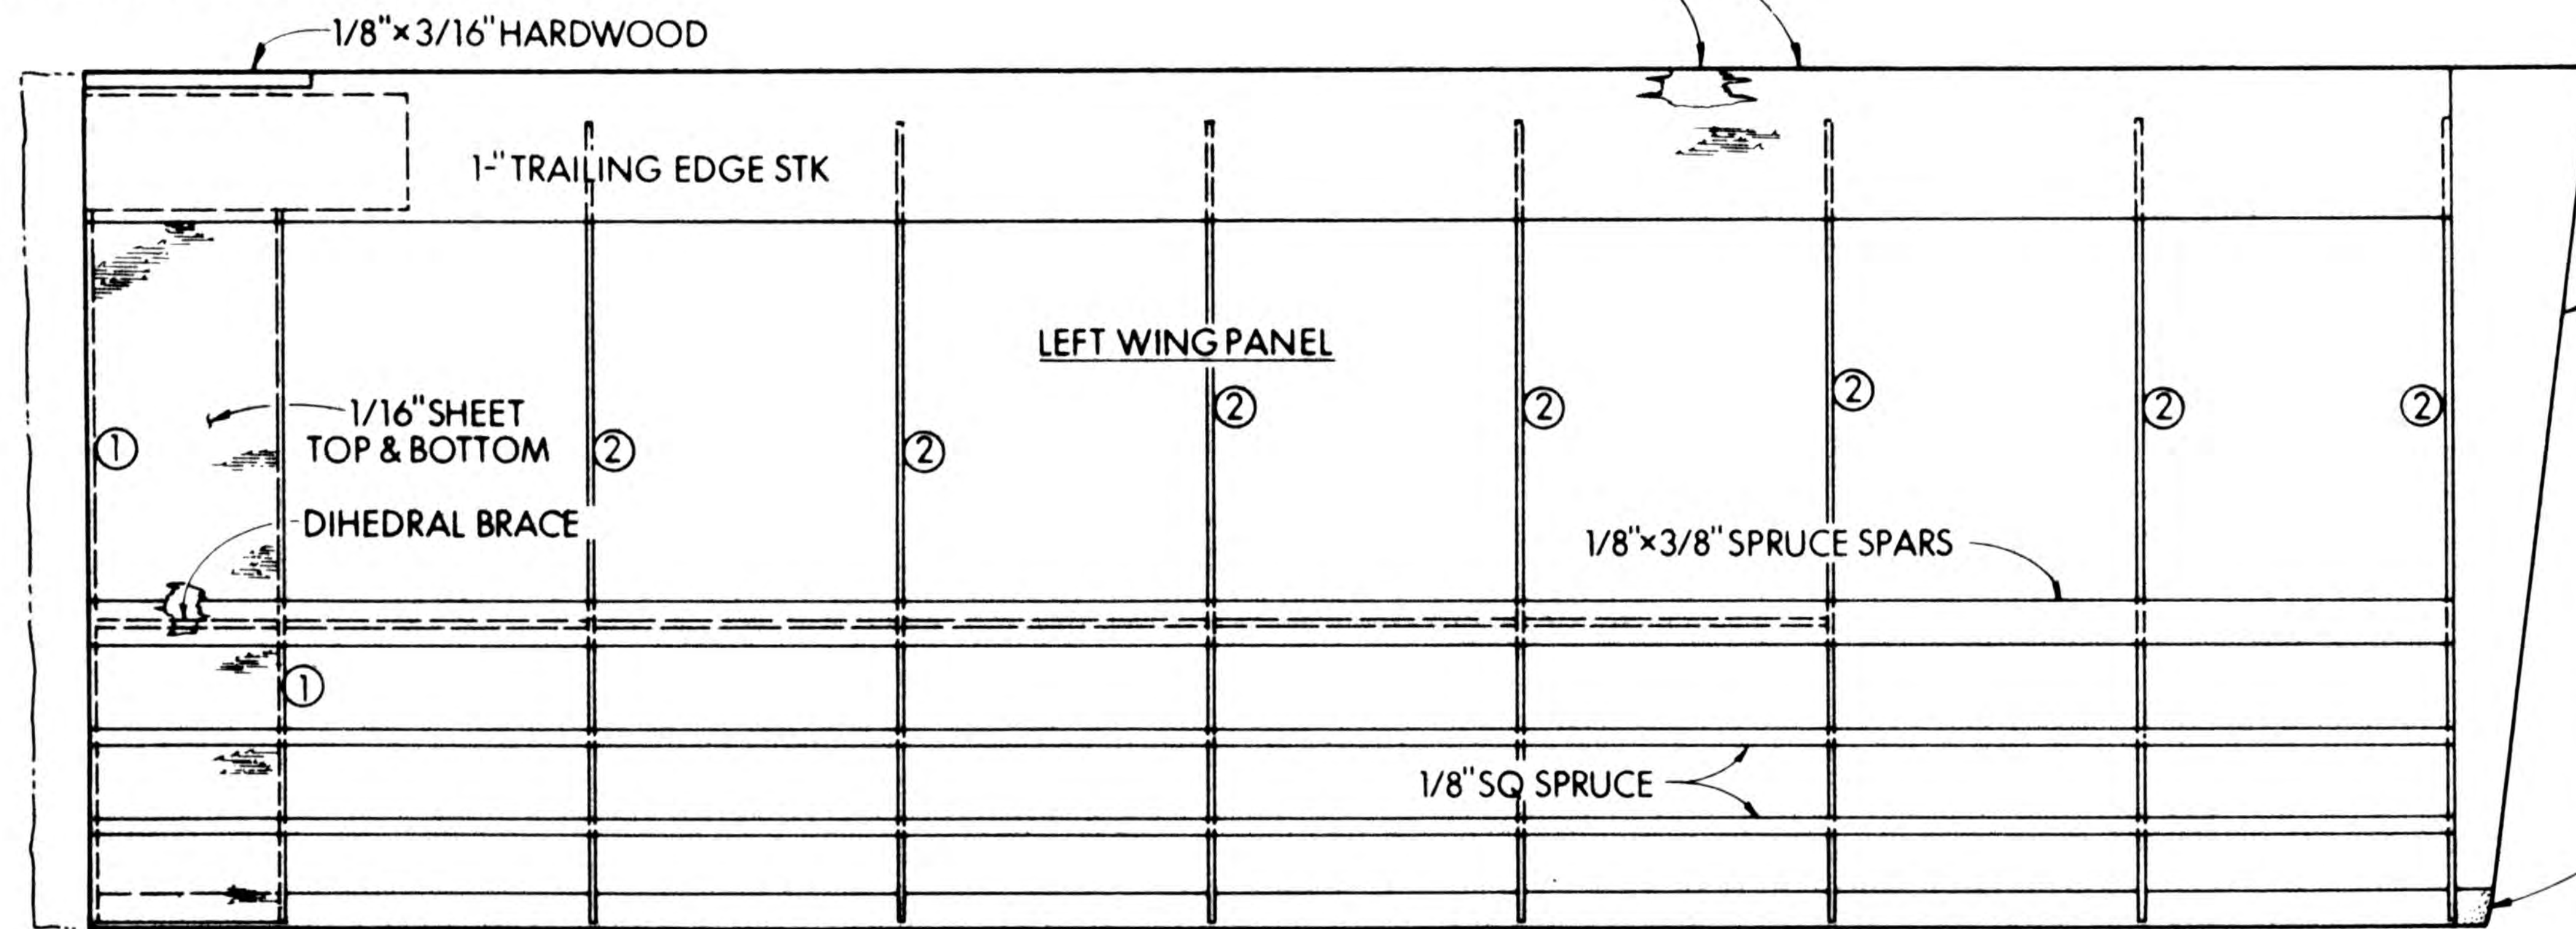

① 1/16" SHT 4 REQD

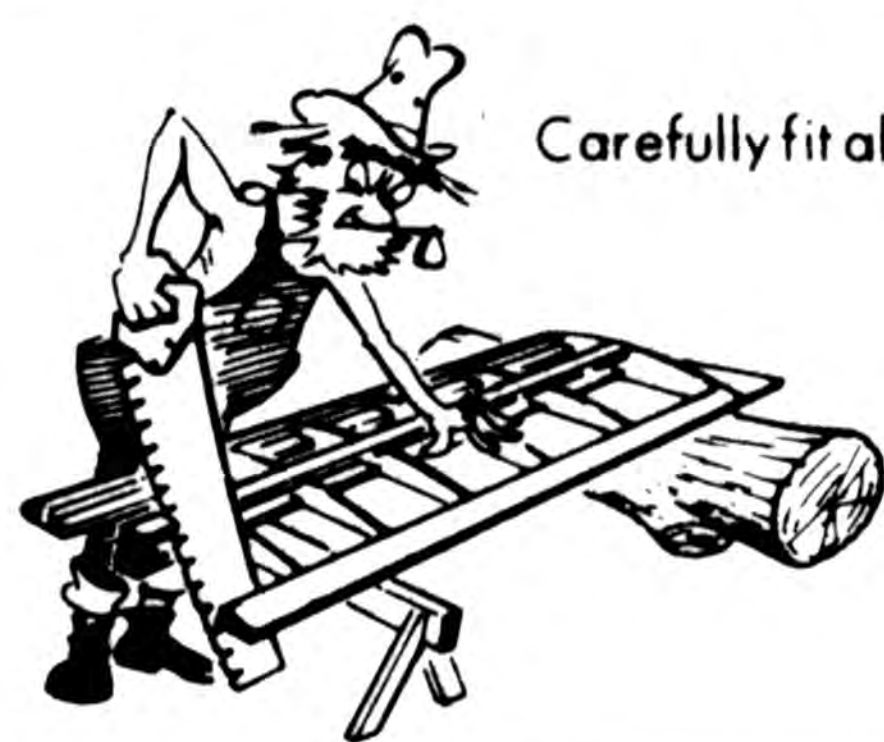

Carefully fit all parts, as shown.




ALMOST SORT-OF-GENUINE STAND-WAY-OFF SCALE OF

THE REAL THING~MOCK TWO

DIHEDRAL BRACE
1/16" SHEET
2 REQUIRED
(VERTICAL GRAIN)

GLUE PLY TIP FLUSH WITH
BOTTOM OF TIP RIB

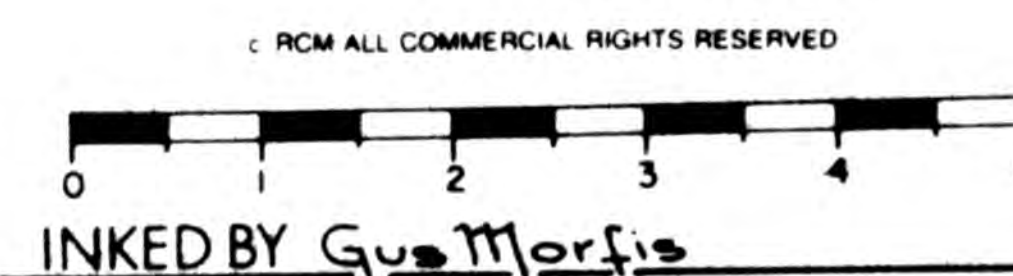

② 1/16" SHEET
14 REQUIRED

ROUND OFF
LEADING AND
TRAILING EDGE



Remember - "Neatness counts!"

ELEVATOR THROW
1/4" UP &
1/4" DOWN

1/8" x 3/16" HARDWOOD

1/8" SHEET
STABILIZER &
ELEVATOR

HINGE

SPAR WEBS
1/16" SHEET
10 REQUIRED
(VERTICAL GRAIN)

SCRAP Balsa

SHEET 2 OF 2

Plan No. 877 ②