






Spar Slot for 1mmx3








3mm Flat Carbon Spar









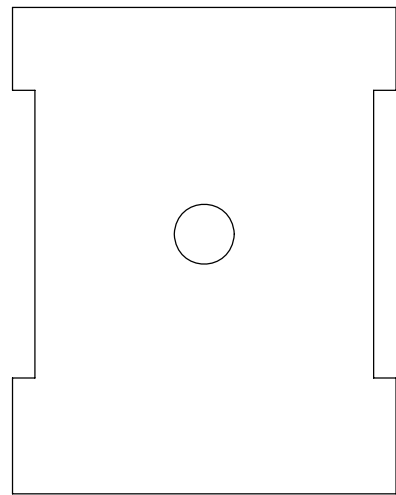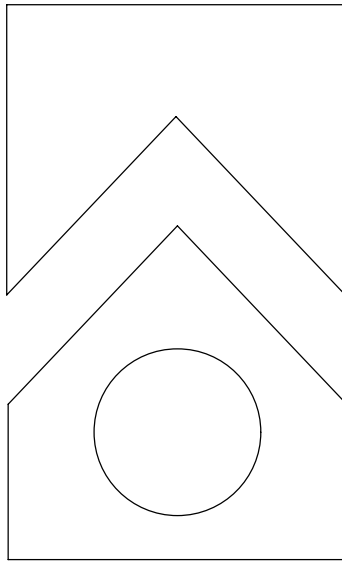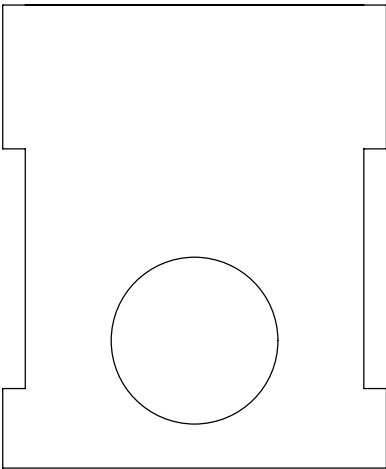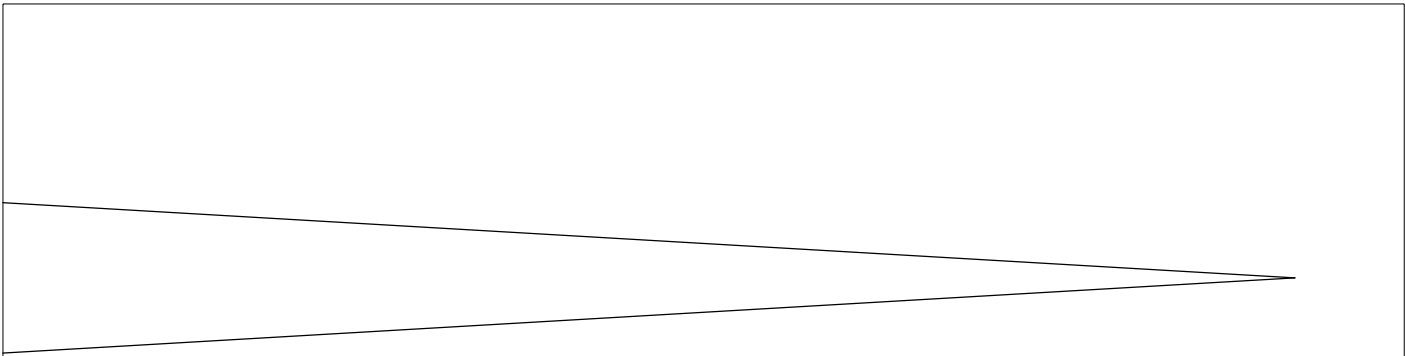


1/8" Lite Ply Firewall

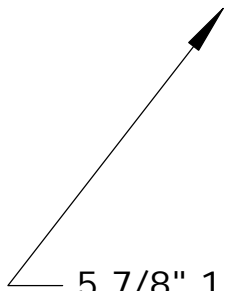

5 7/8" 1.5mm carbon rod gear leg

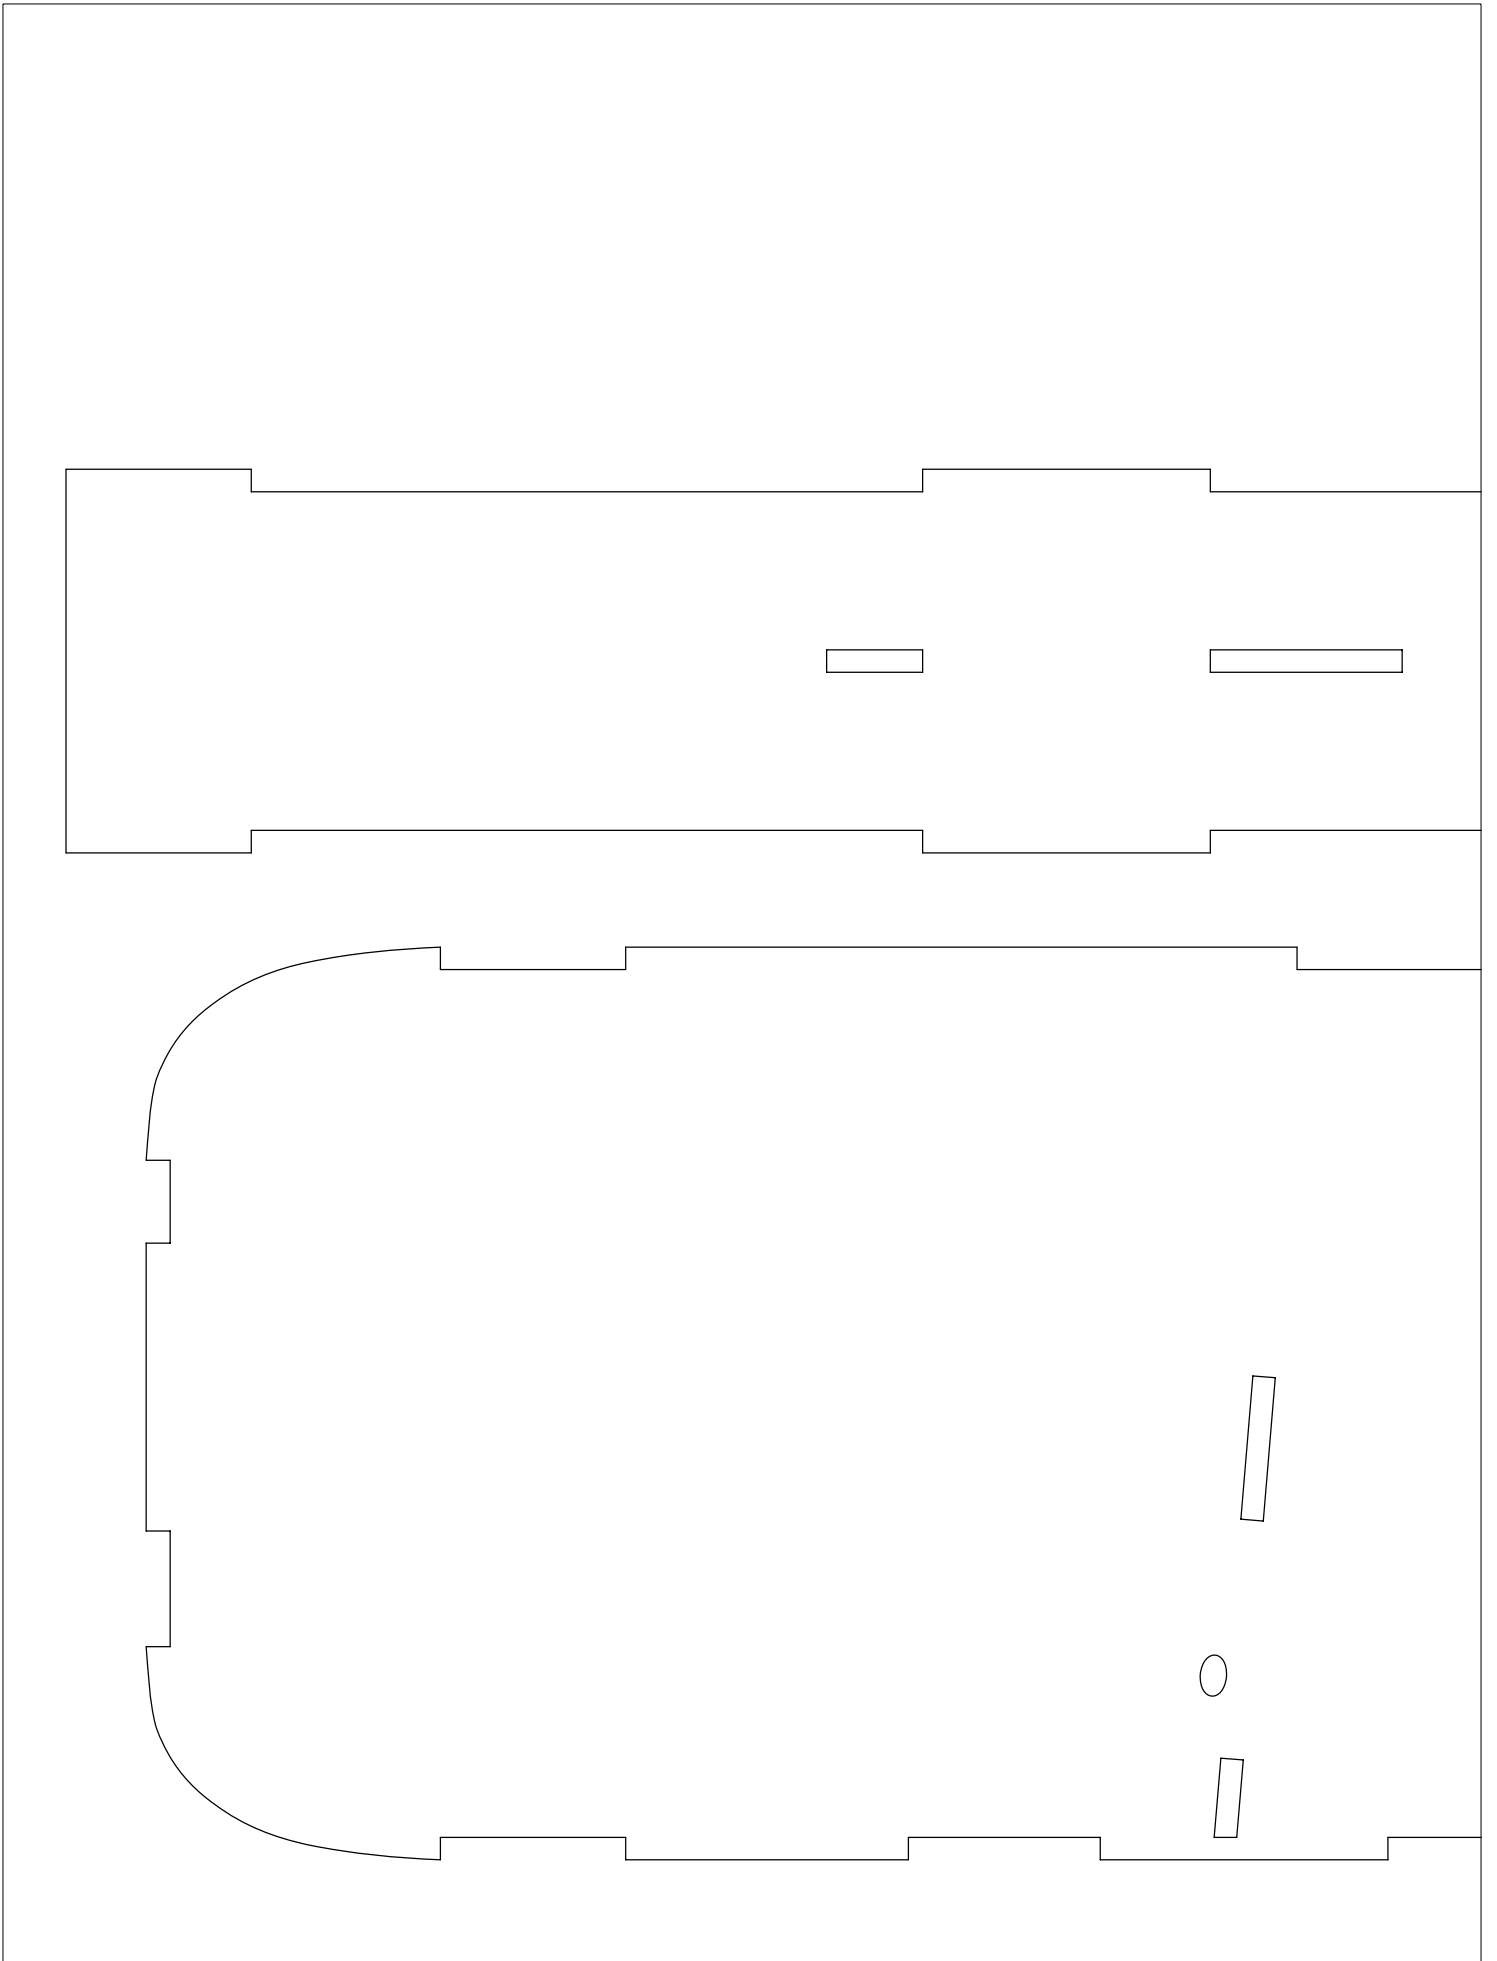




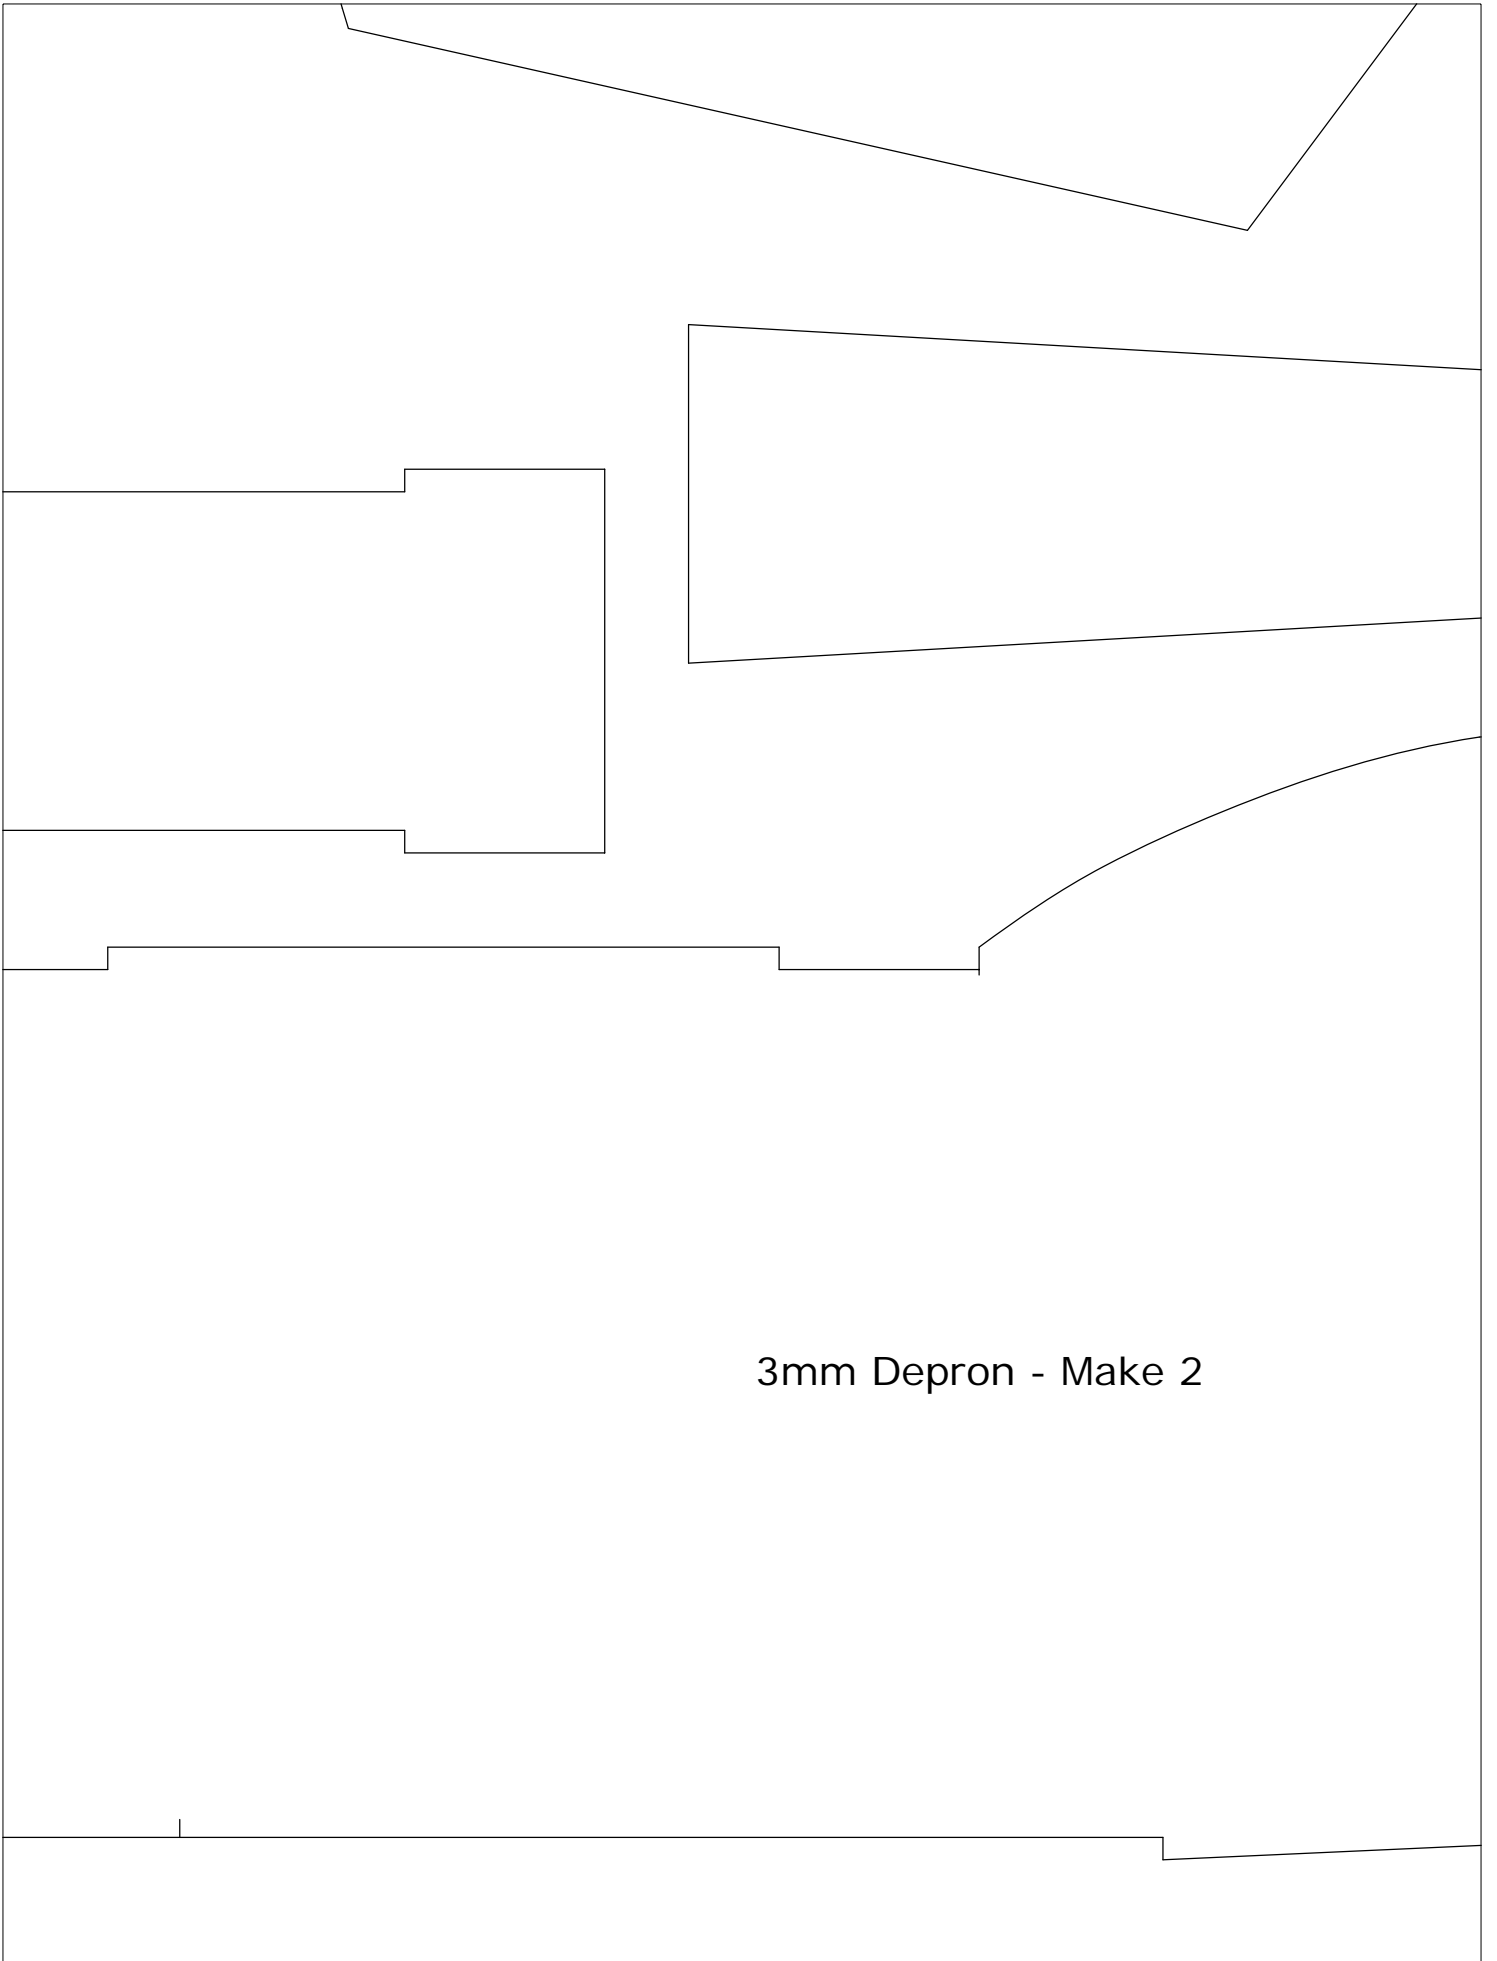


3mm Depron - Make 2



32" Pitts Python

3mm Depron - Make 2

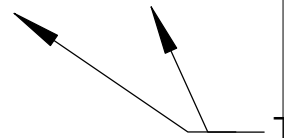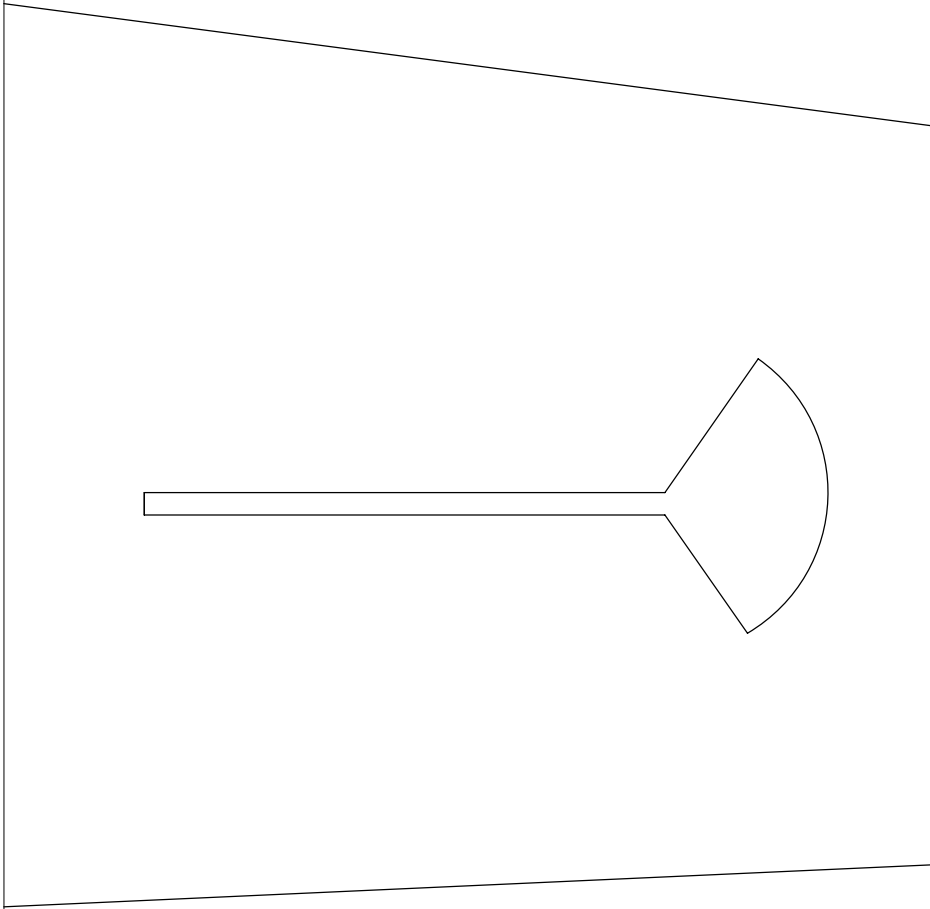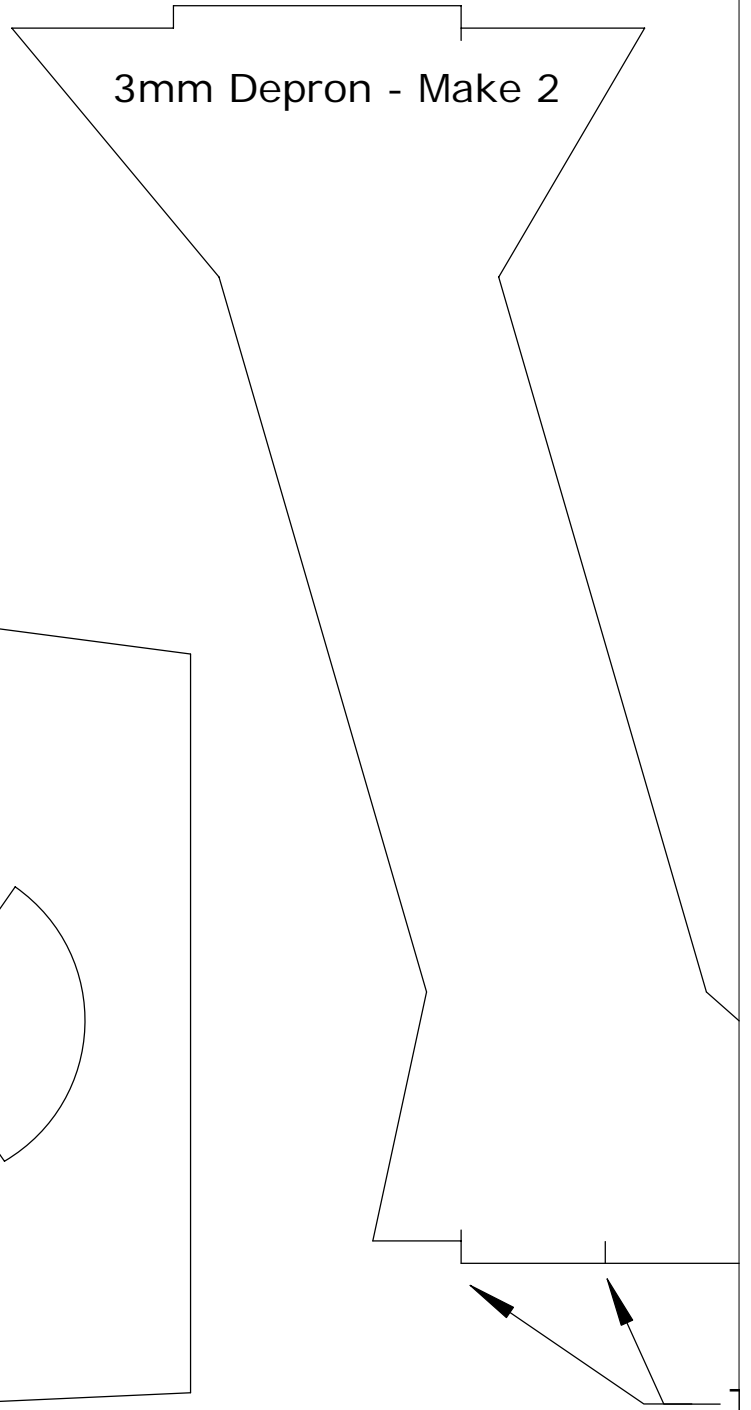


Nose Doubler




Top


3mm Depron - Make 2

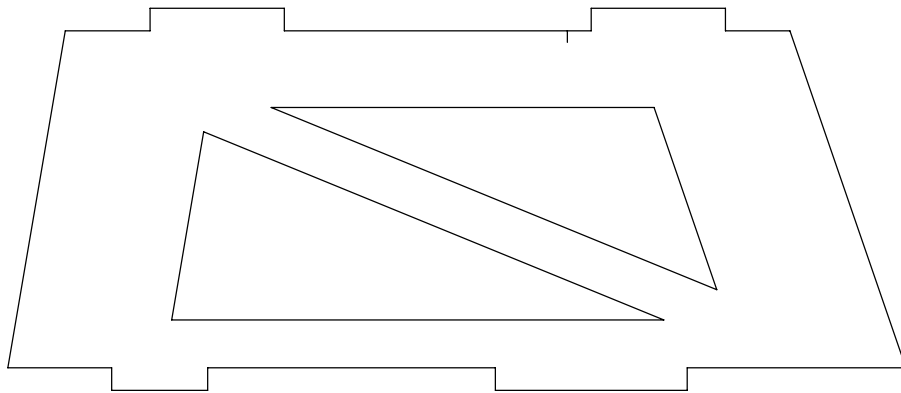



Tick marks (common) are for carbon placement

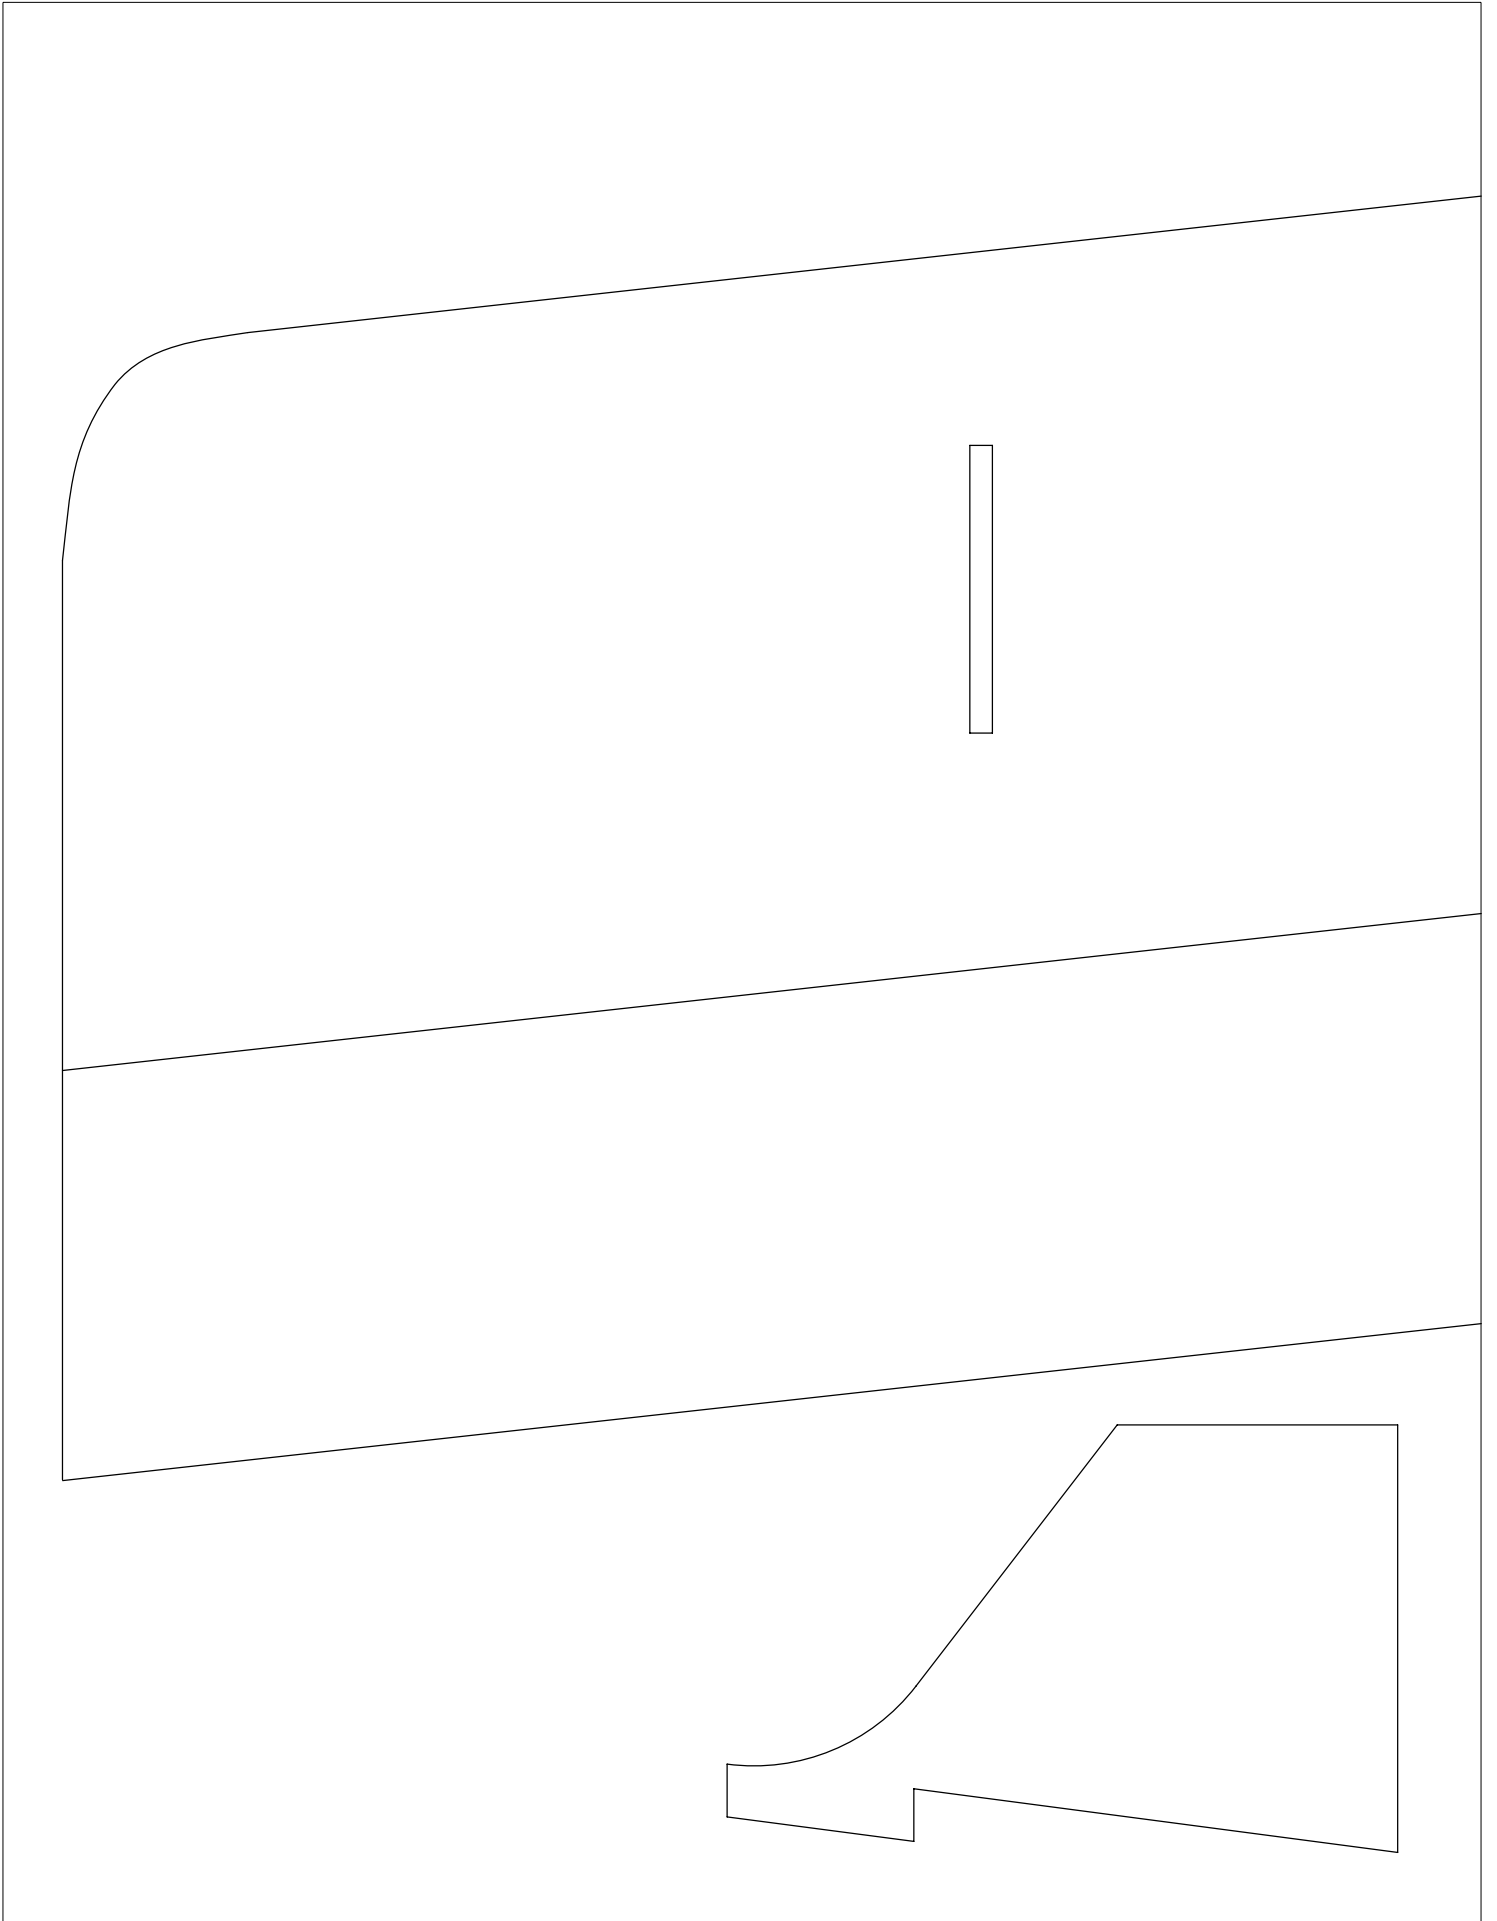




Both wings cut from a single piece of 3mm Depron

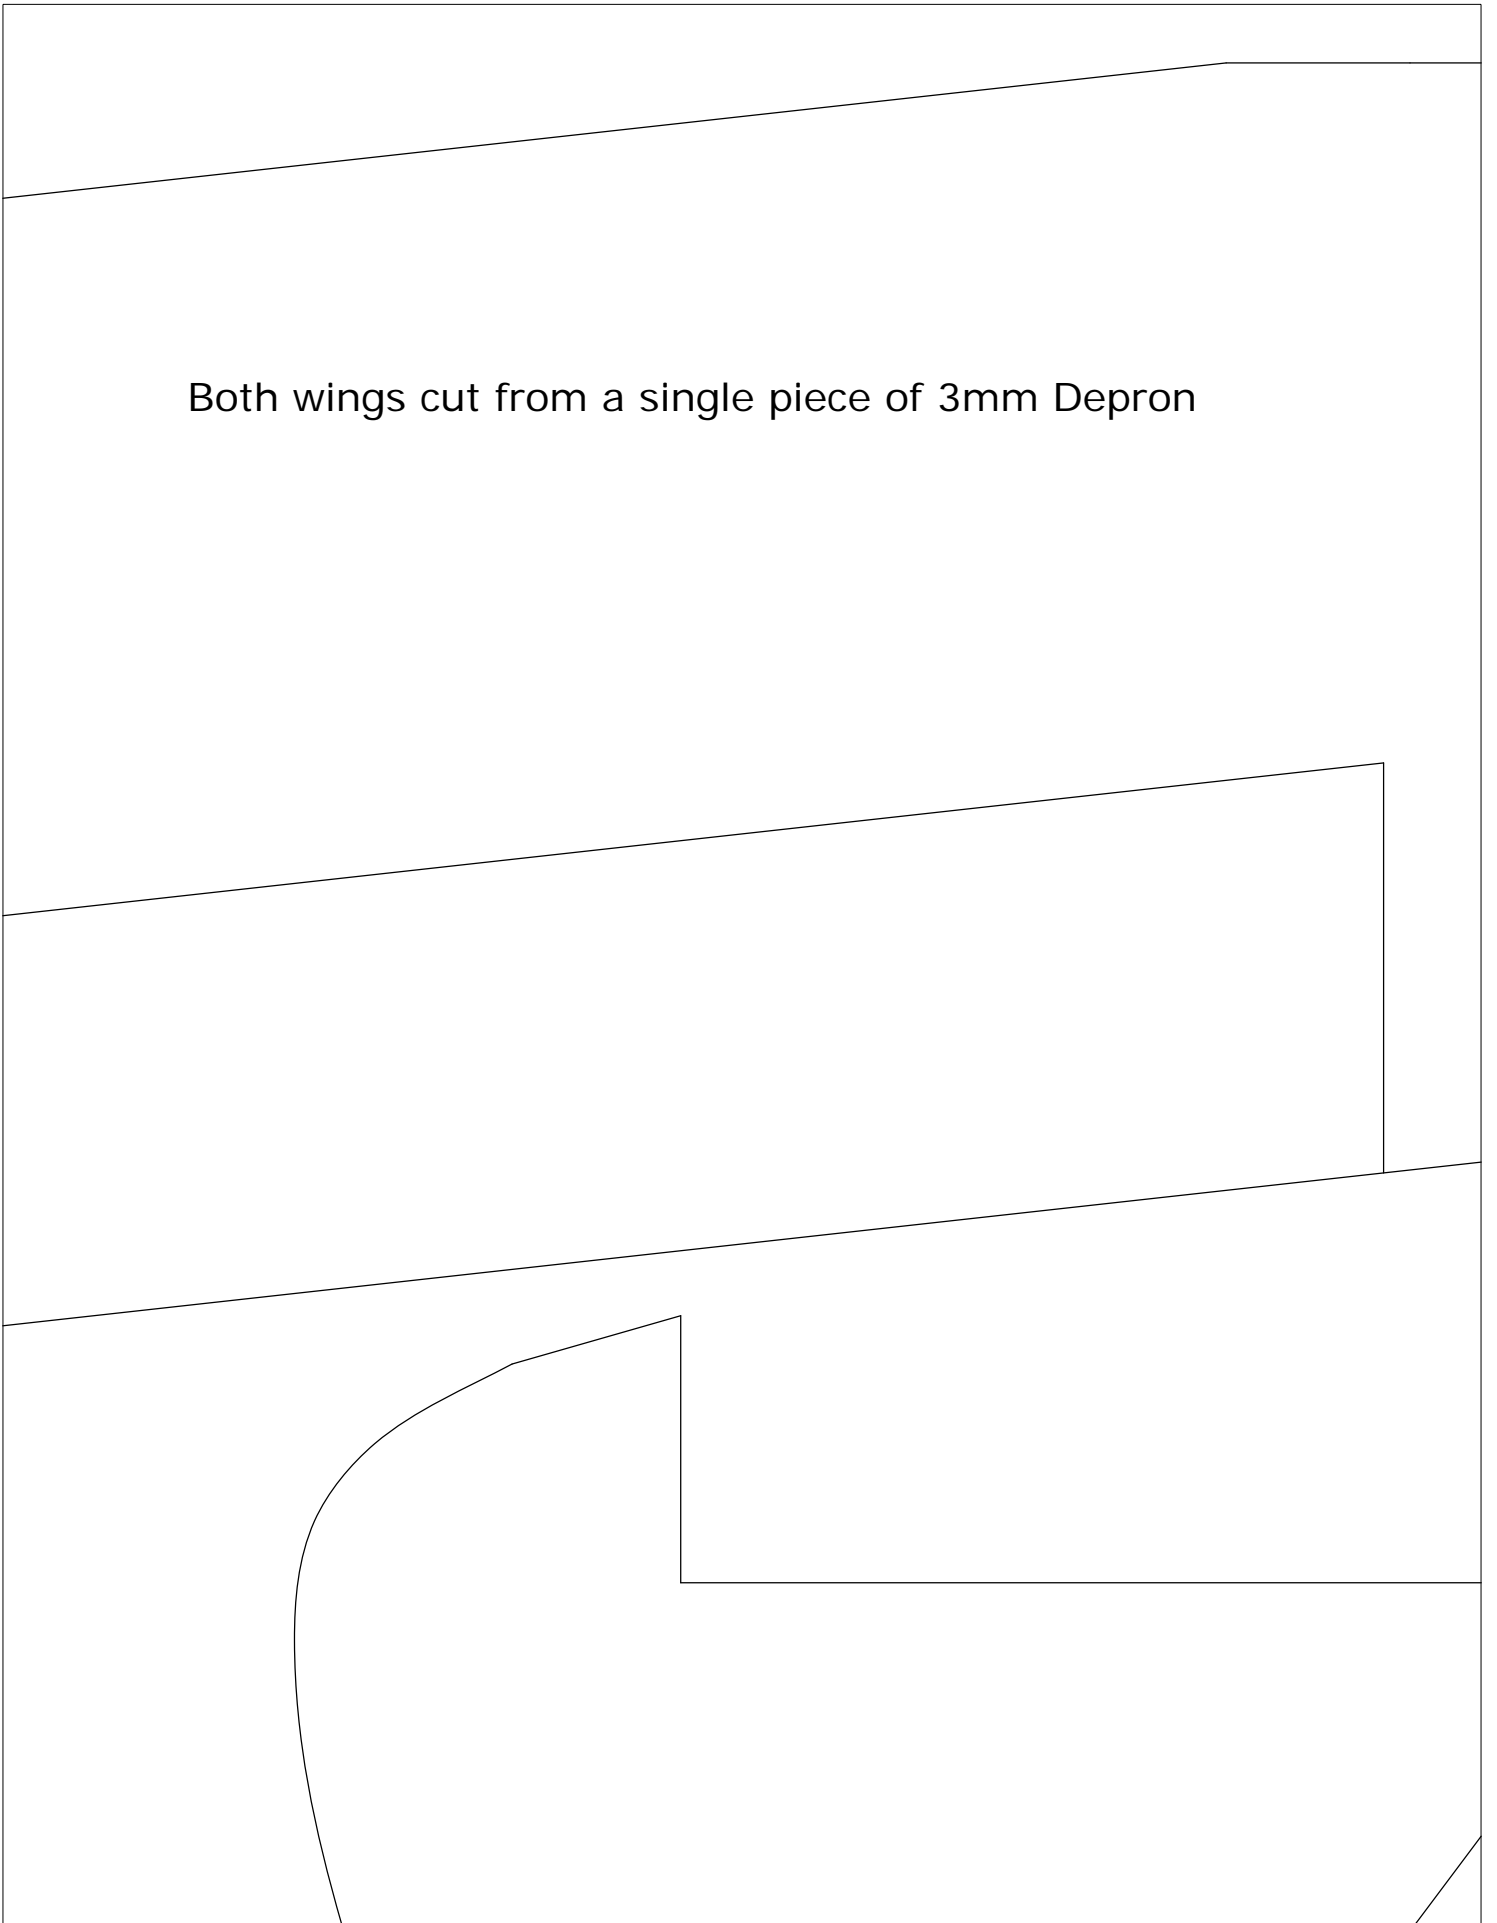


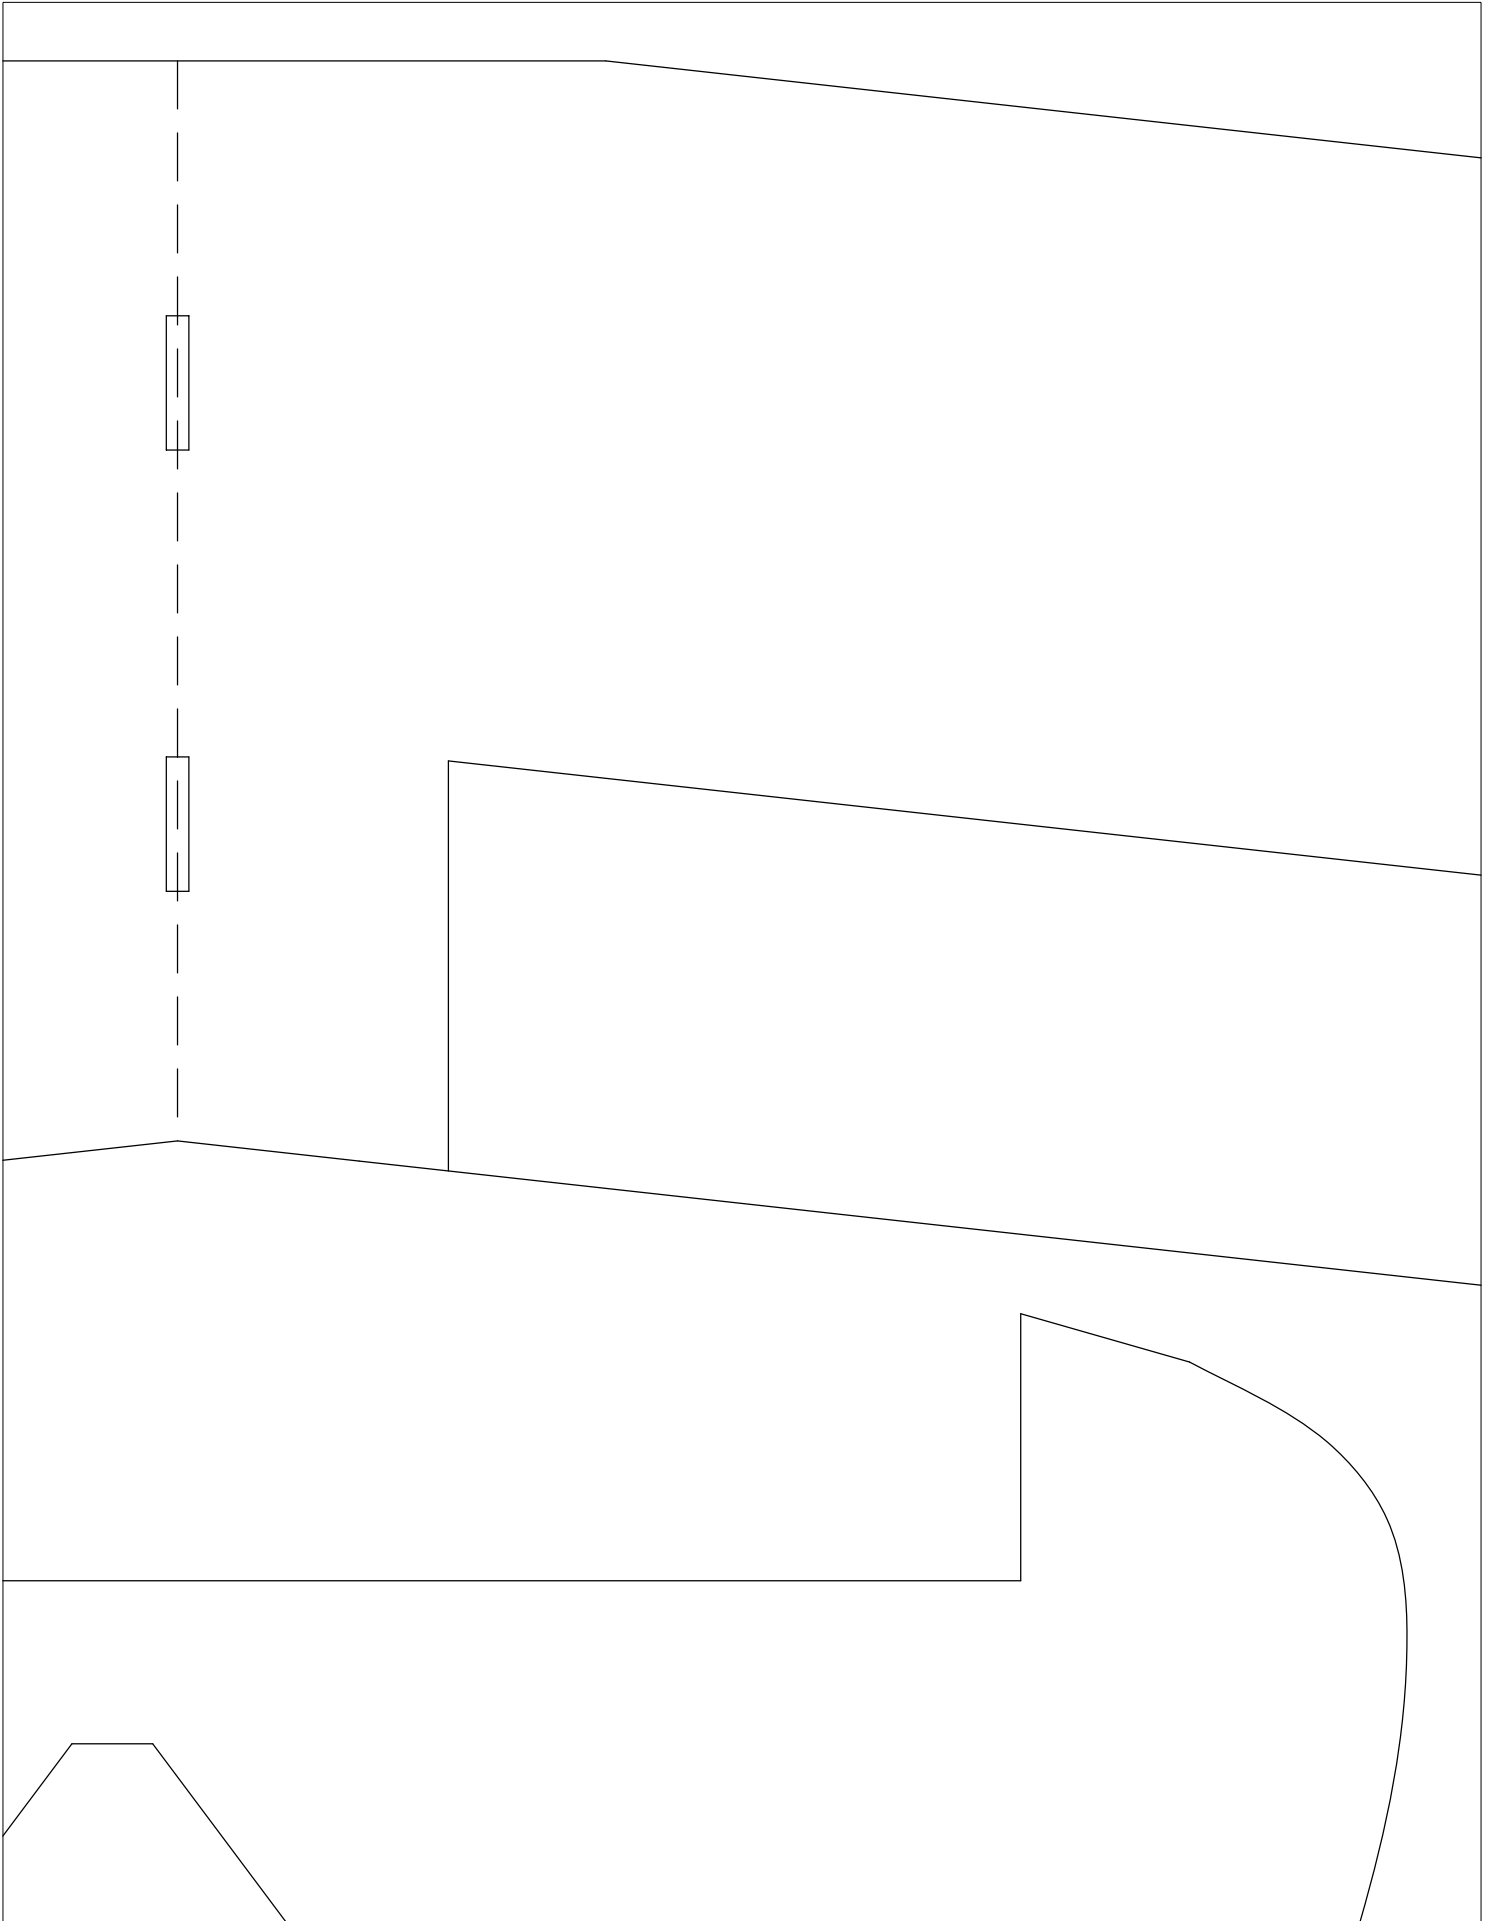


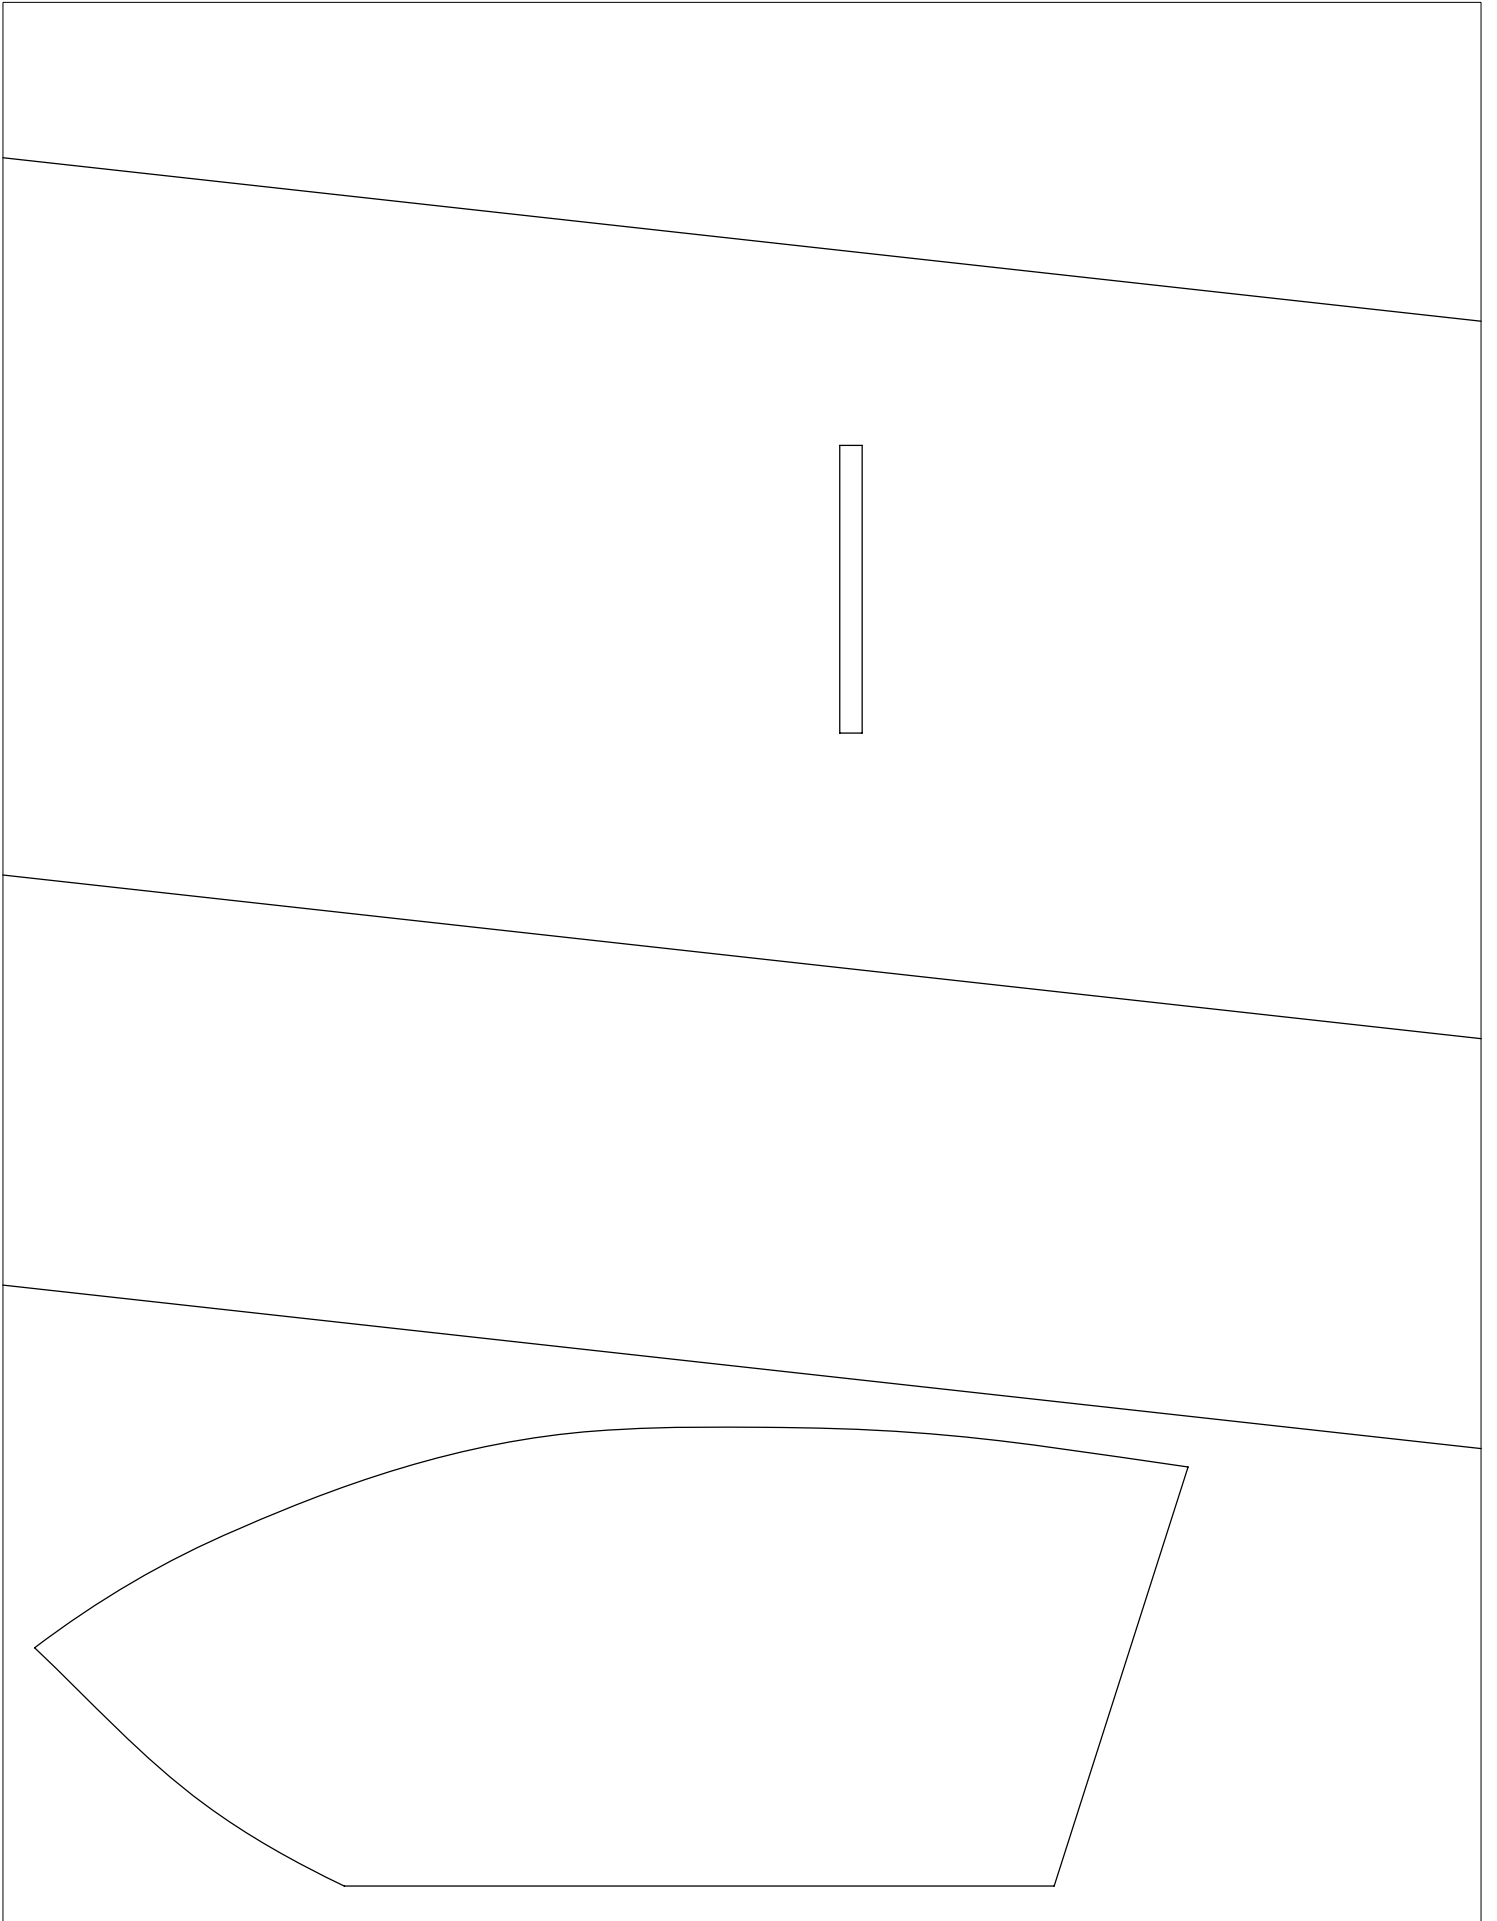

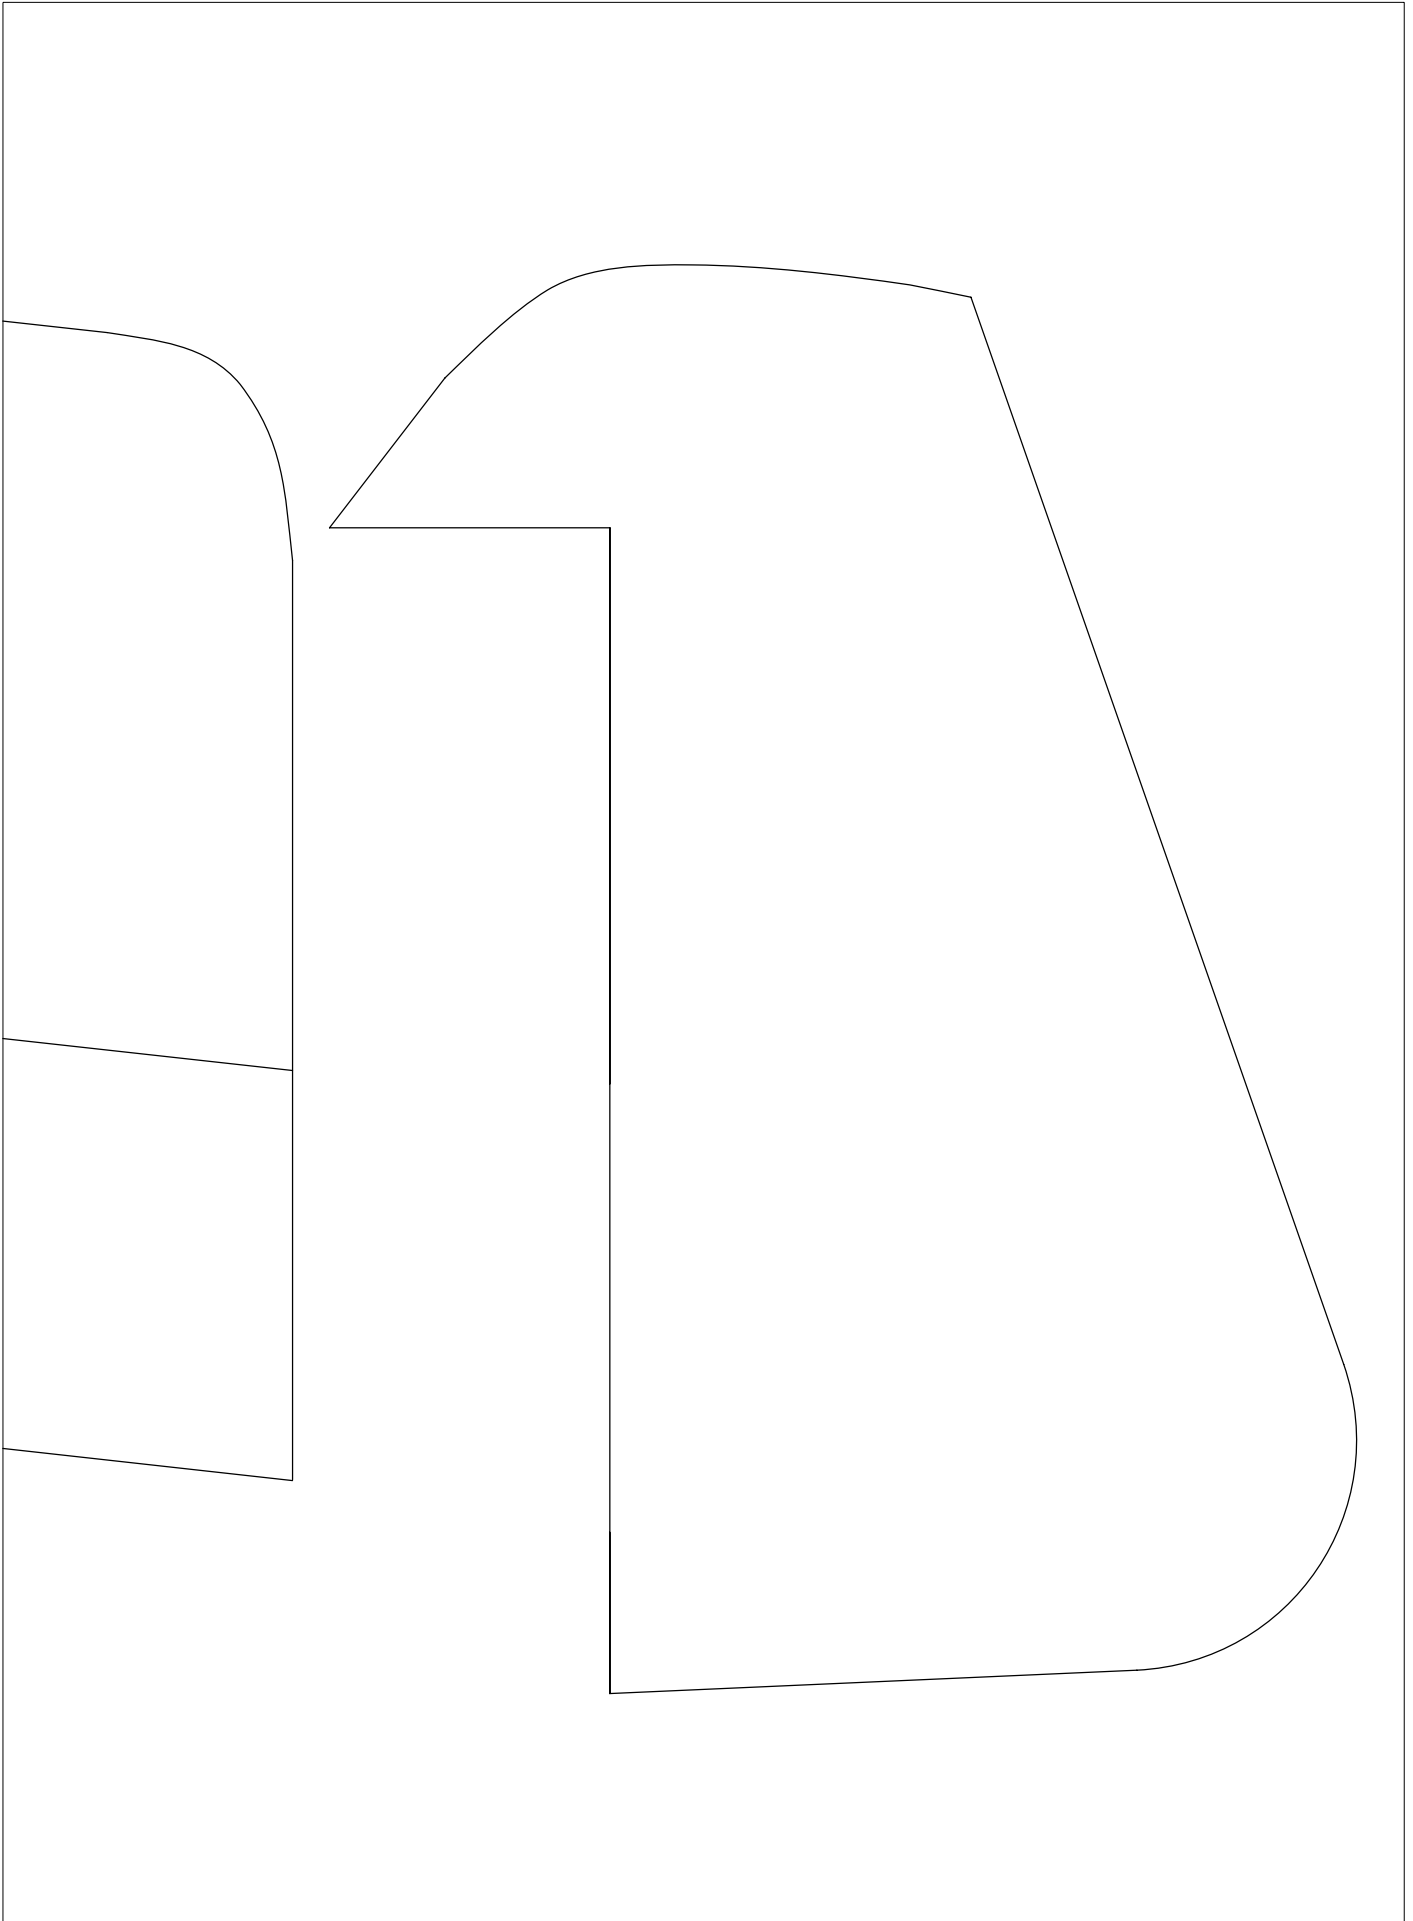

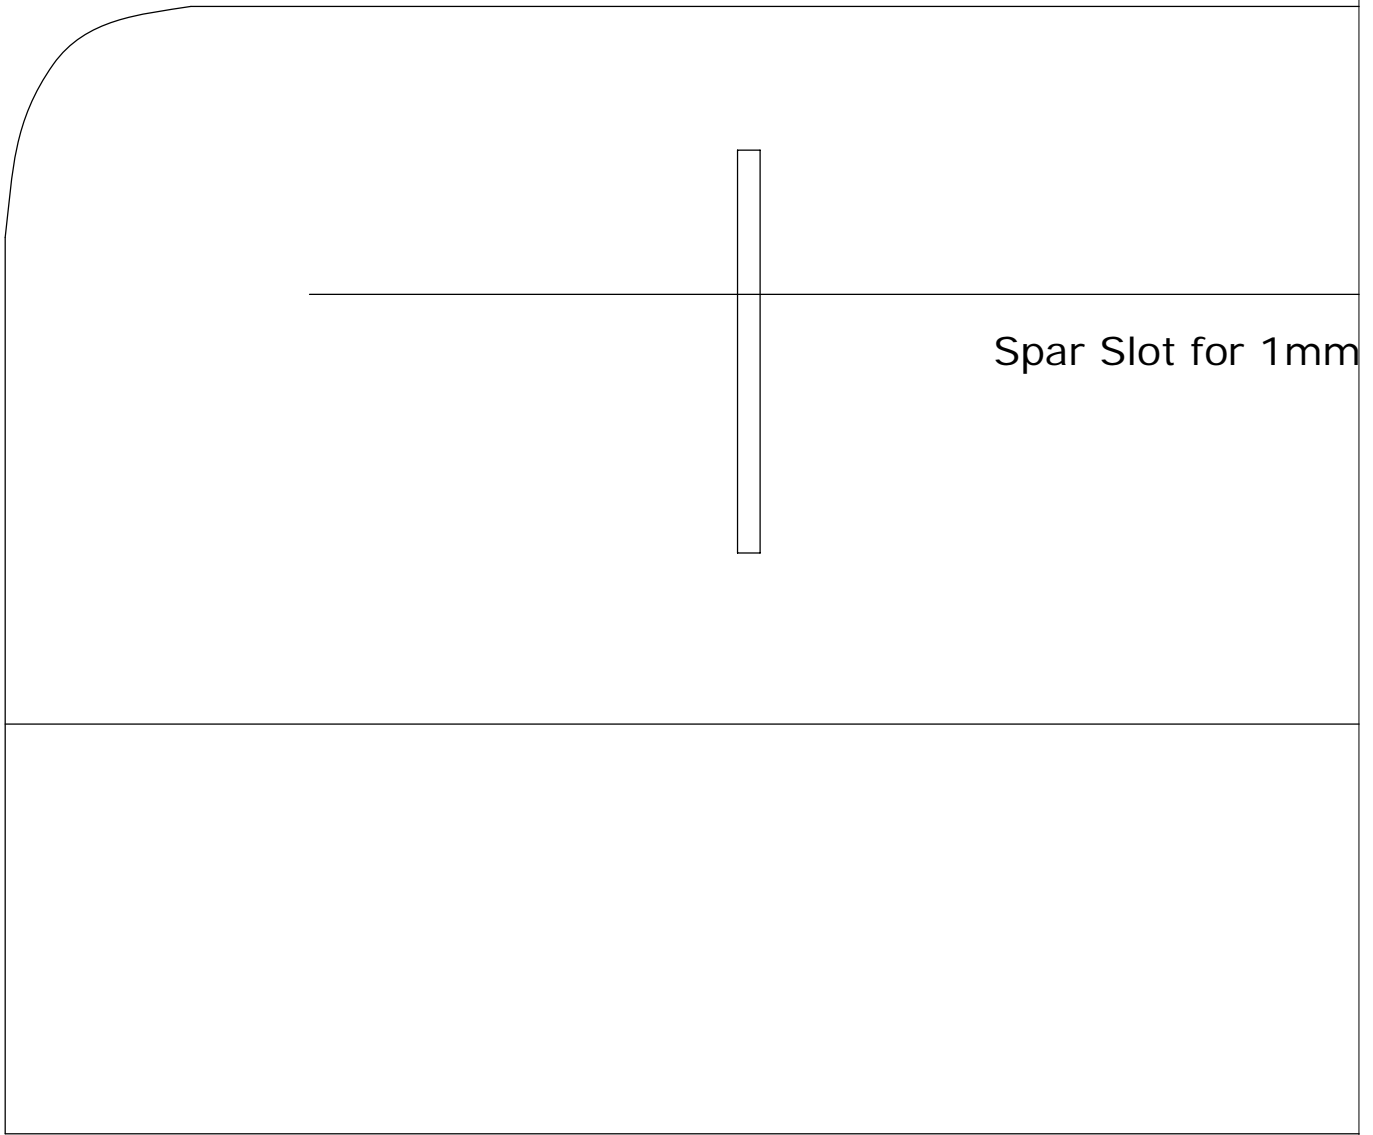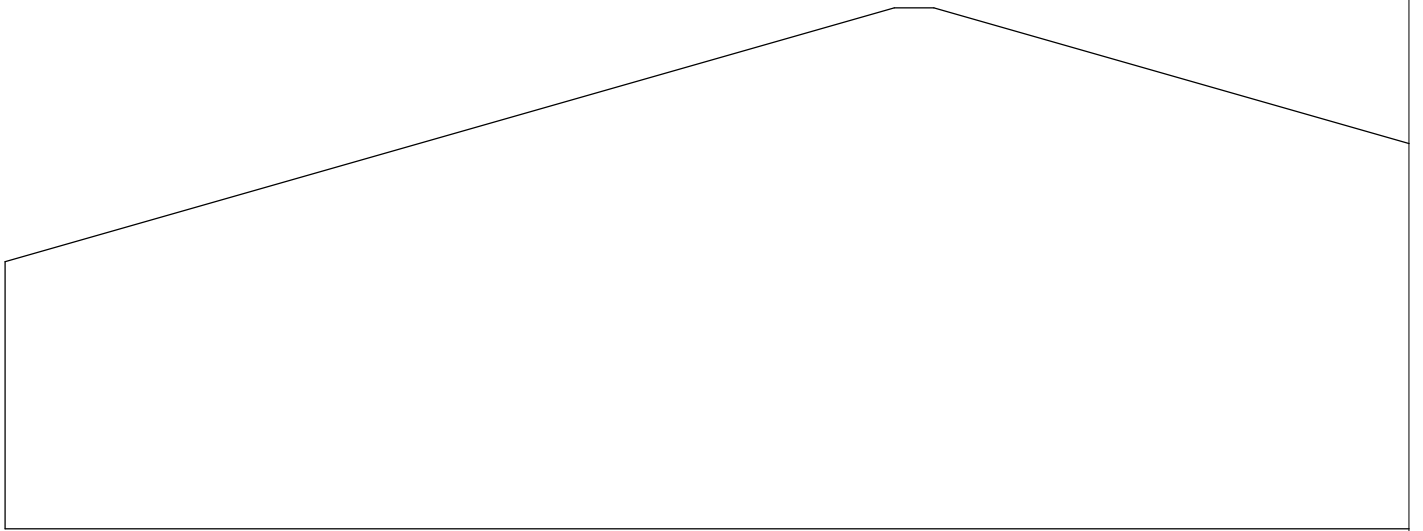



Spar Slot for 1mm

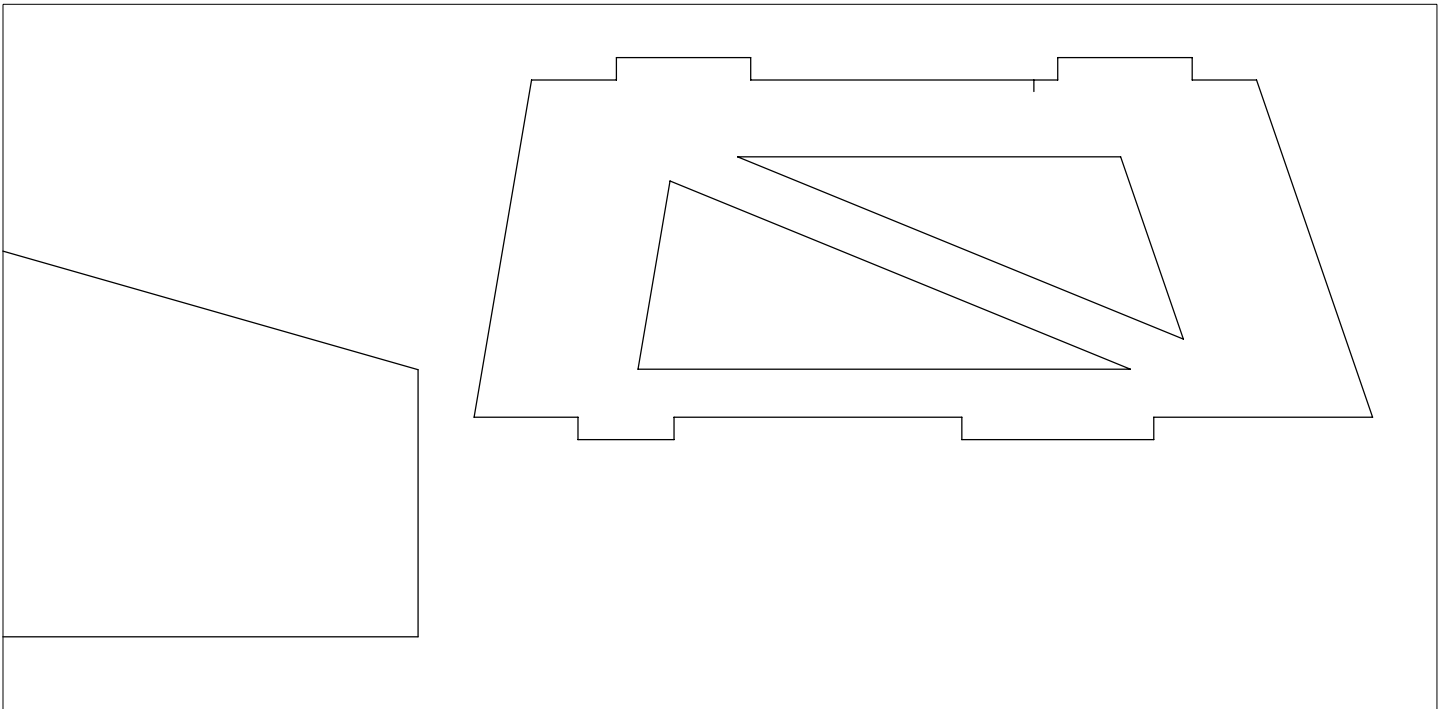





x3mm Flat Carbon Spar






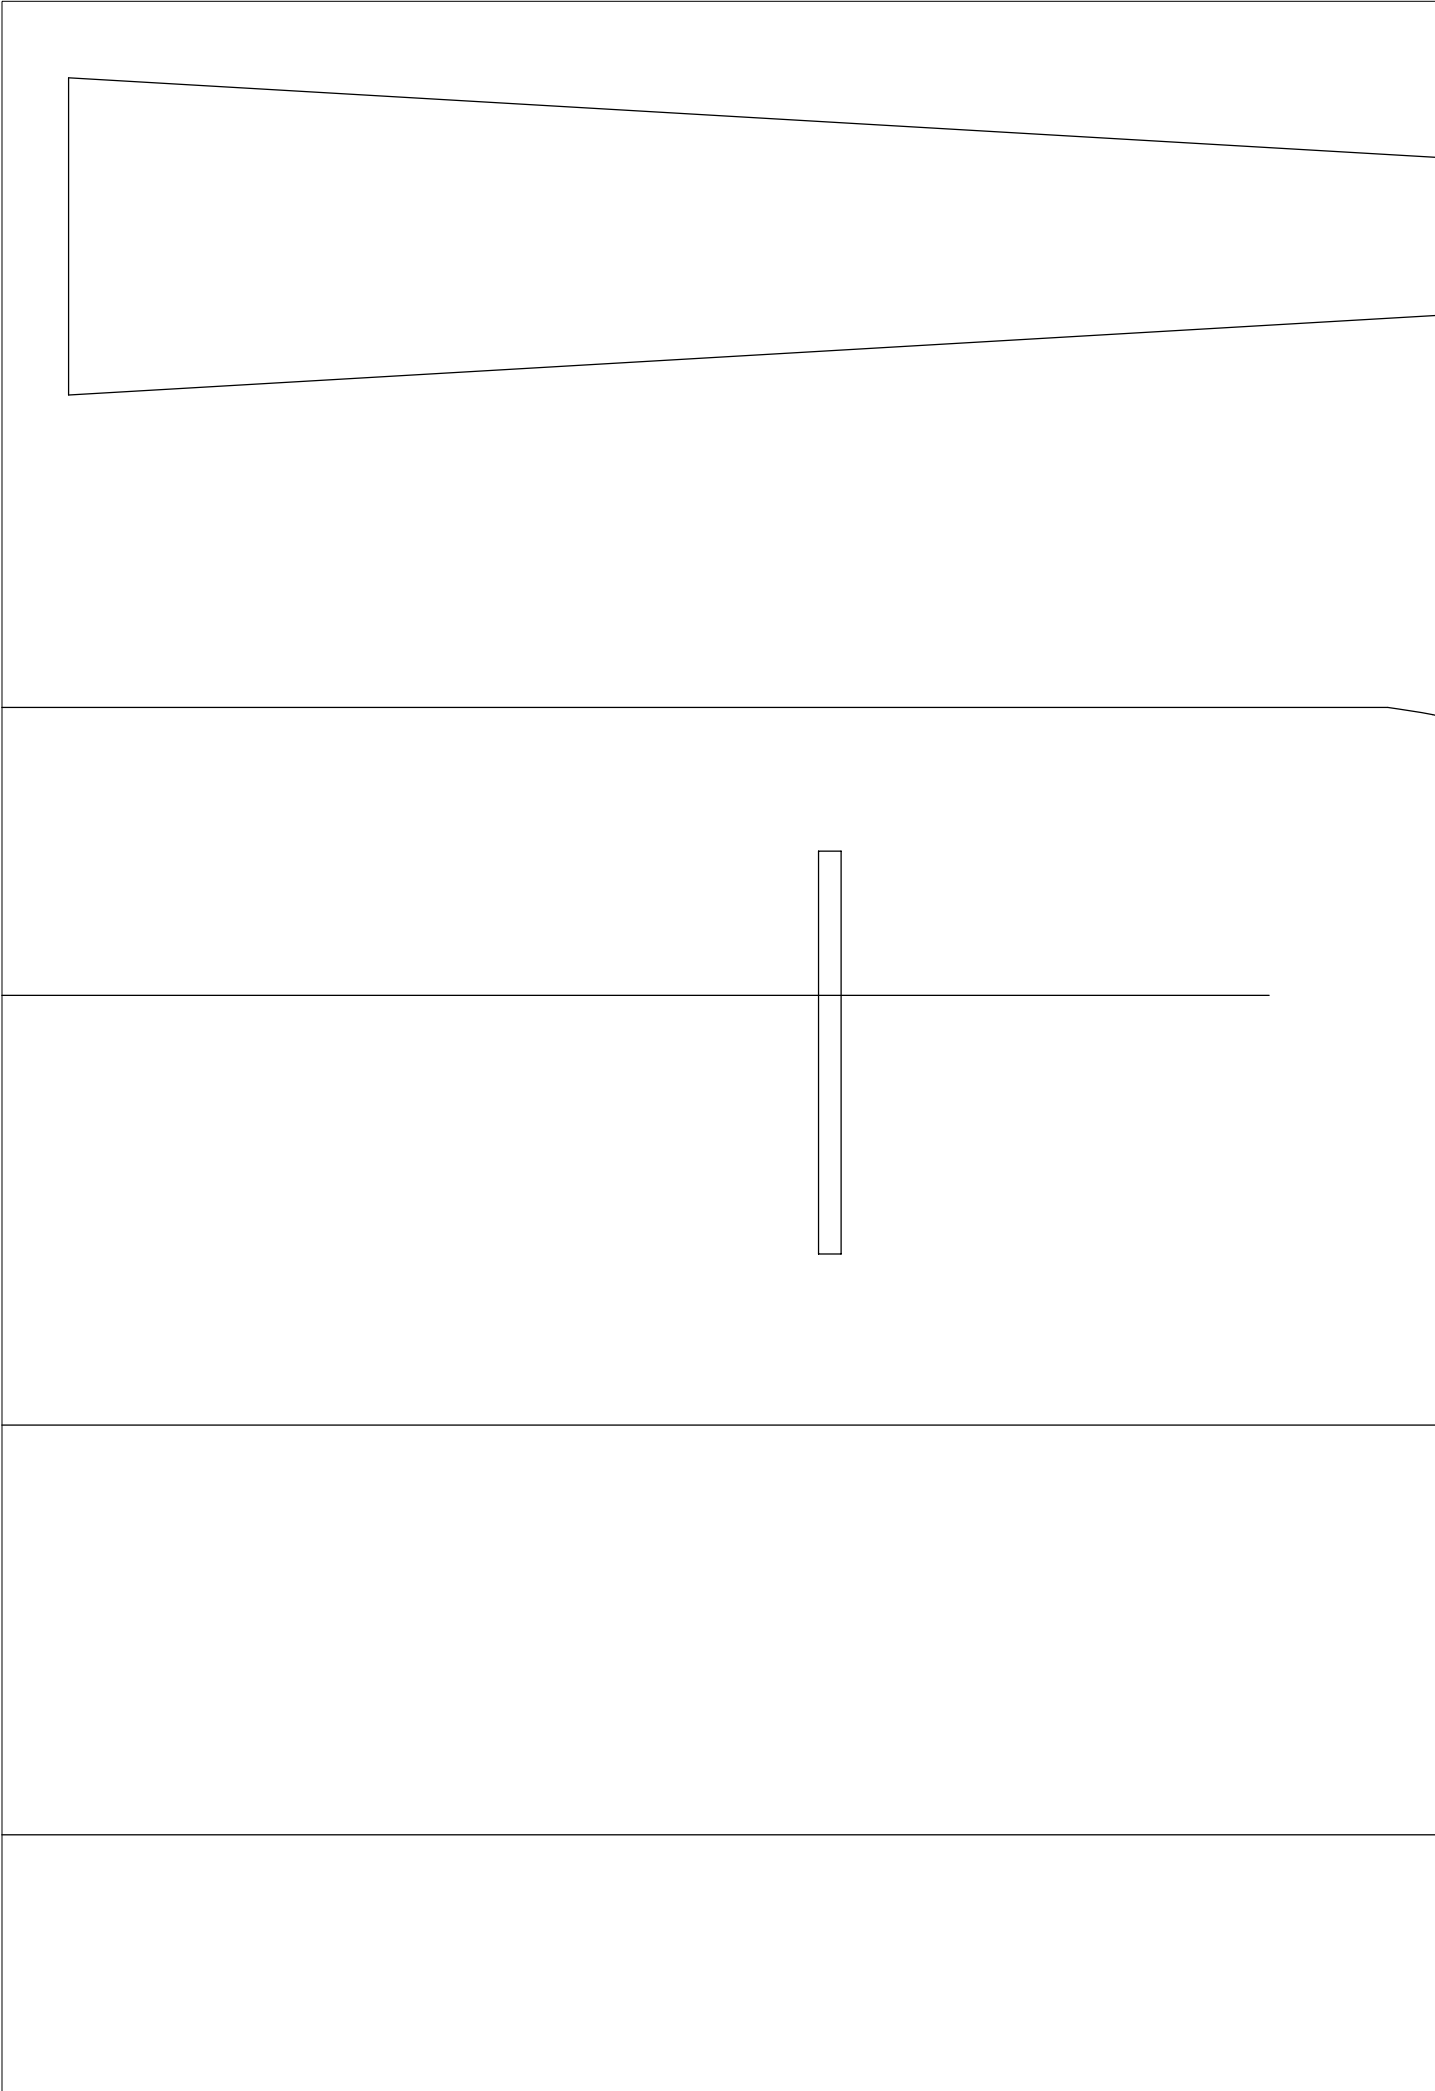

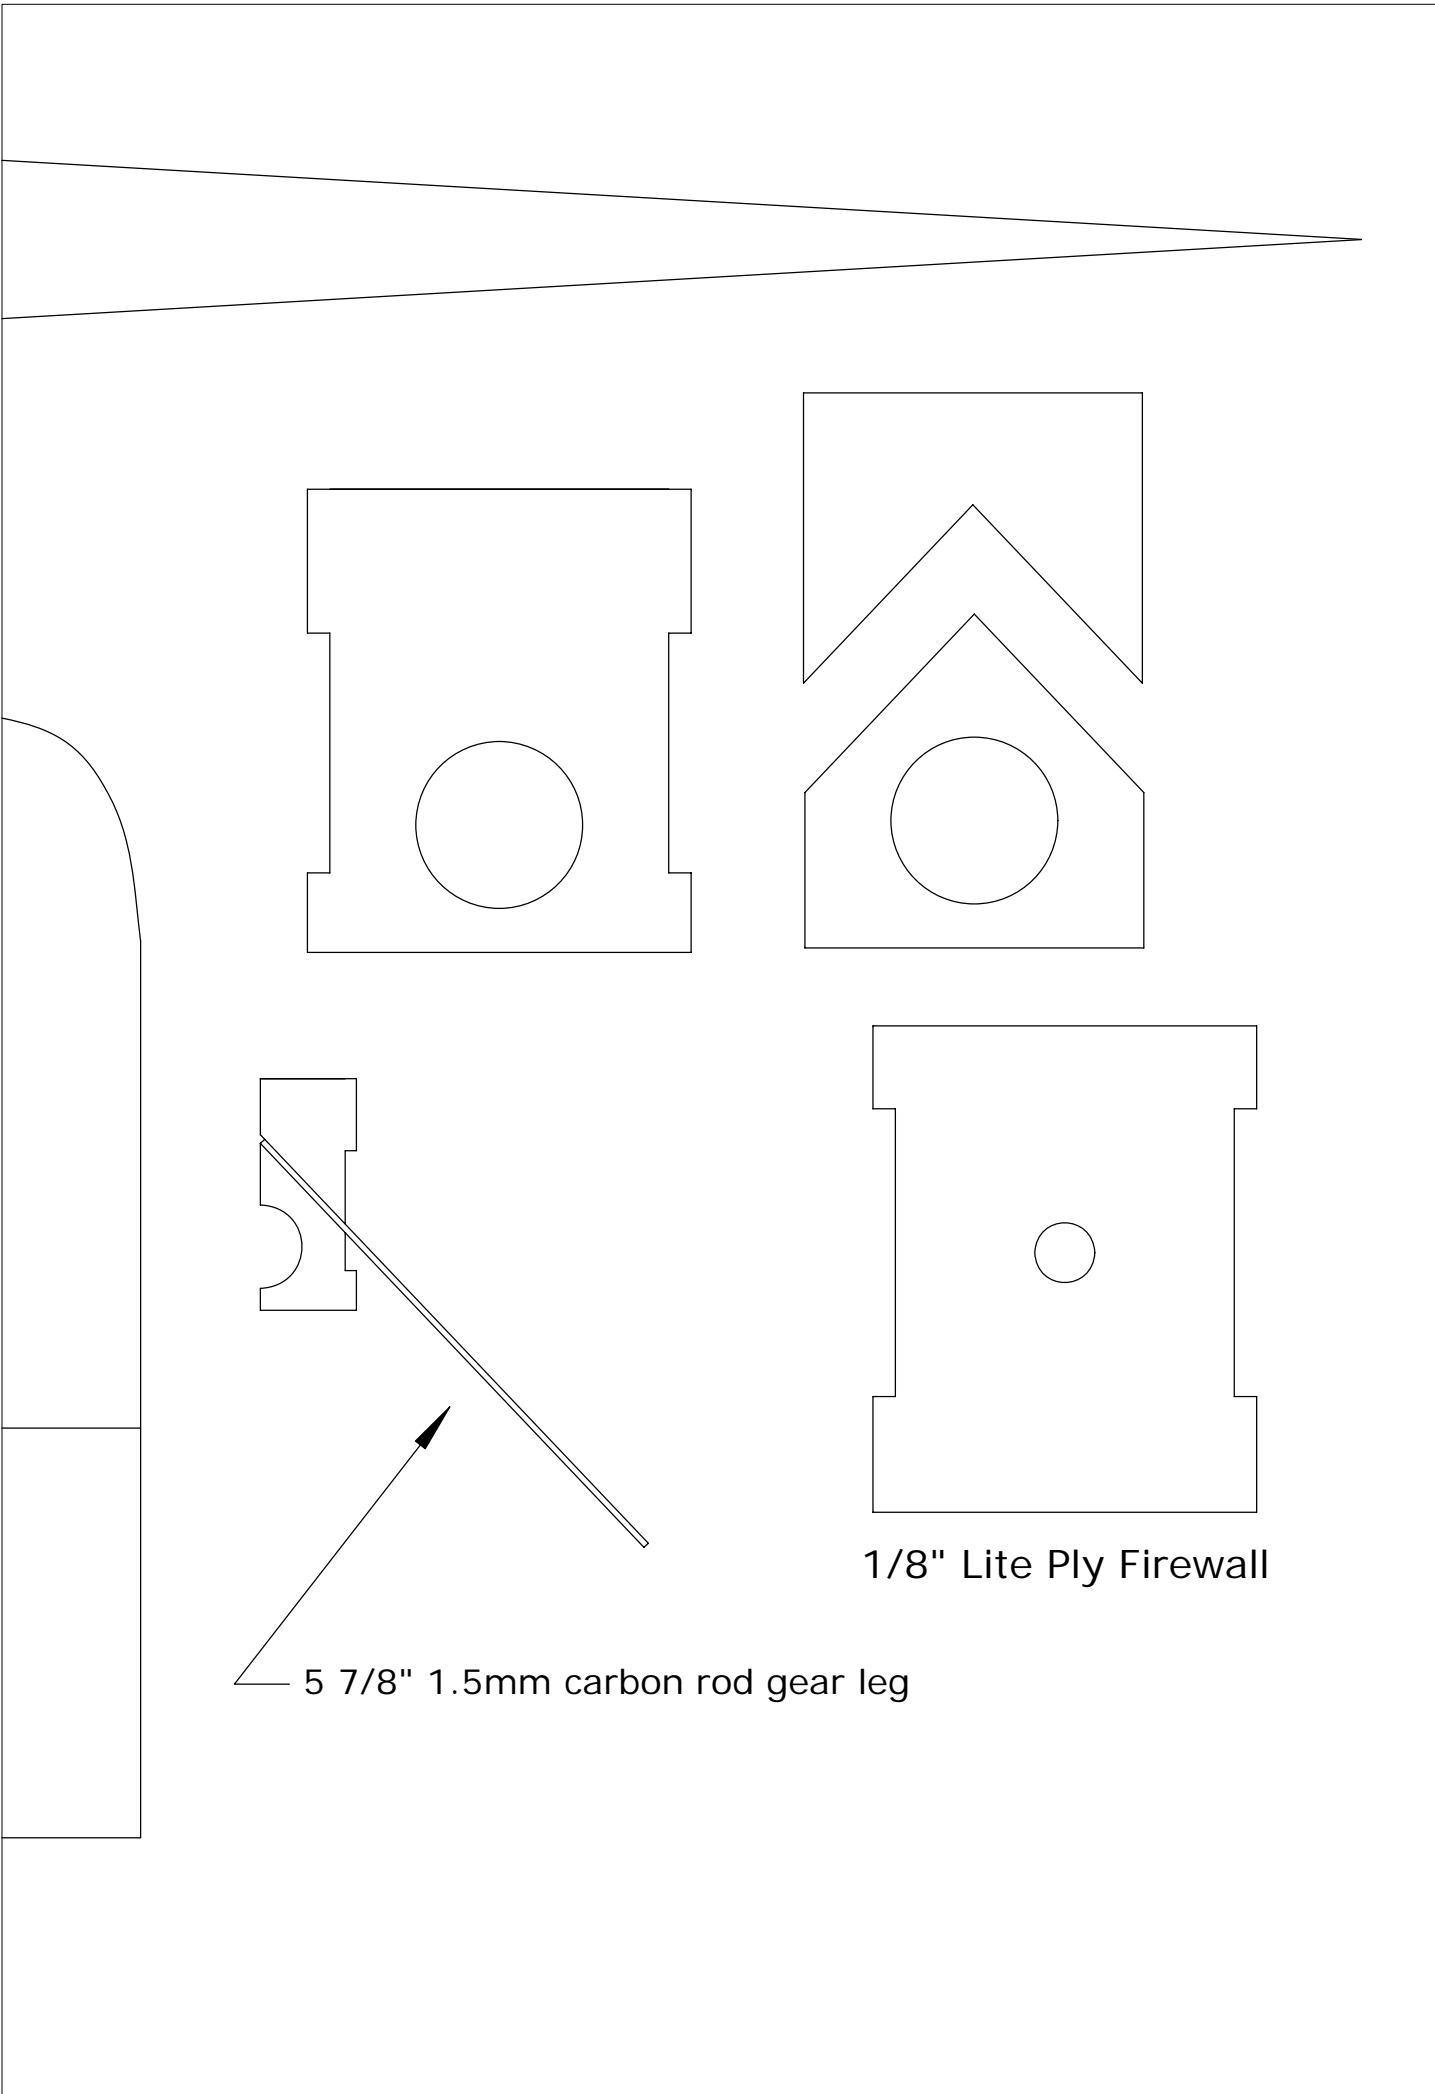

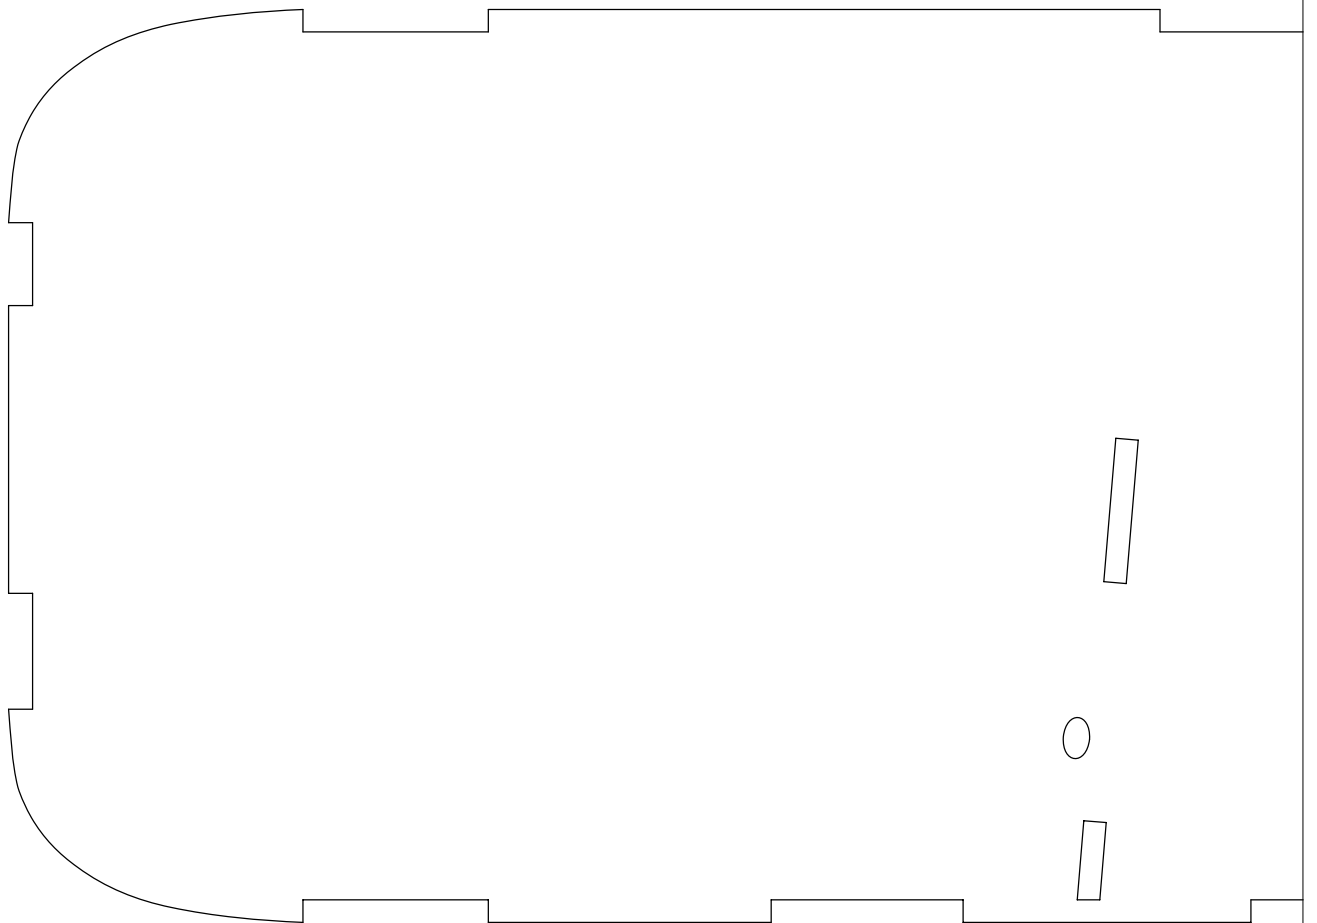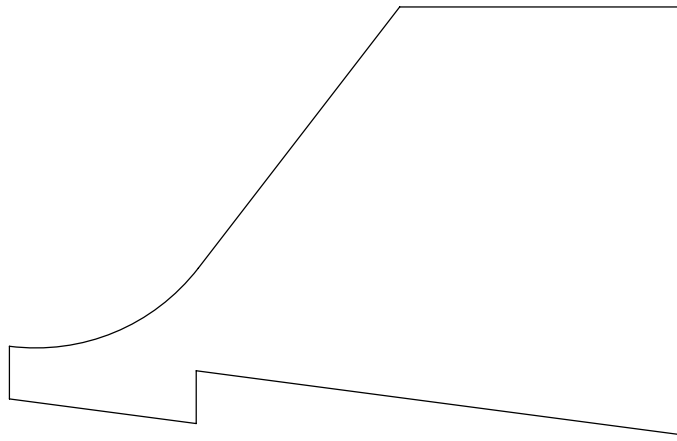


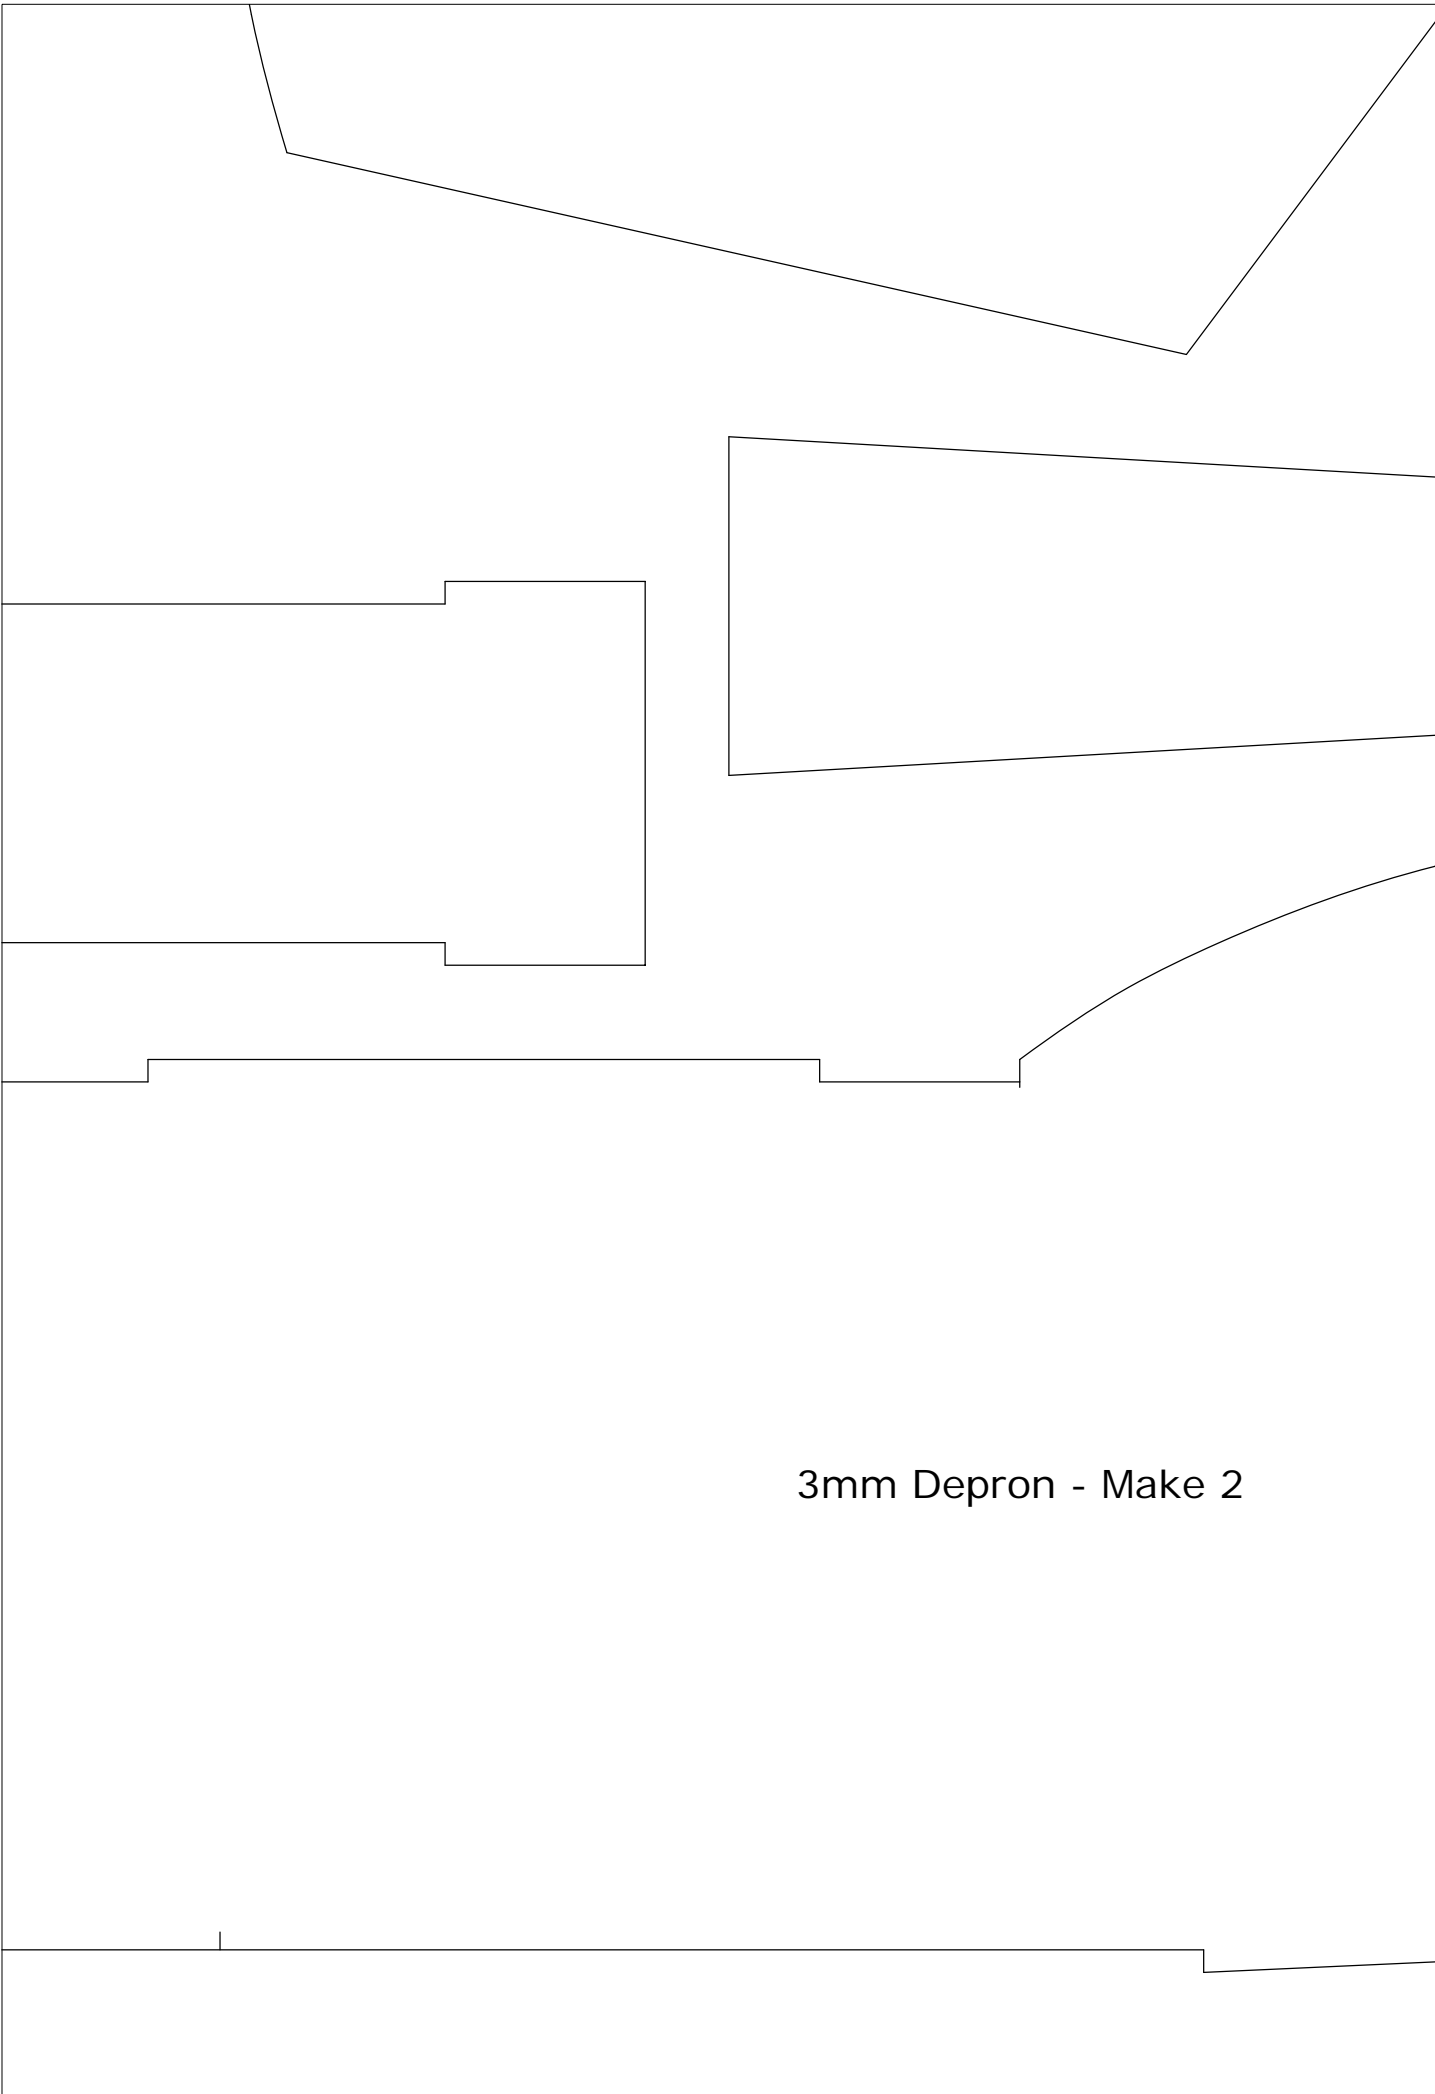


3mm Depron - Make 2




32" Pitts Python

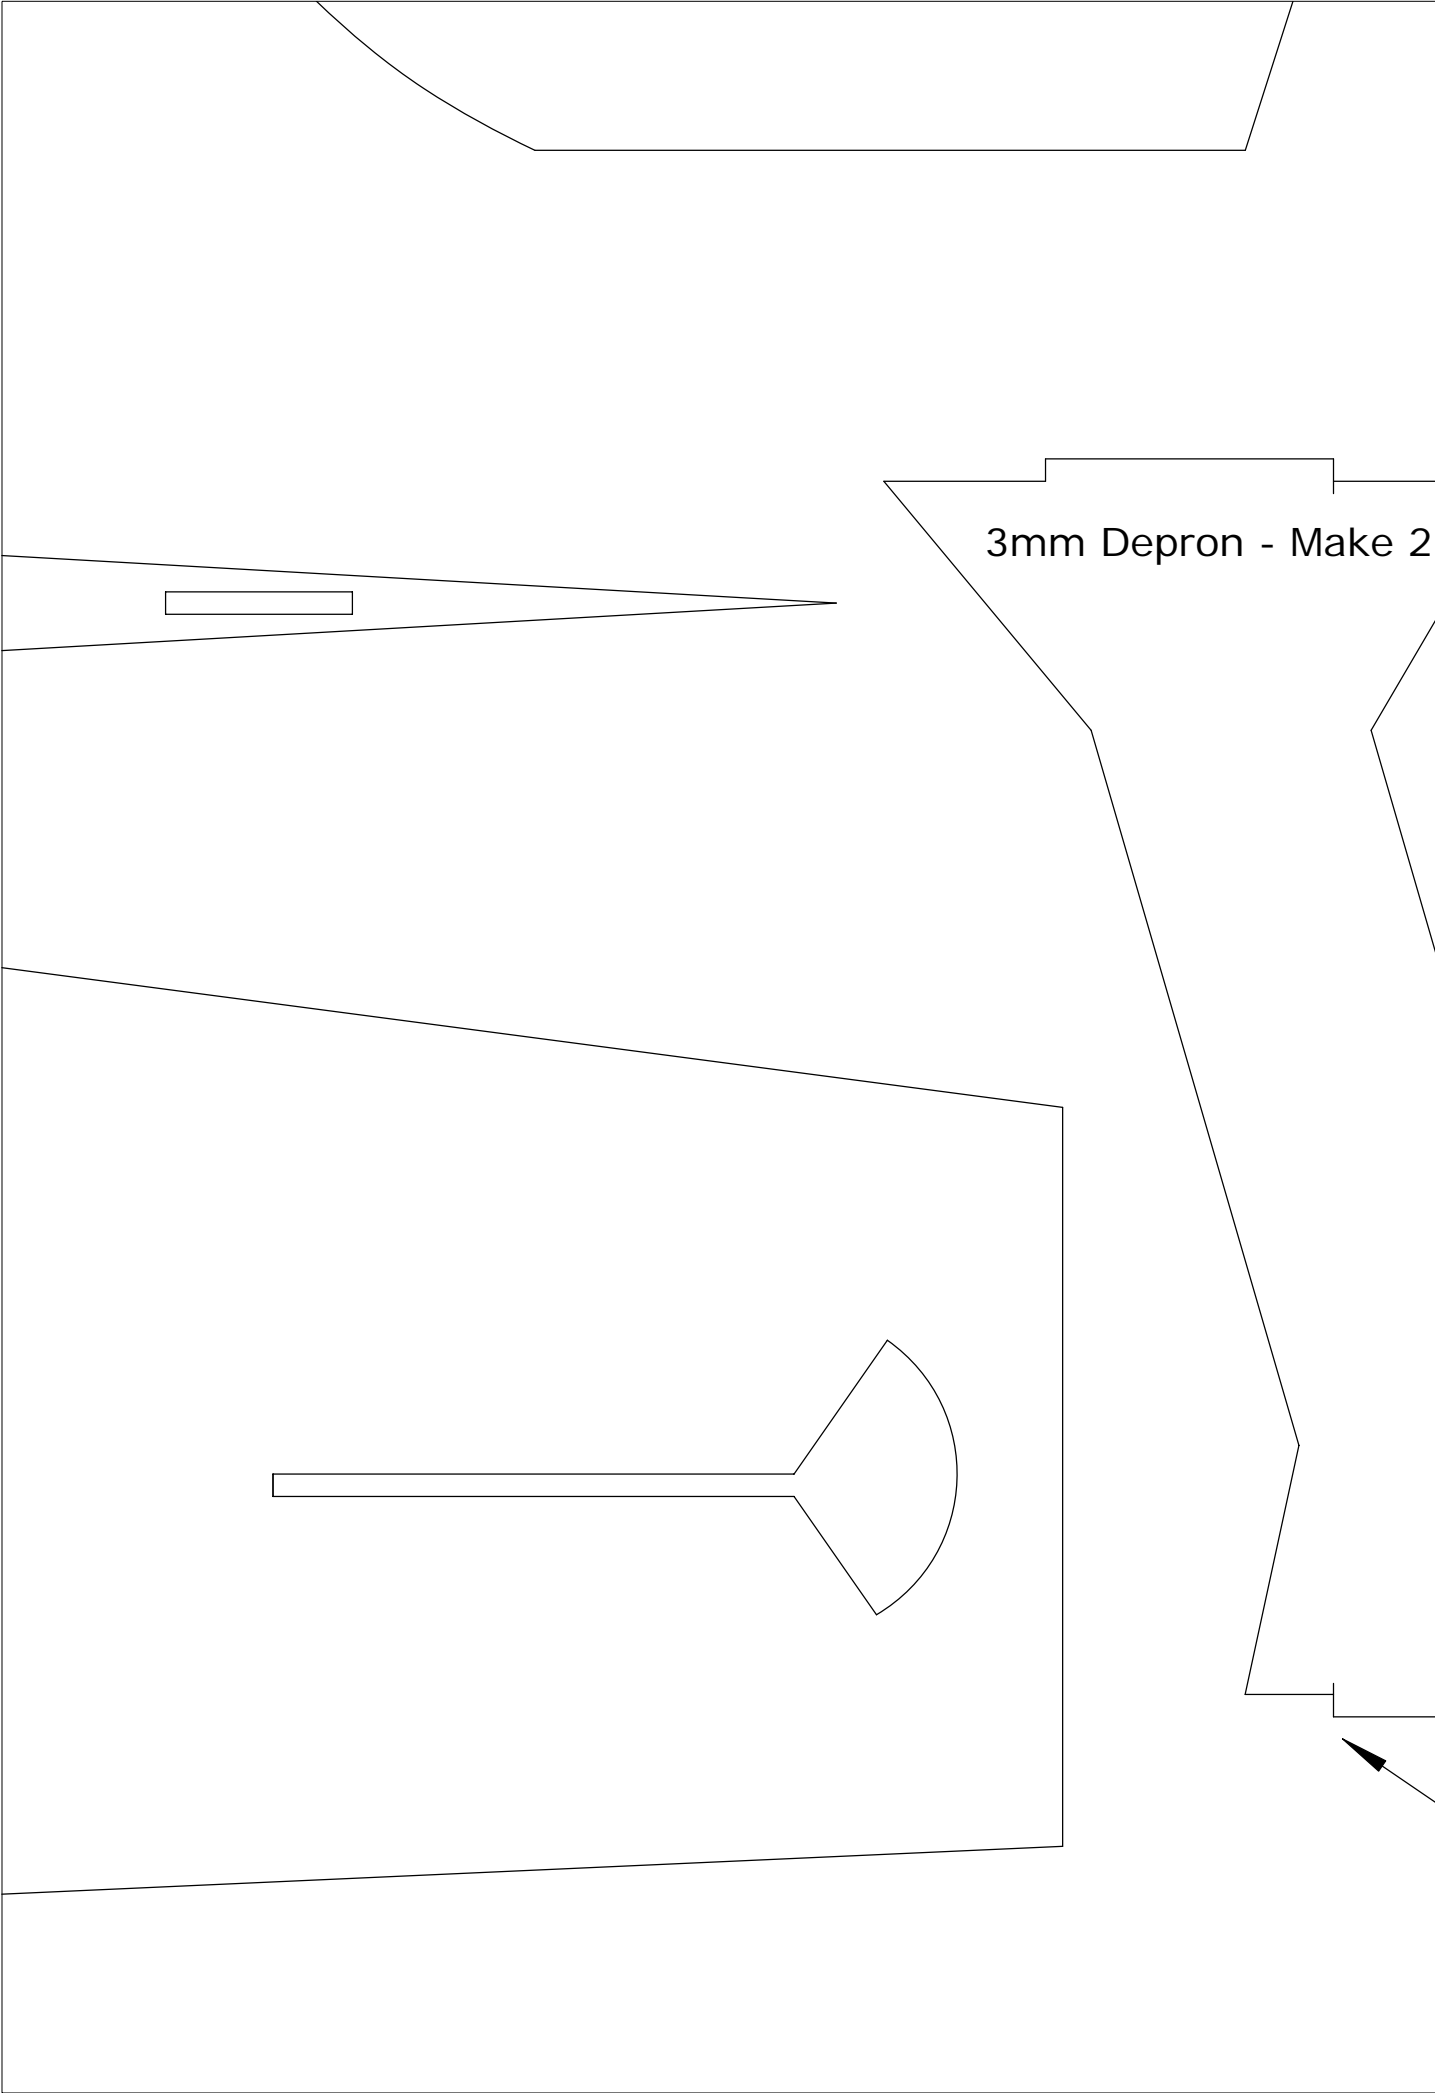


3mm Depron - Make 2

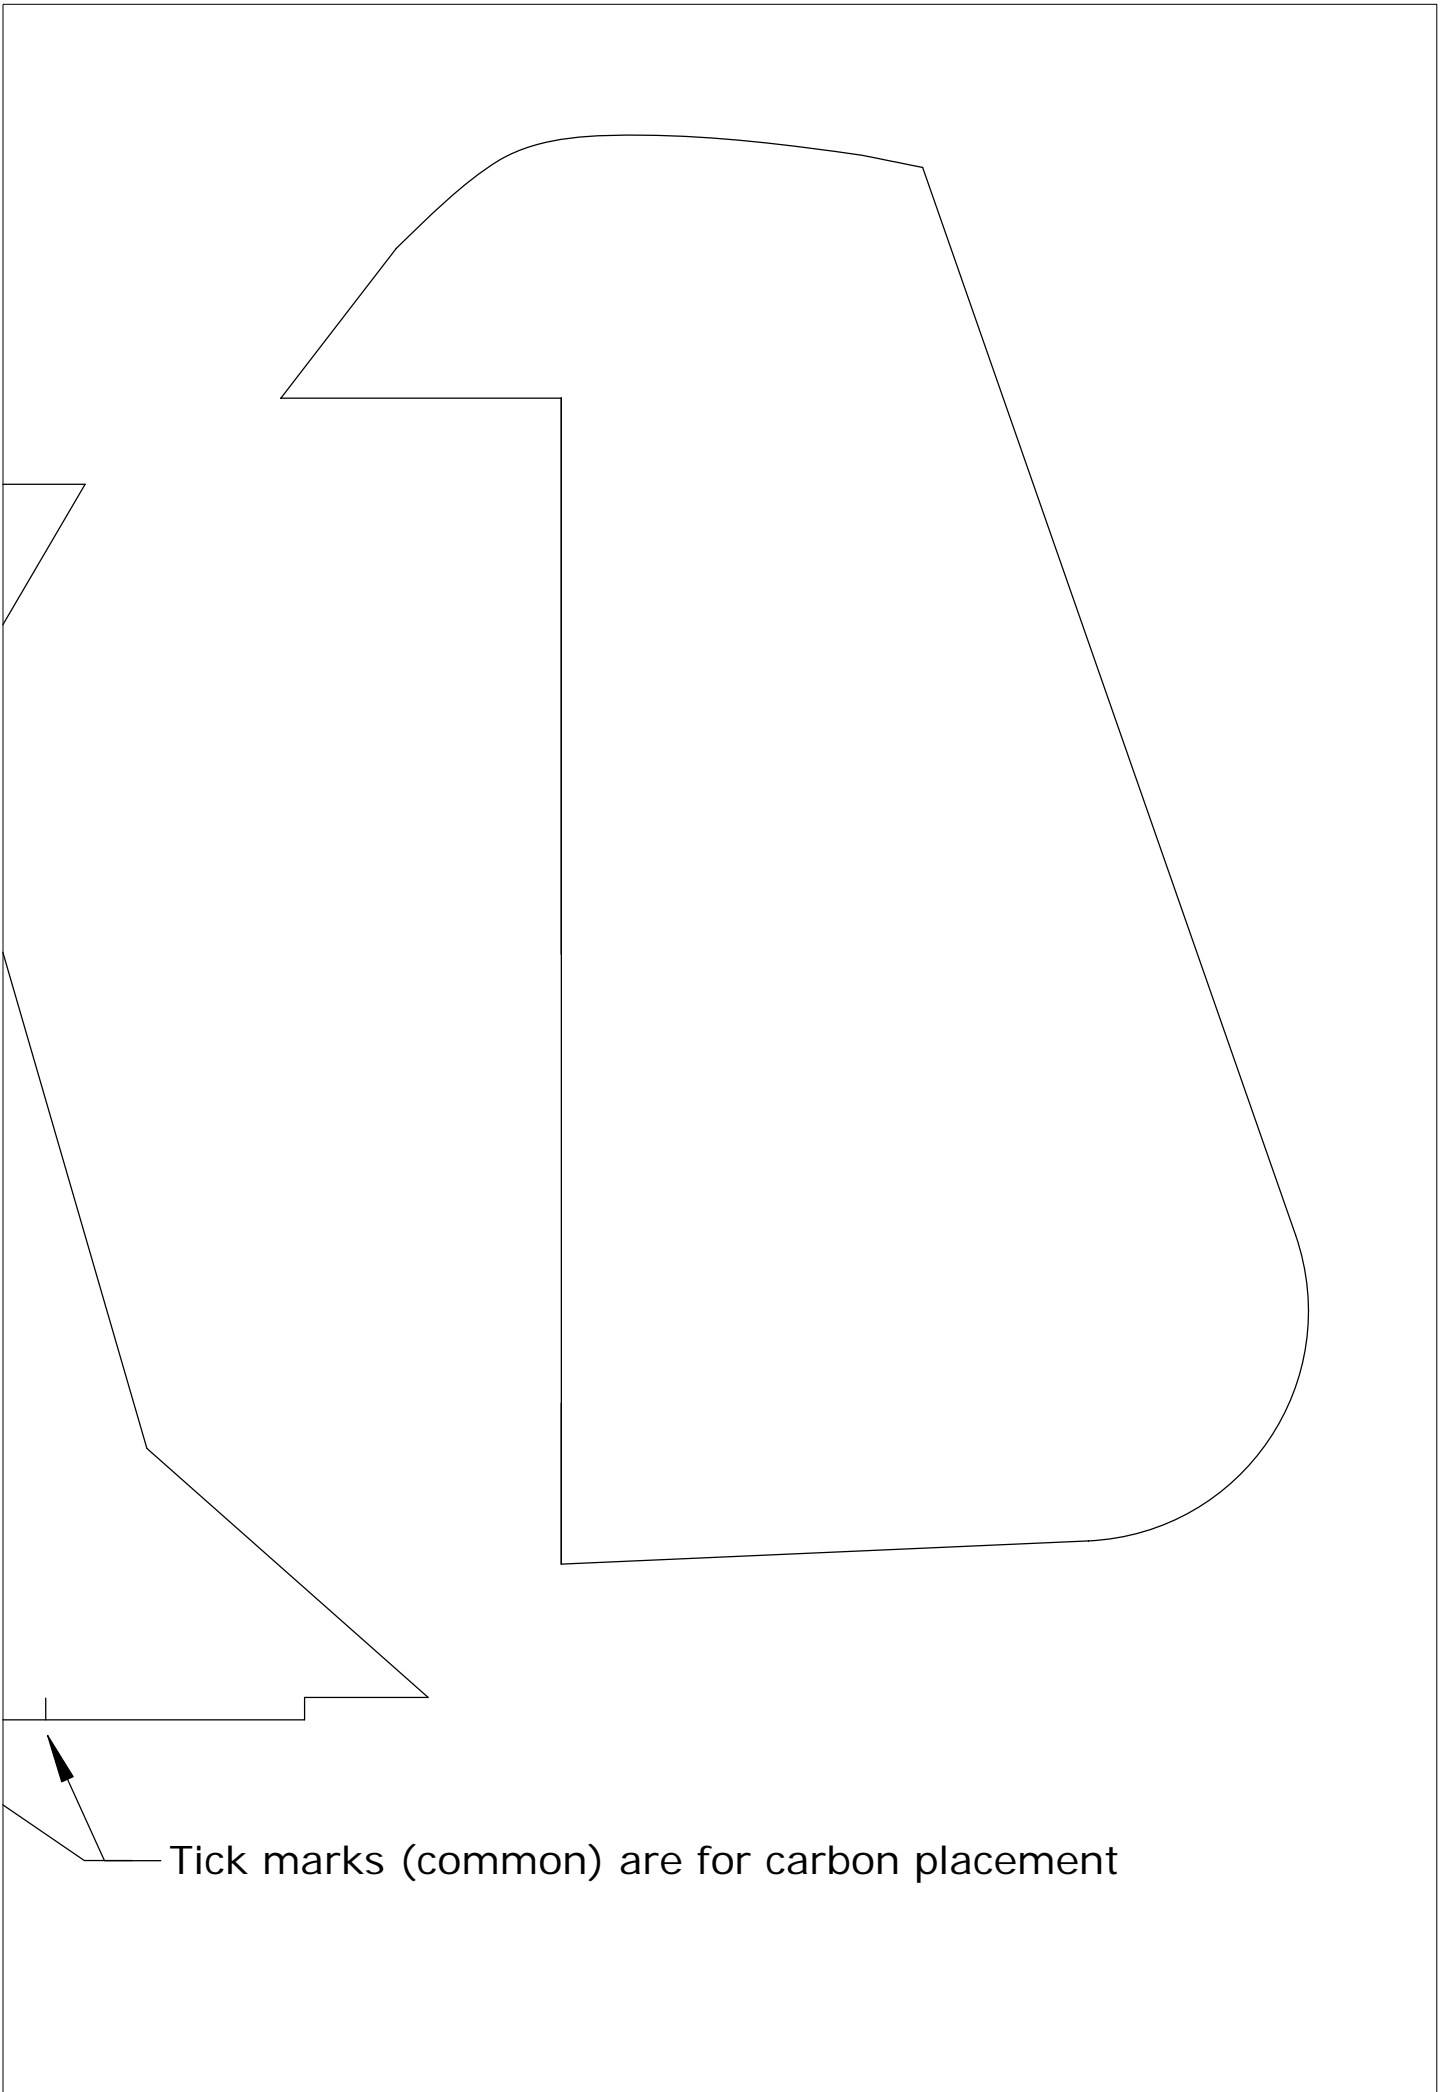



Tick marks (common) are for carbon placement

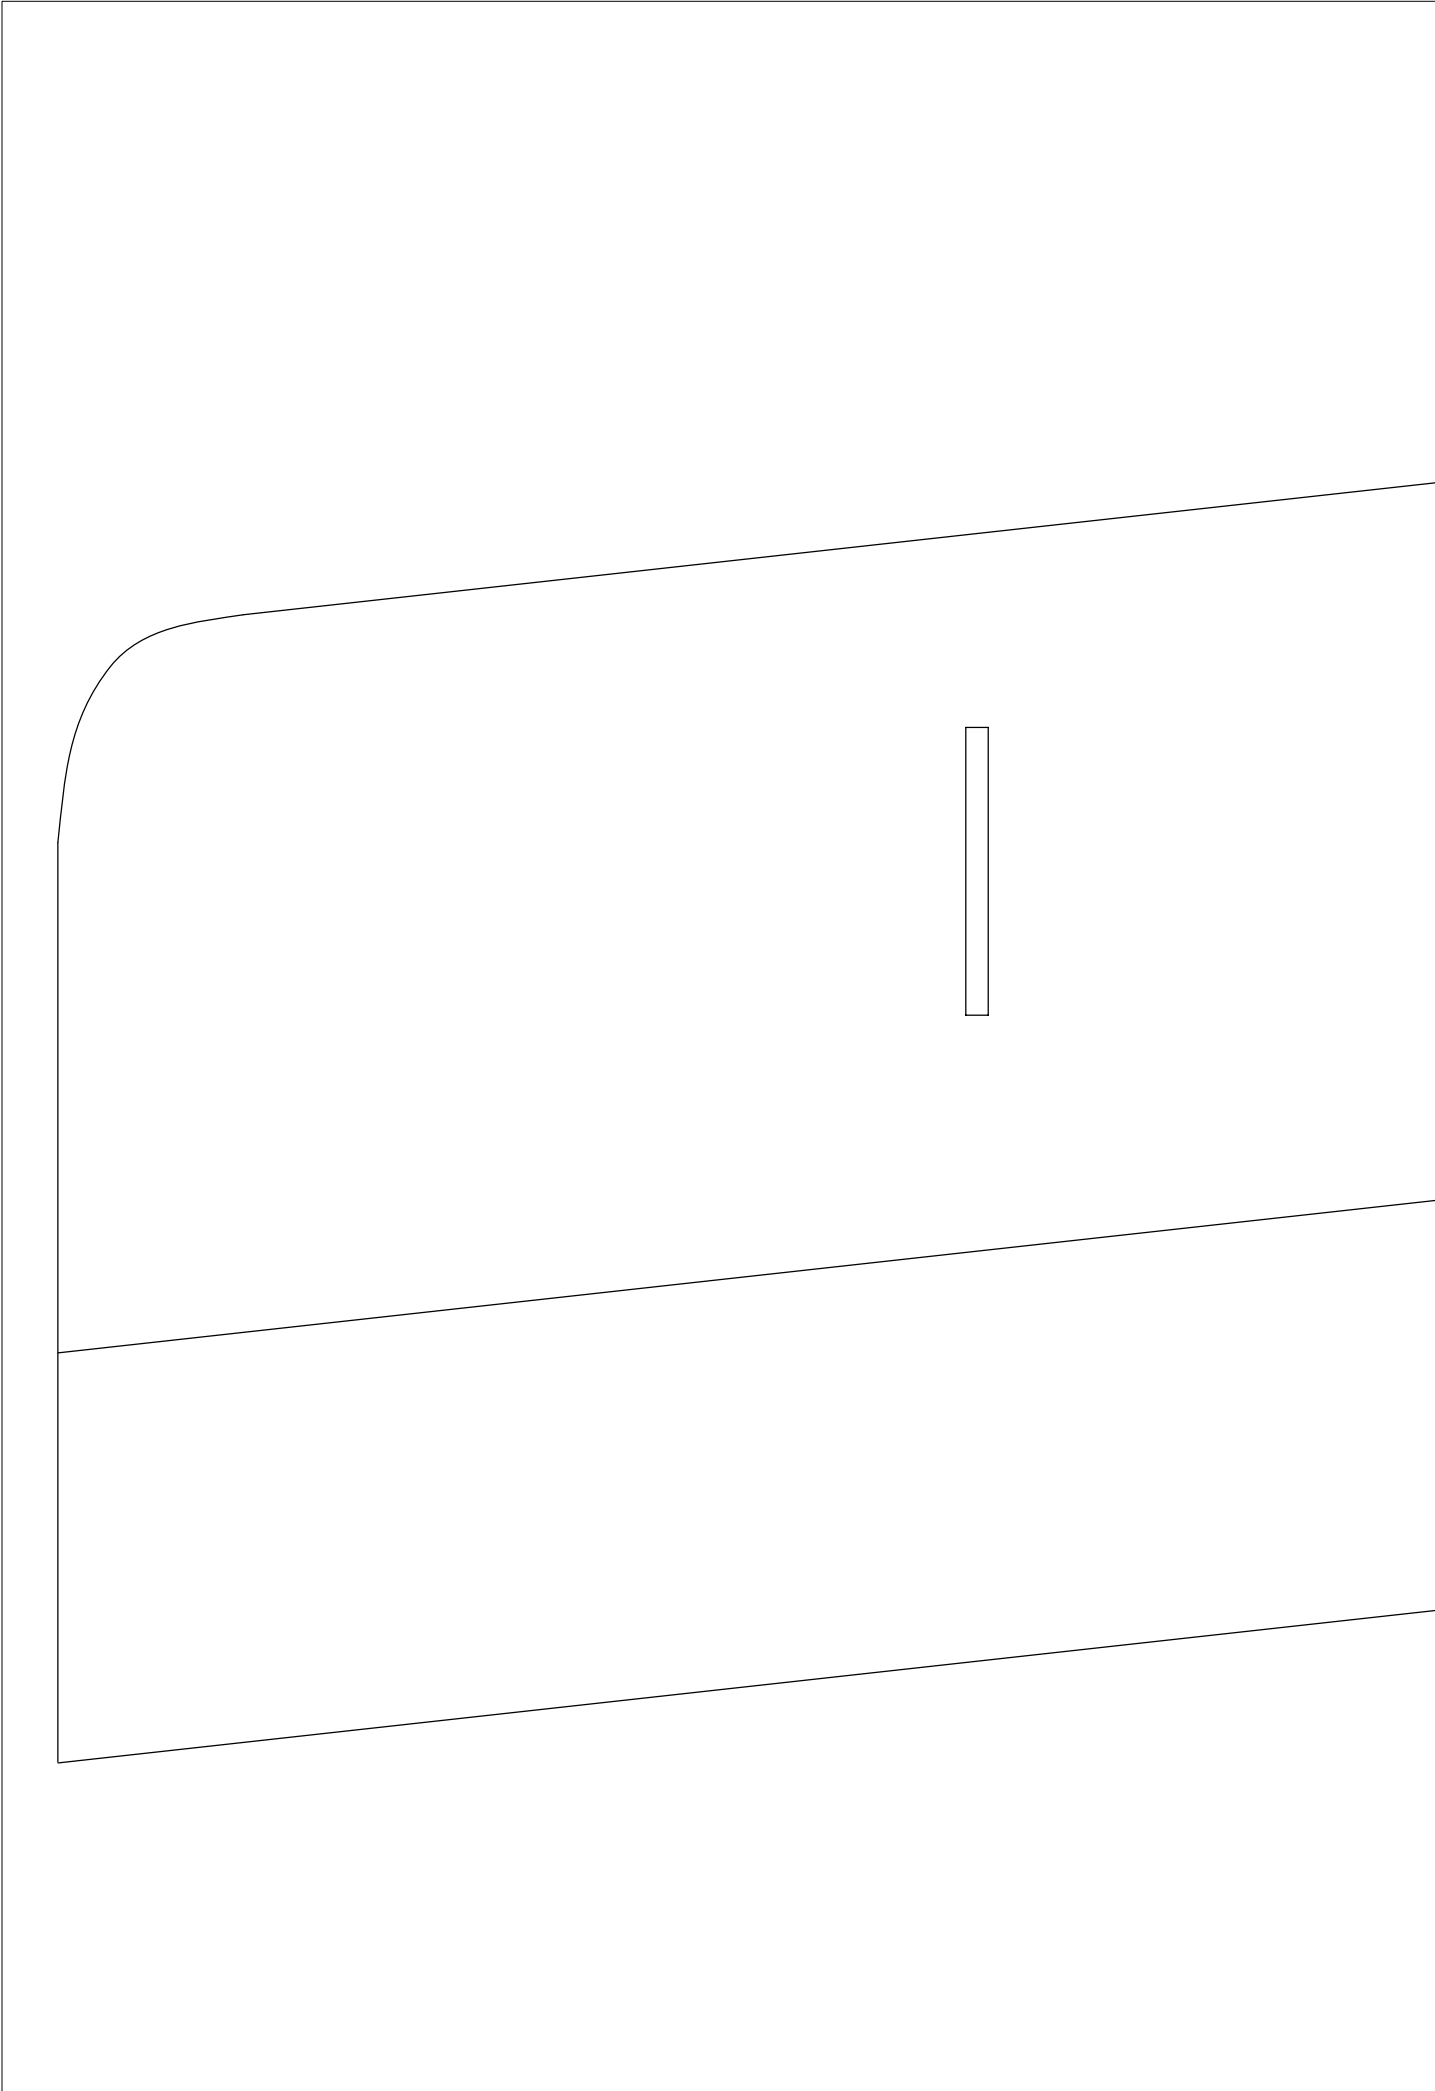


Both wings cut from a single piece of 3mm Depron

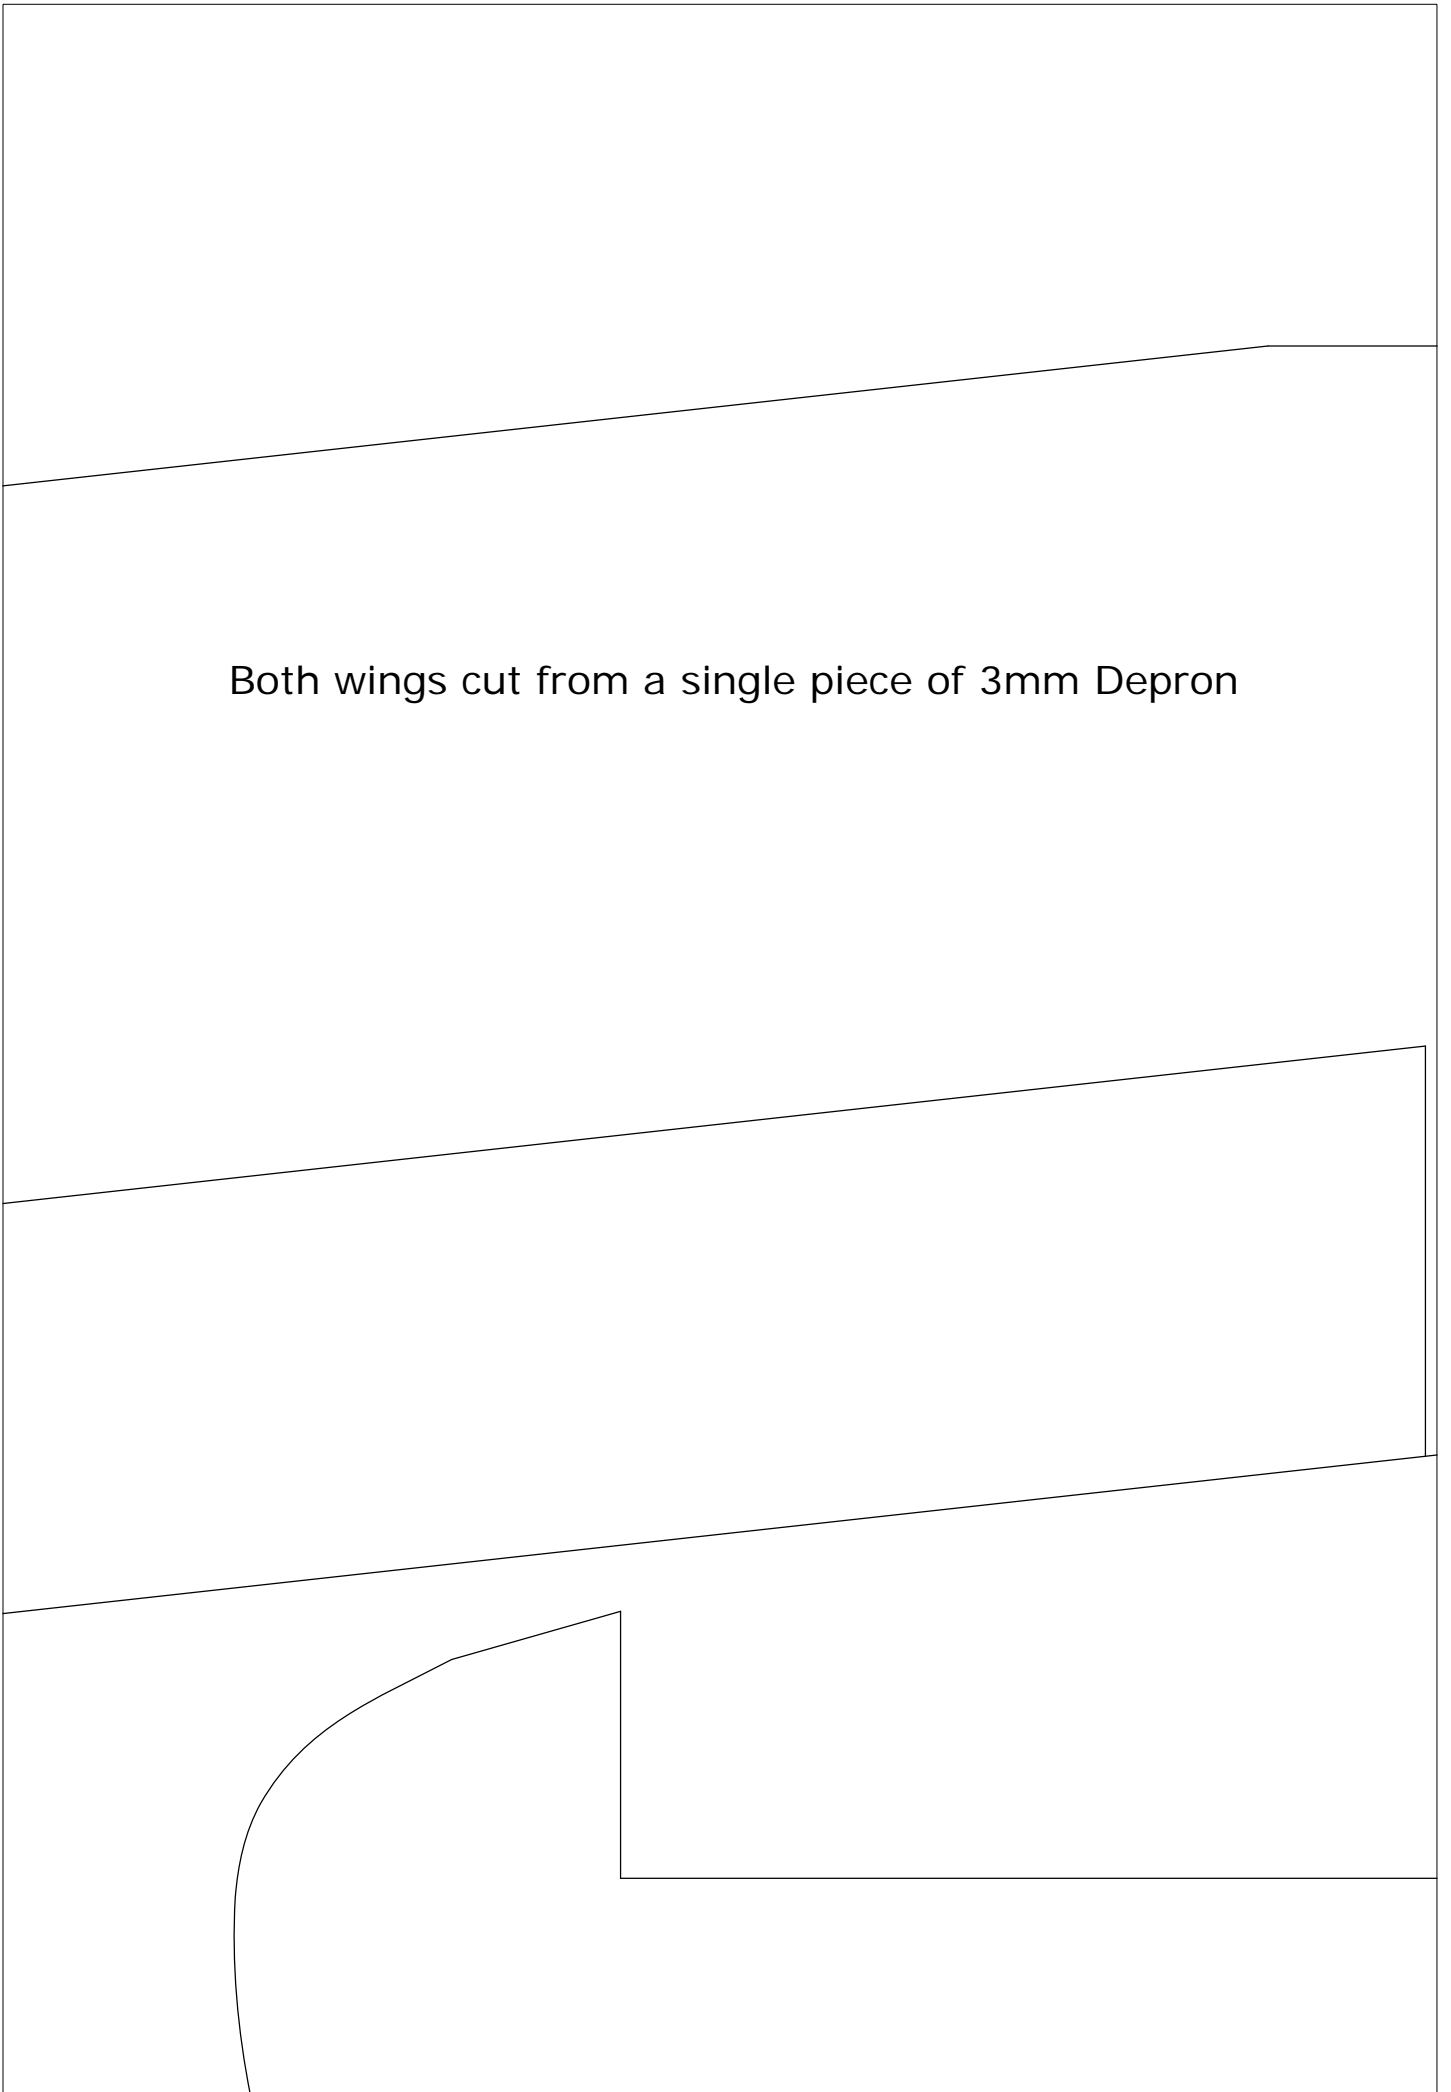

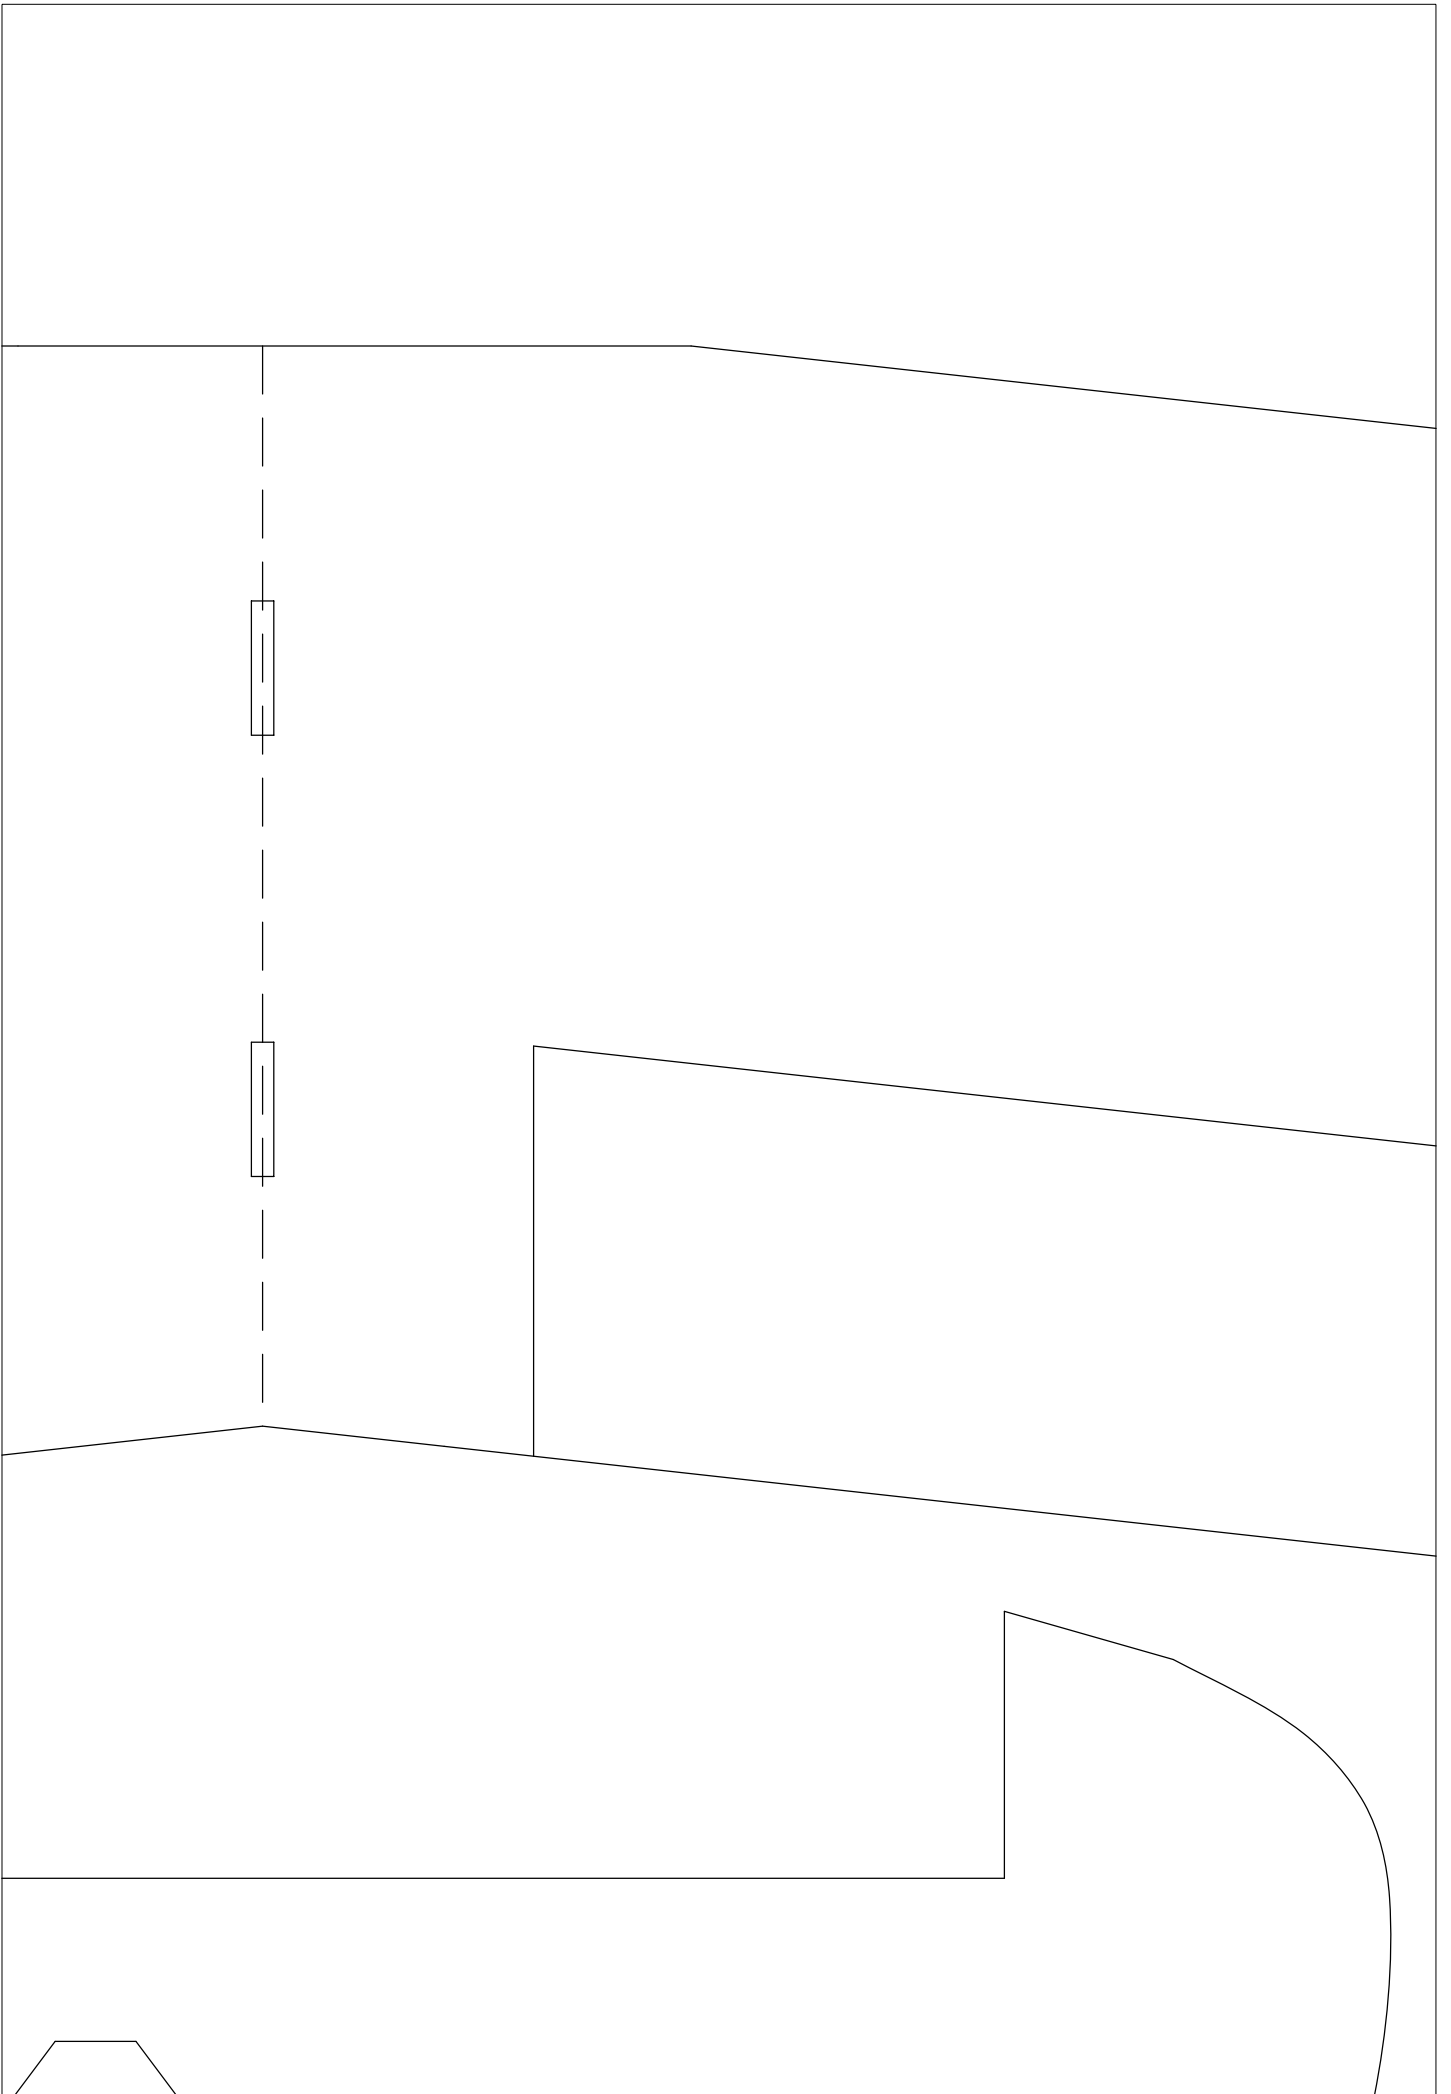

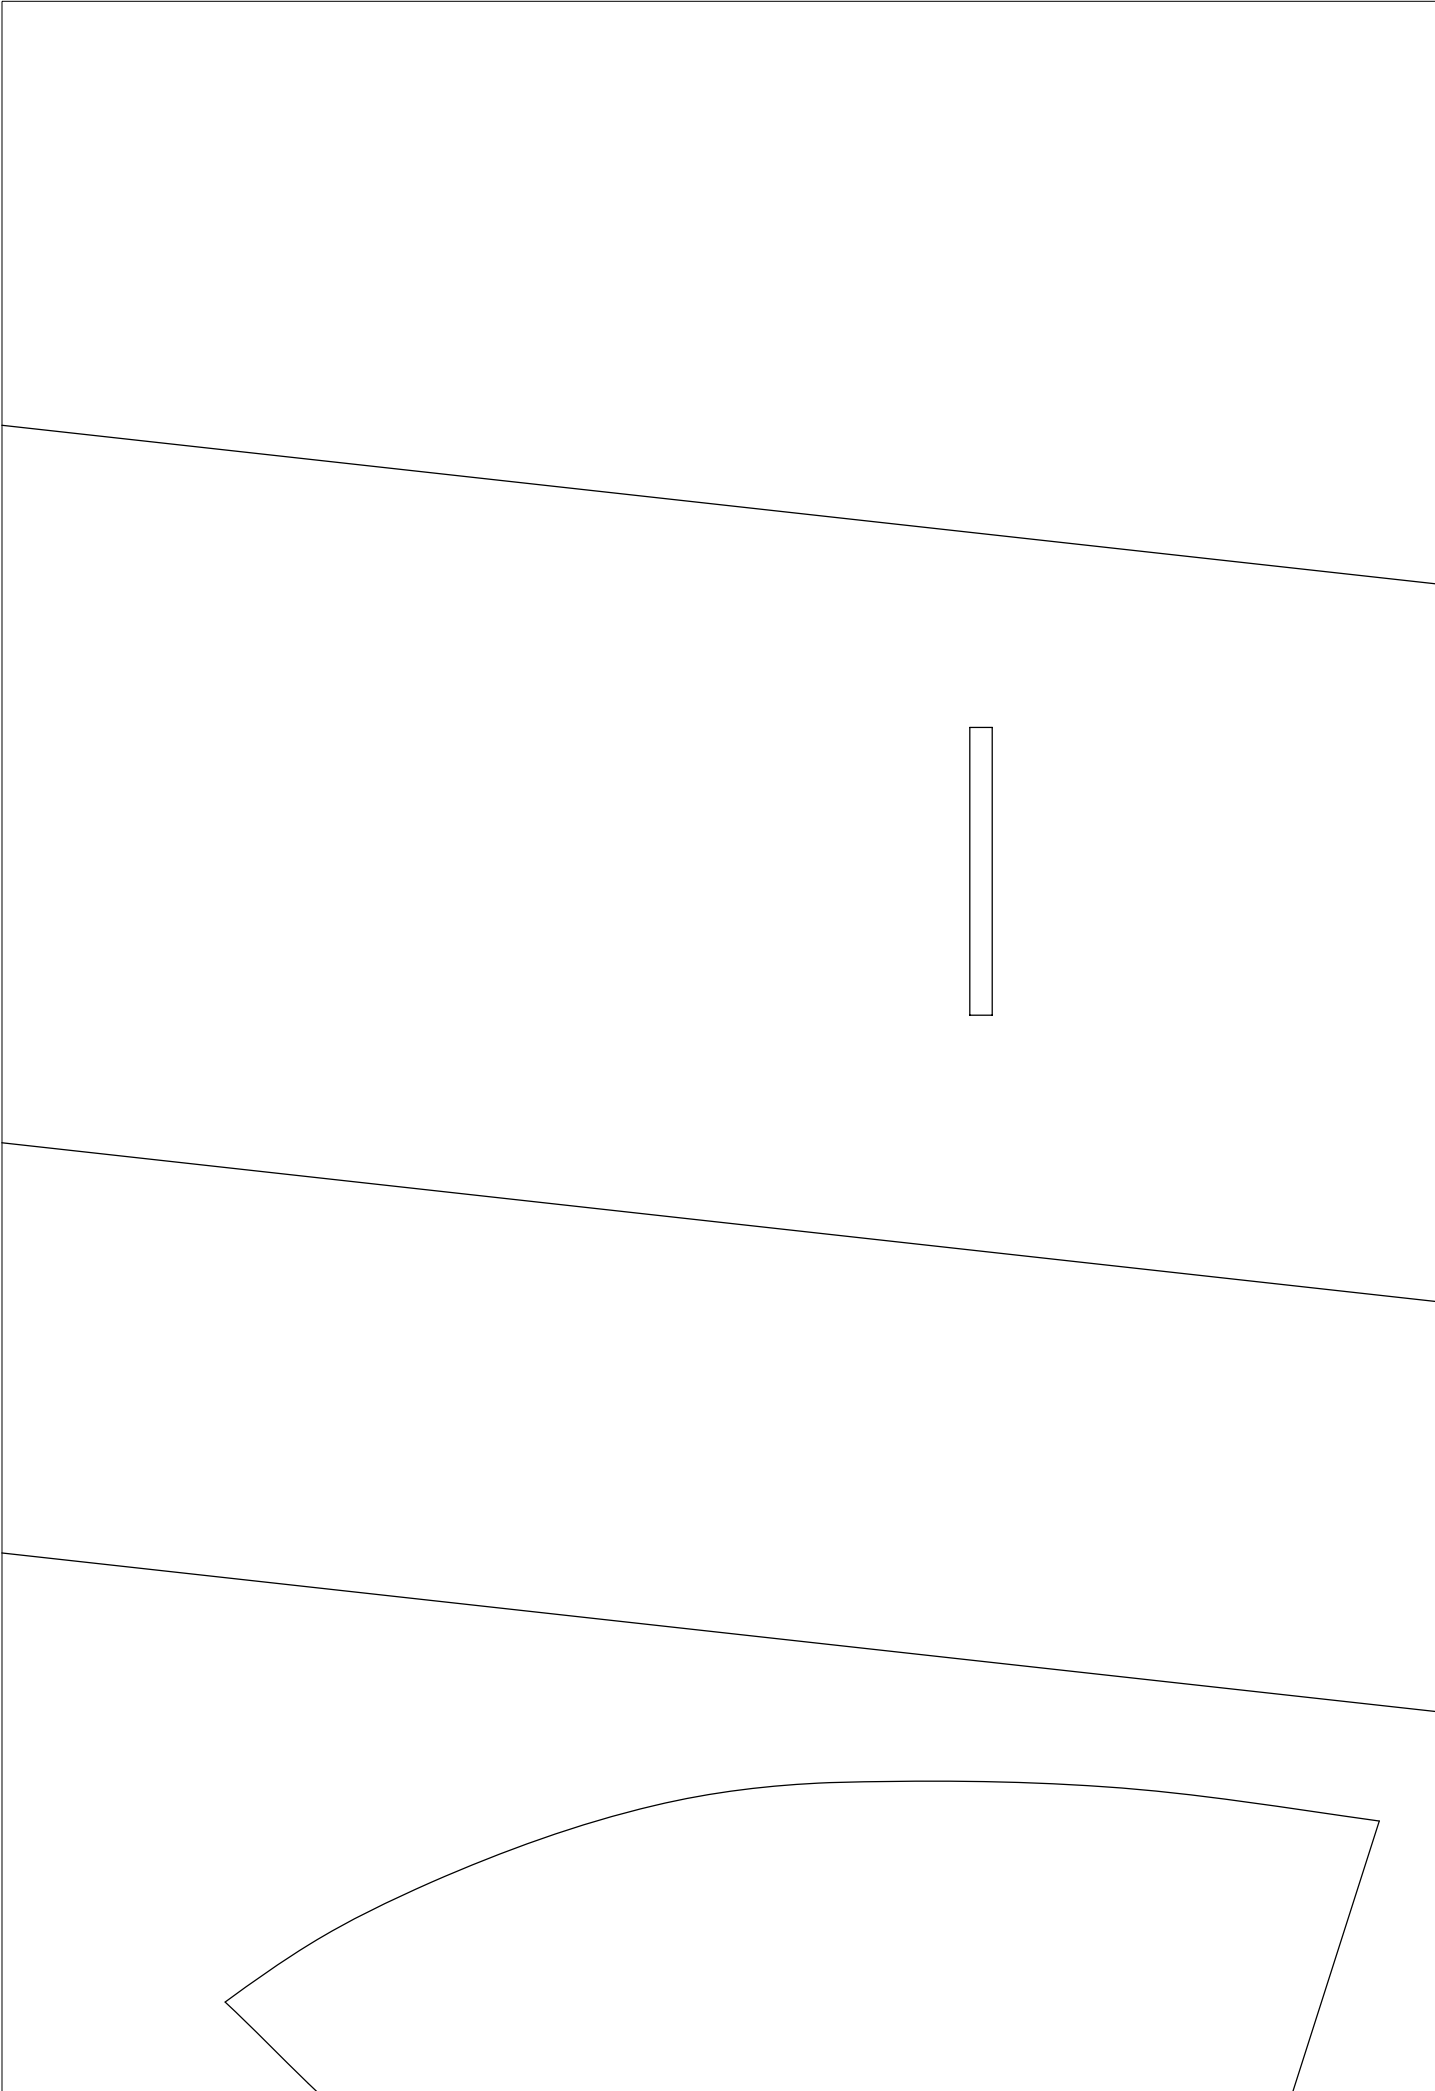

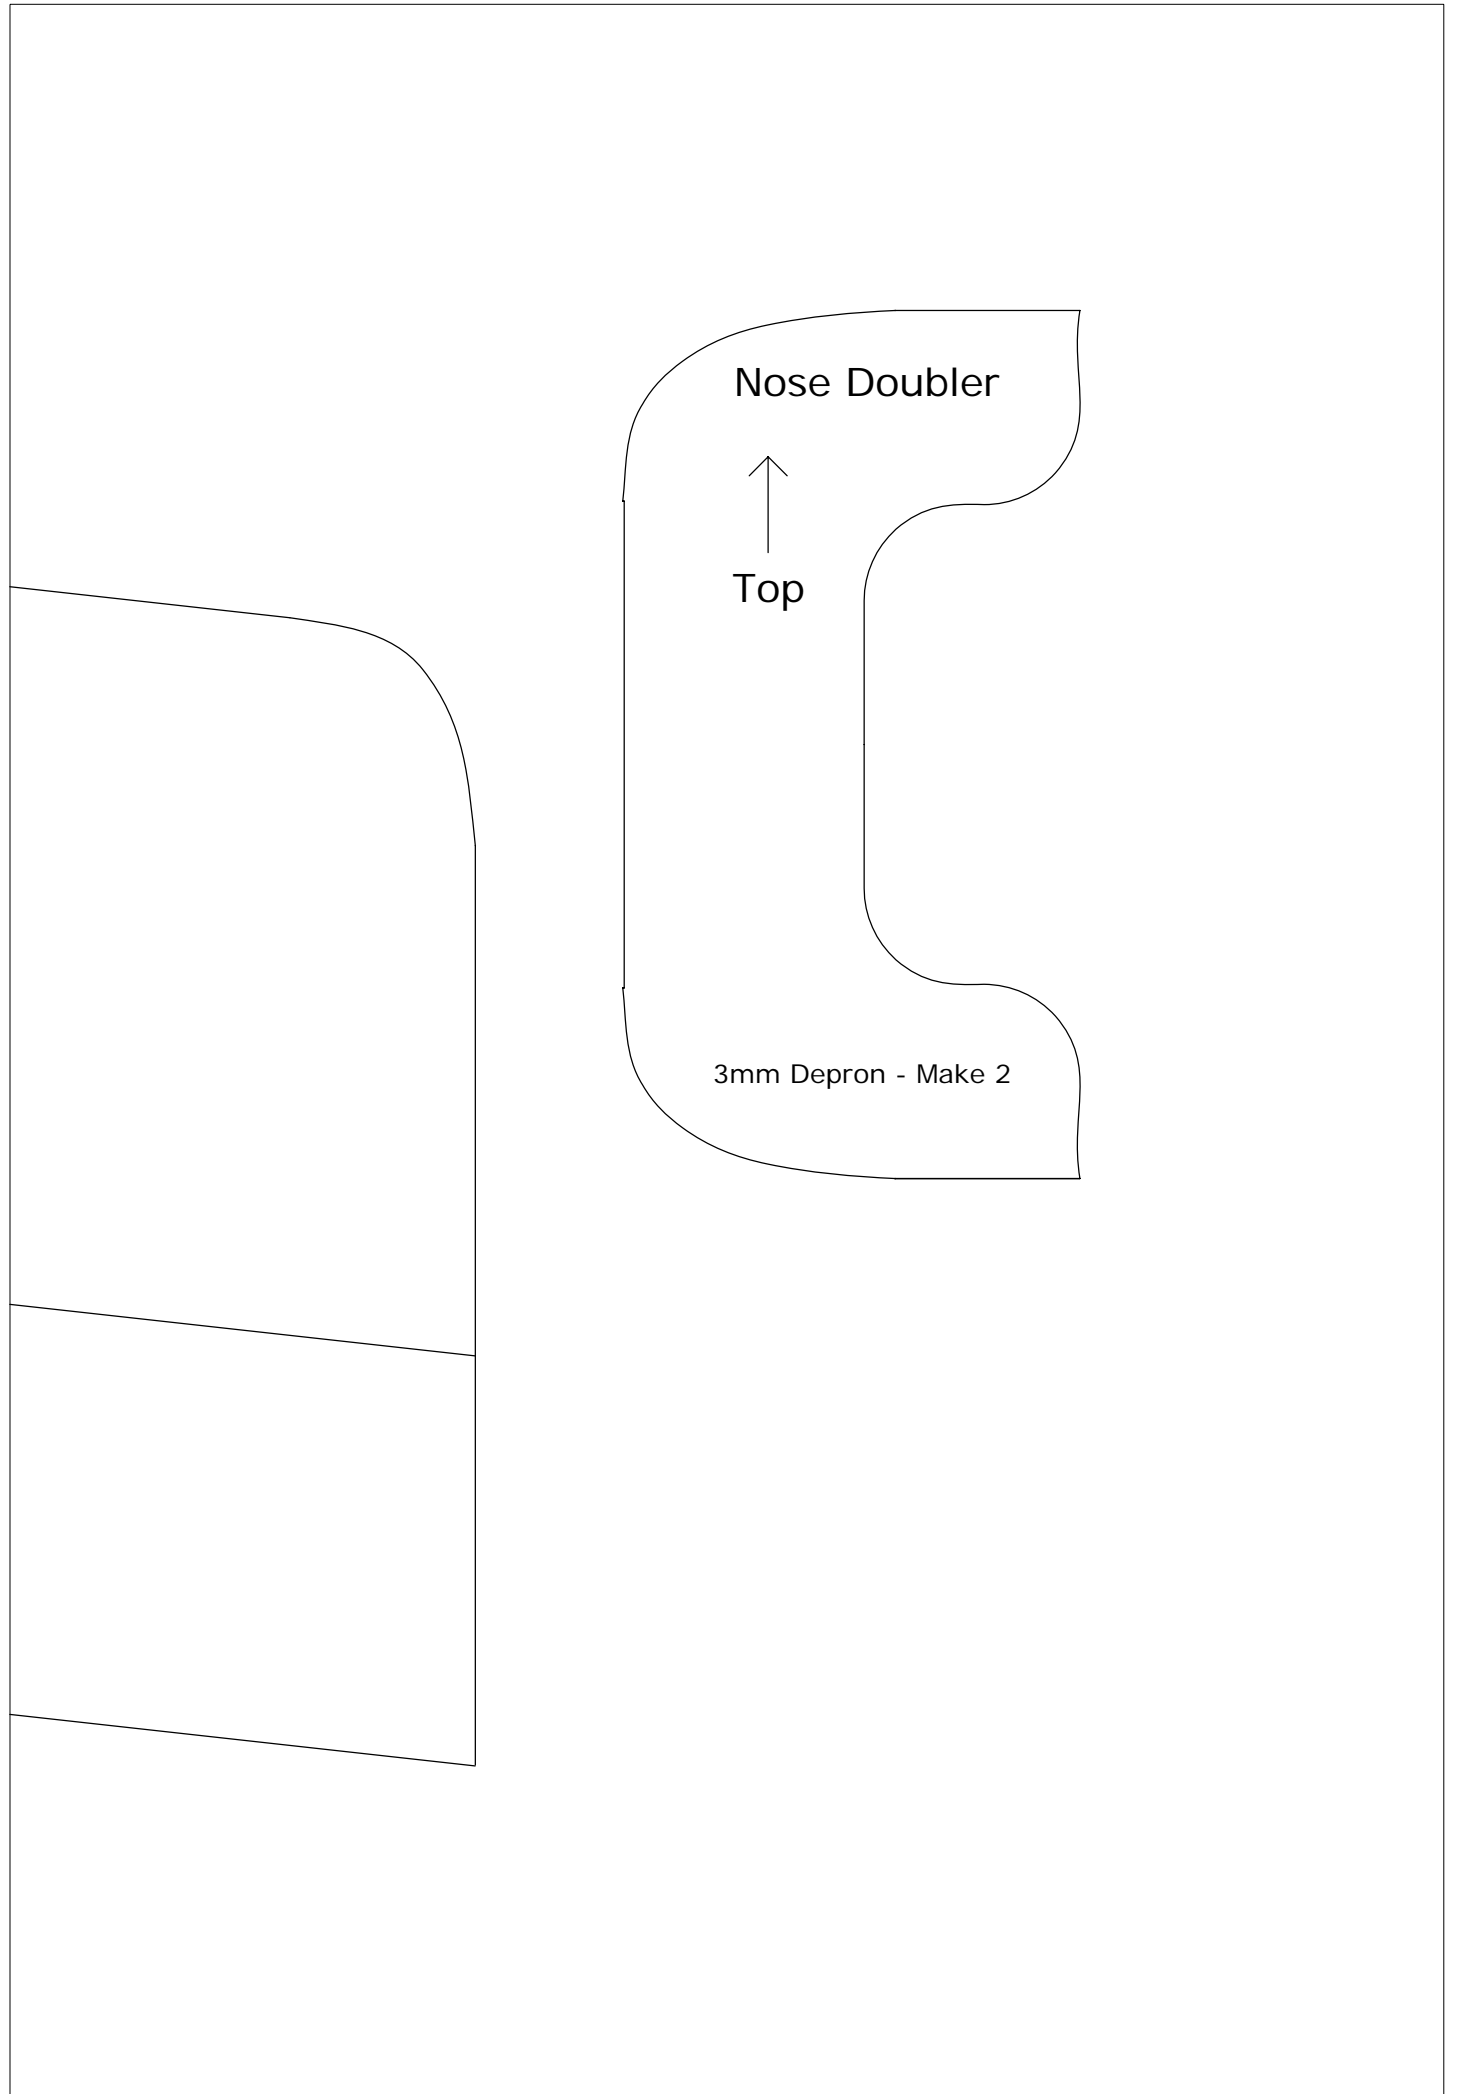

Nose Doubler



Top

3mm Depron - Make 2