

CEMENT ELEVATOR.

1/8 SQ.

1/16 SHEET

1/16 DIA: BAMBOO IN 1/16 SHEET.

STRUT Z 1/16 SHEET.

REED.

DUMMY WHEEL WIRE.

1/16 SHEET COWL

OIL COOLER.

SOFT 1/8 SHEET.

SPATS OPEN AT TOP

FORMERS B-E - 1/16 SHEET

F-K - 1/32

LONGERONS 1/16 SHEET.


1/8 SHEET.

1/32 SHEET.

CEMENT STRUTS Z HERE.

1/32 SHEET.

1/8 SQ

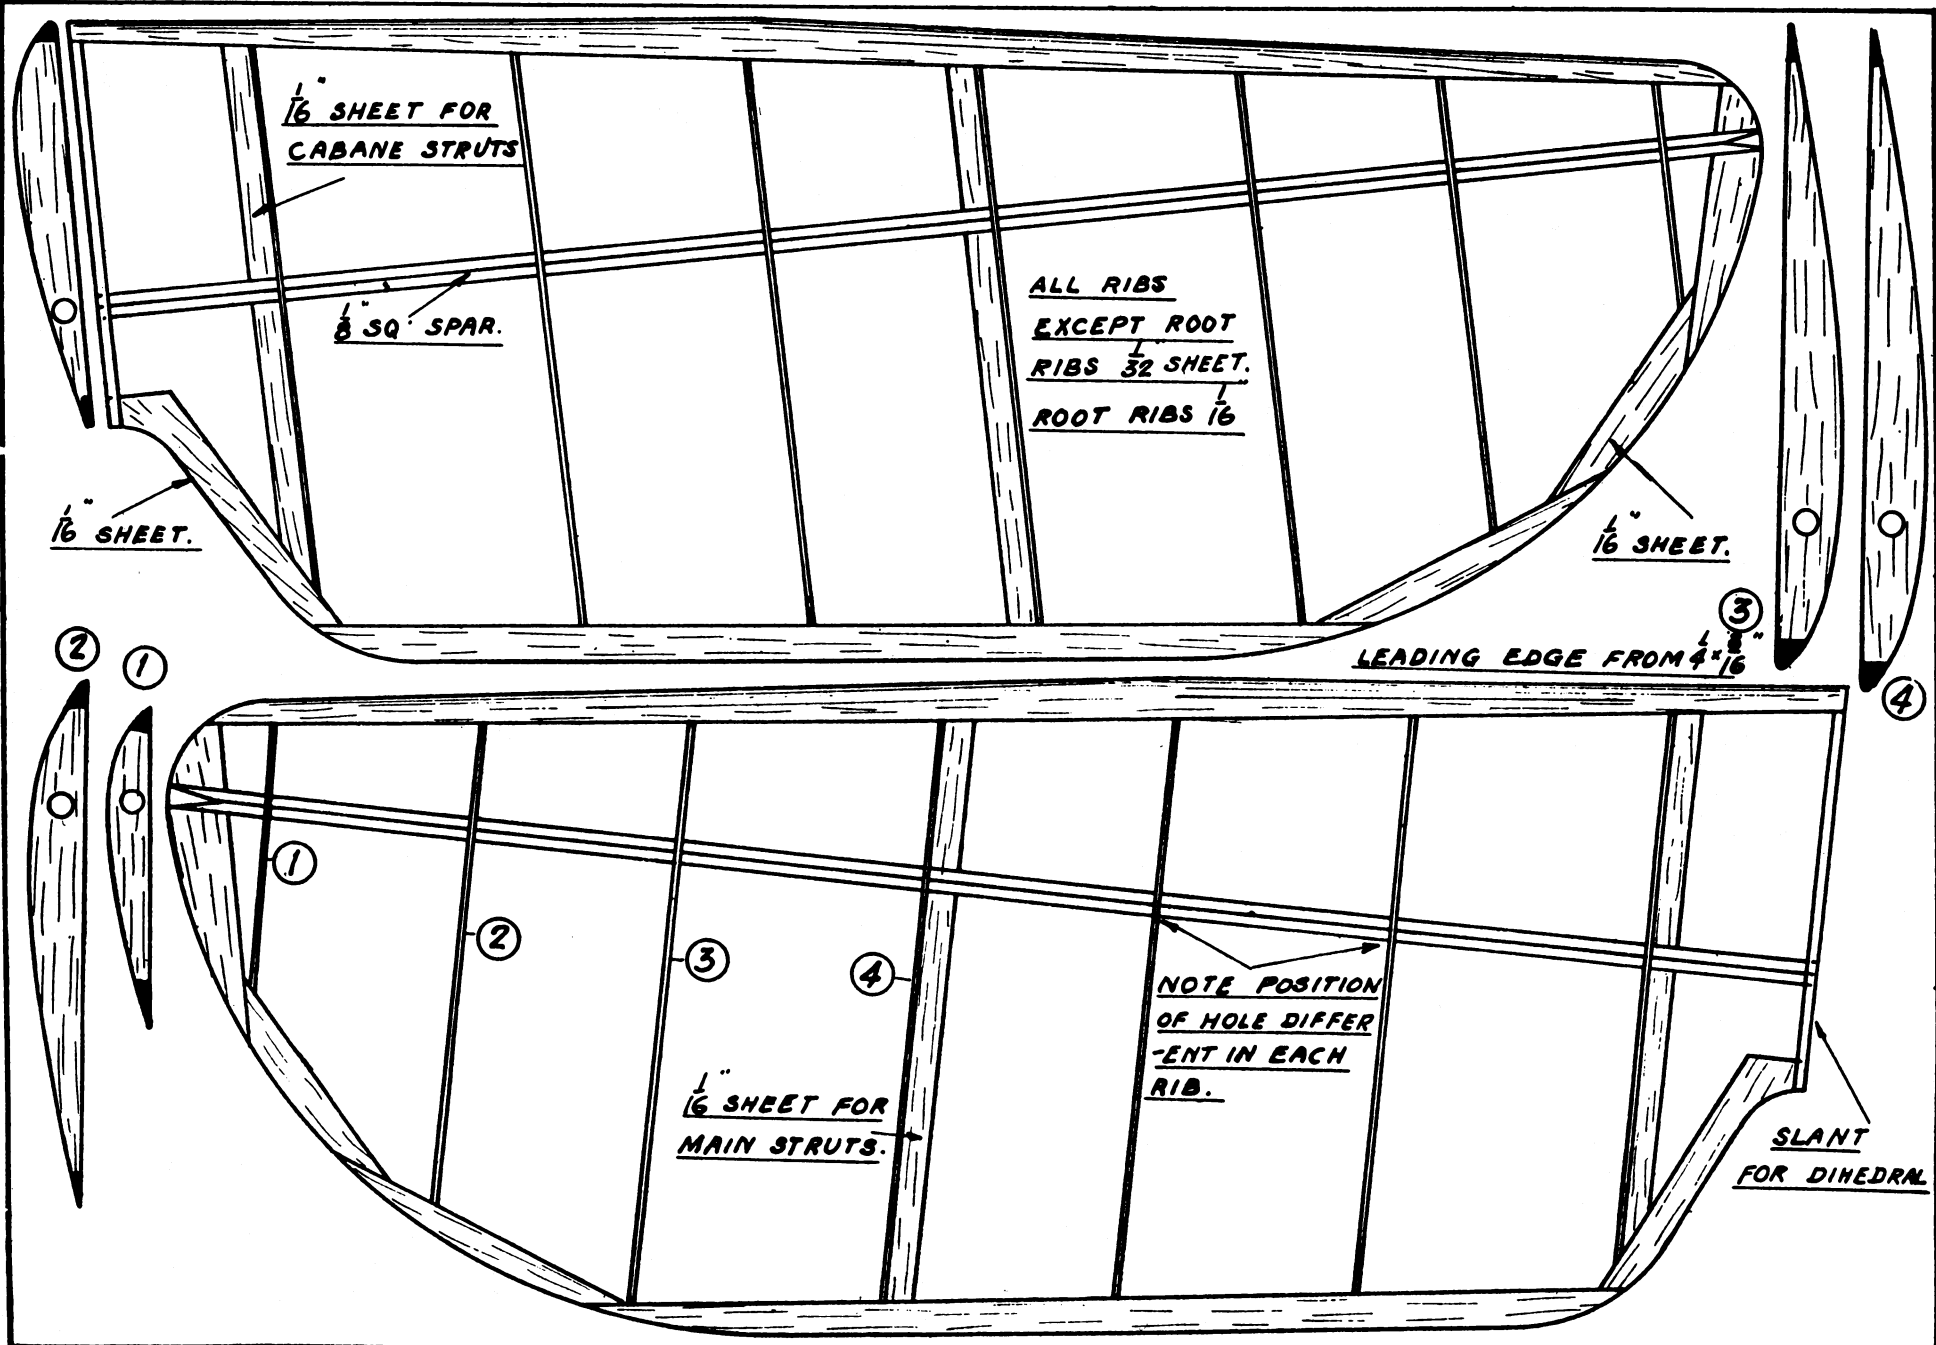

DIHEDRAL 1" AT TIP.

MAIN STRUT 3/32 SHEET.

CEMENT FILLET.

SECTION.

CEMENT STRUTS TO 1/32 SHEET STIFFENING.


GROOVE CUT TO RECEIVE WIRE.

AFTER WIRE IS IN POSITION CEMENT TO INSIDE OF 3/32 SHEET.

MAKE 2

PUSH THROUGH WHEN IN DOTTED POSITION AND BEND AS SHOWN AFTERWARDS.




STRONG CEMENT SKIN.

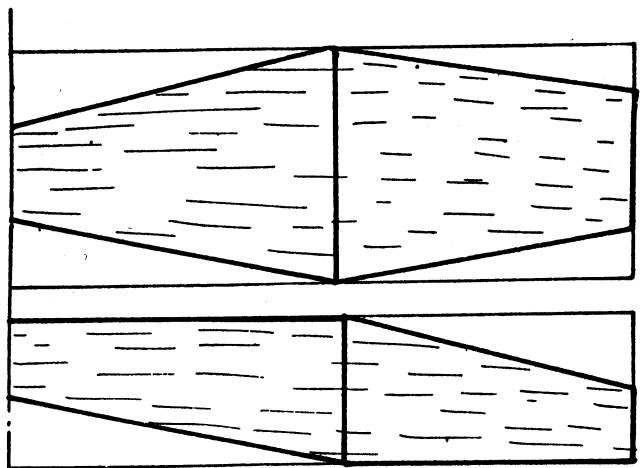

HALF PROP. BLOCK 6 1/2 x 1 1/4 x 3/4

CUT OUT CROSSES.

DOPE LARGE ONES ON WING AND SMALL ONES ON FUSELAGE.

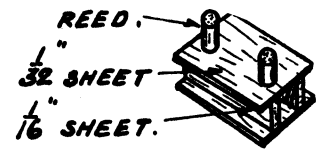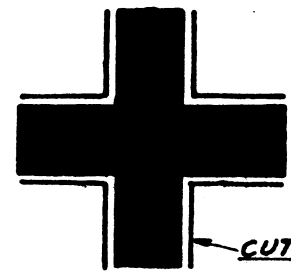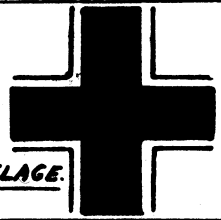

OIL COOLER

CUT ROUND BLACK LINE.

