


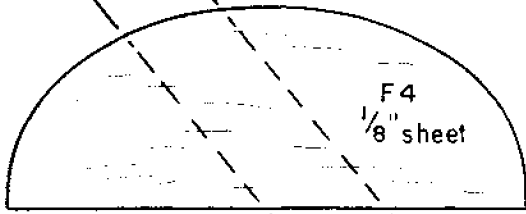


KWOD



Interplane strut
2 off. $\frac{1}{8}$ " ply




$\frac{3}{16}$ " sheet fin
Cement to
tailplane

Grain

F5 $\frac{1}{8}$ " ply


Chamfer

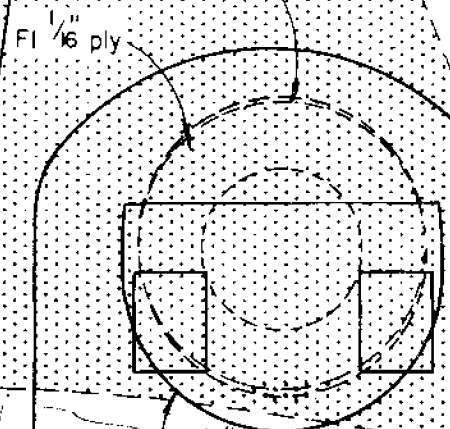

F2 $\frac{1}{4}$ " sheet

F3 $\frac{1}{8}$ " ply

Chamfer

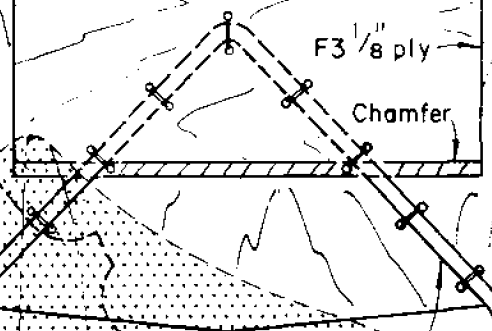

14 s.w.g. wire
U/C. Bind to F5

Grain

$\frac{3}{32}$ " sheet
tailplane tip fins

Top

