

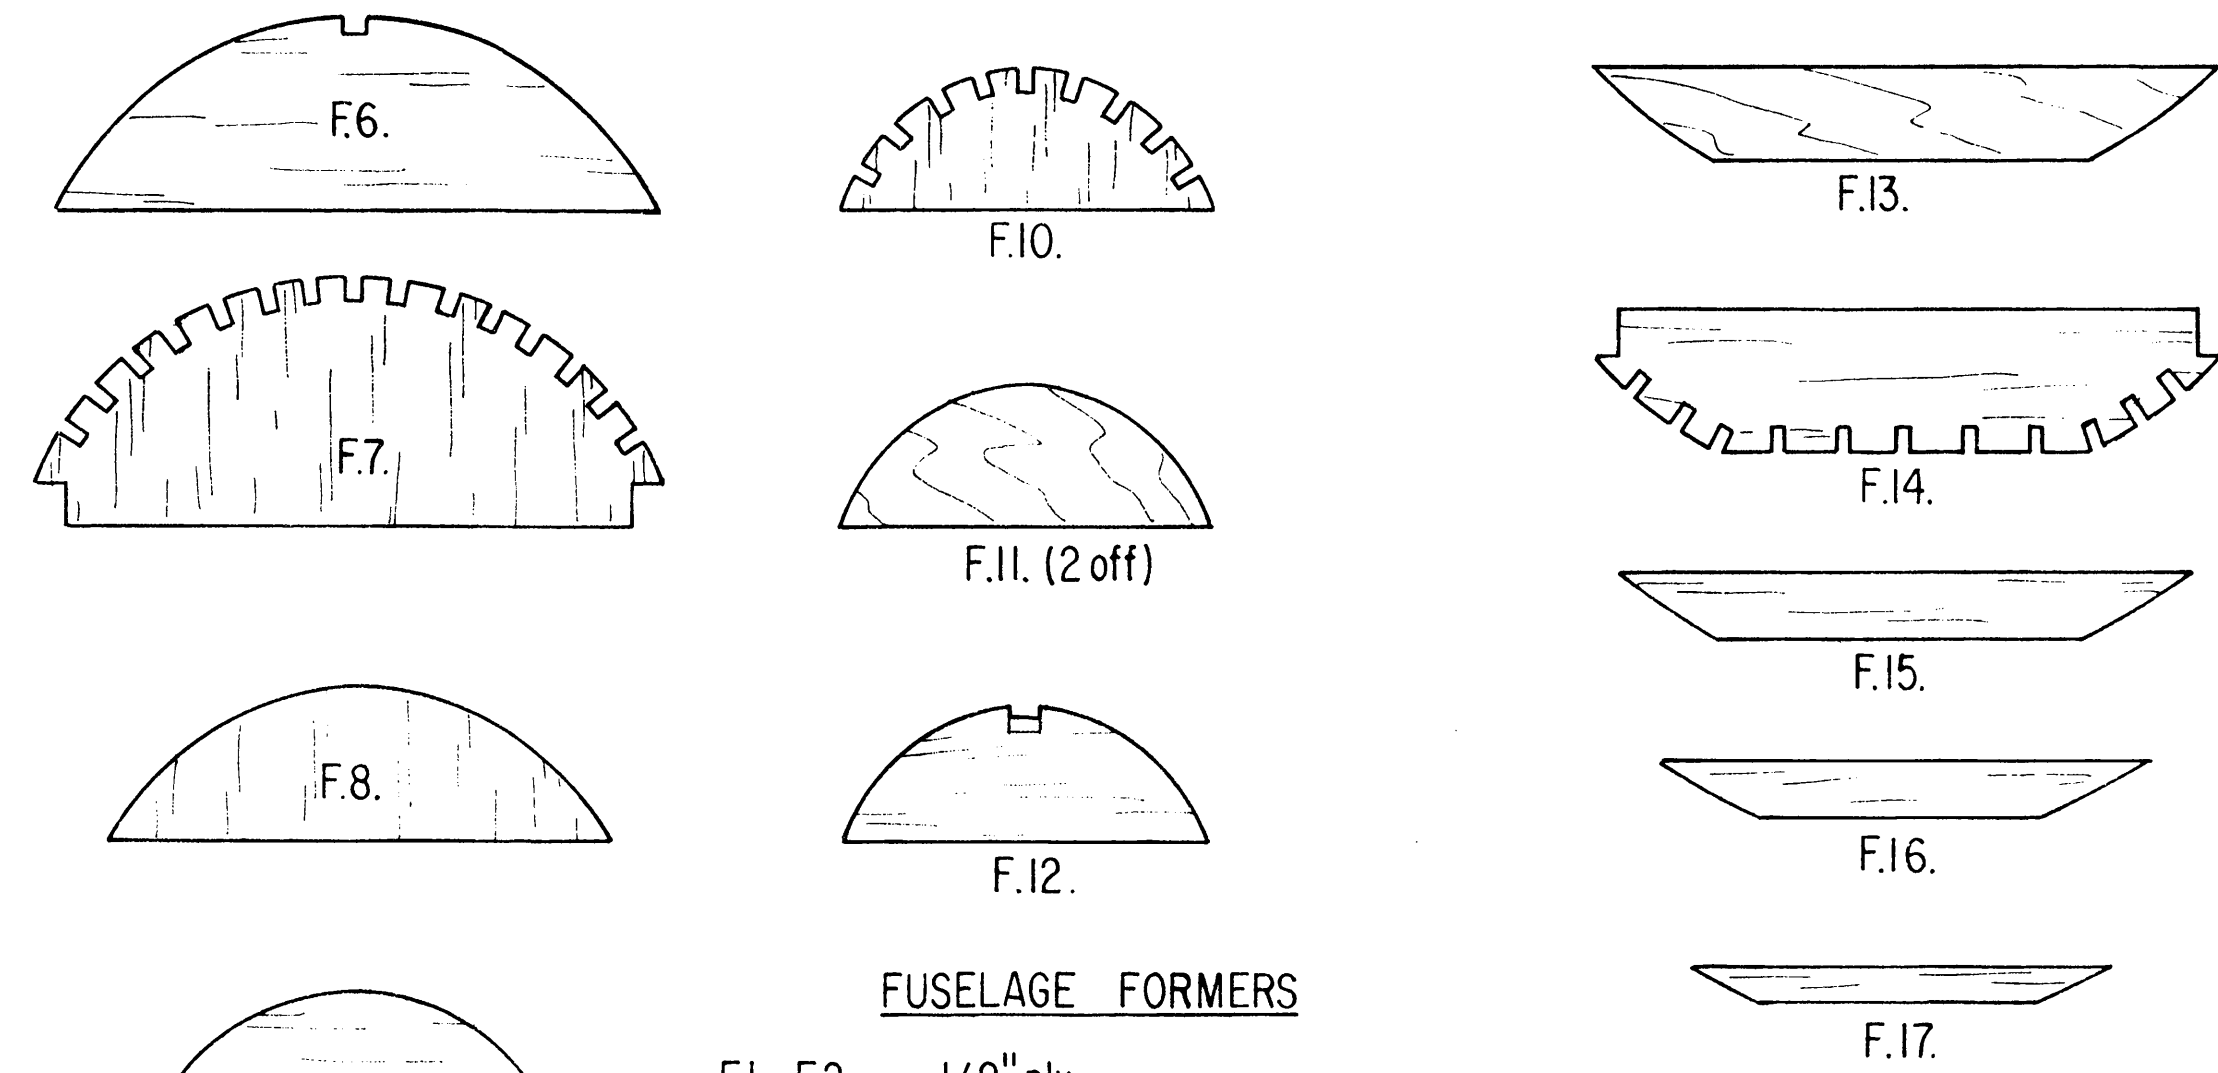
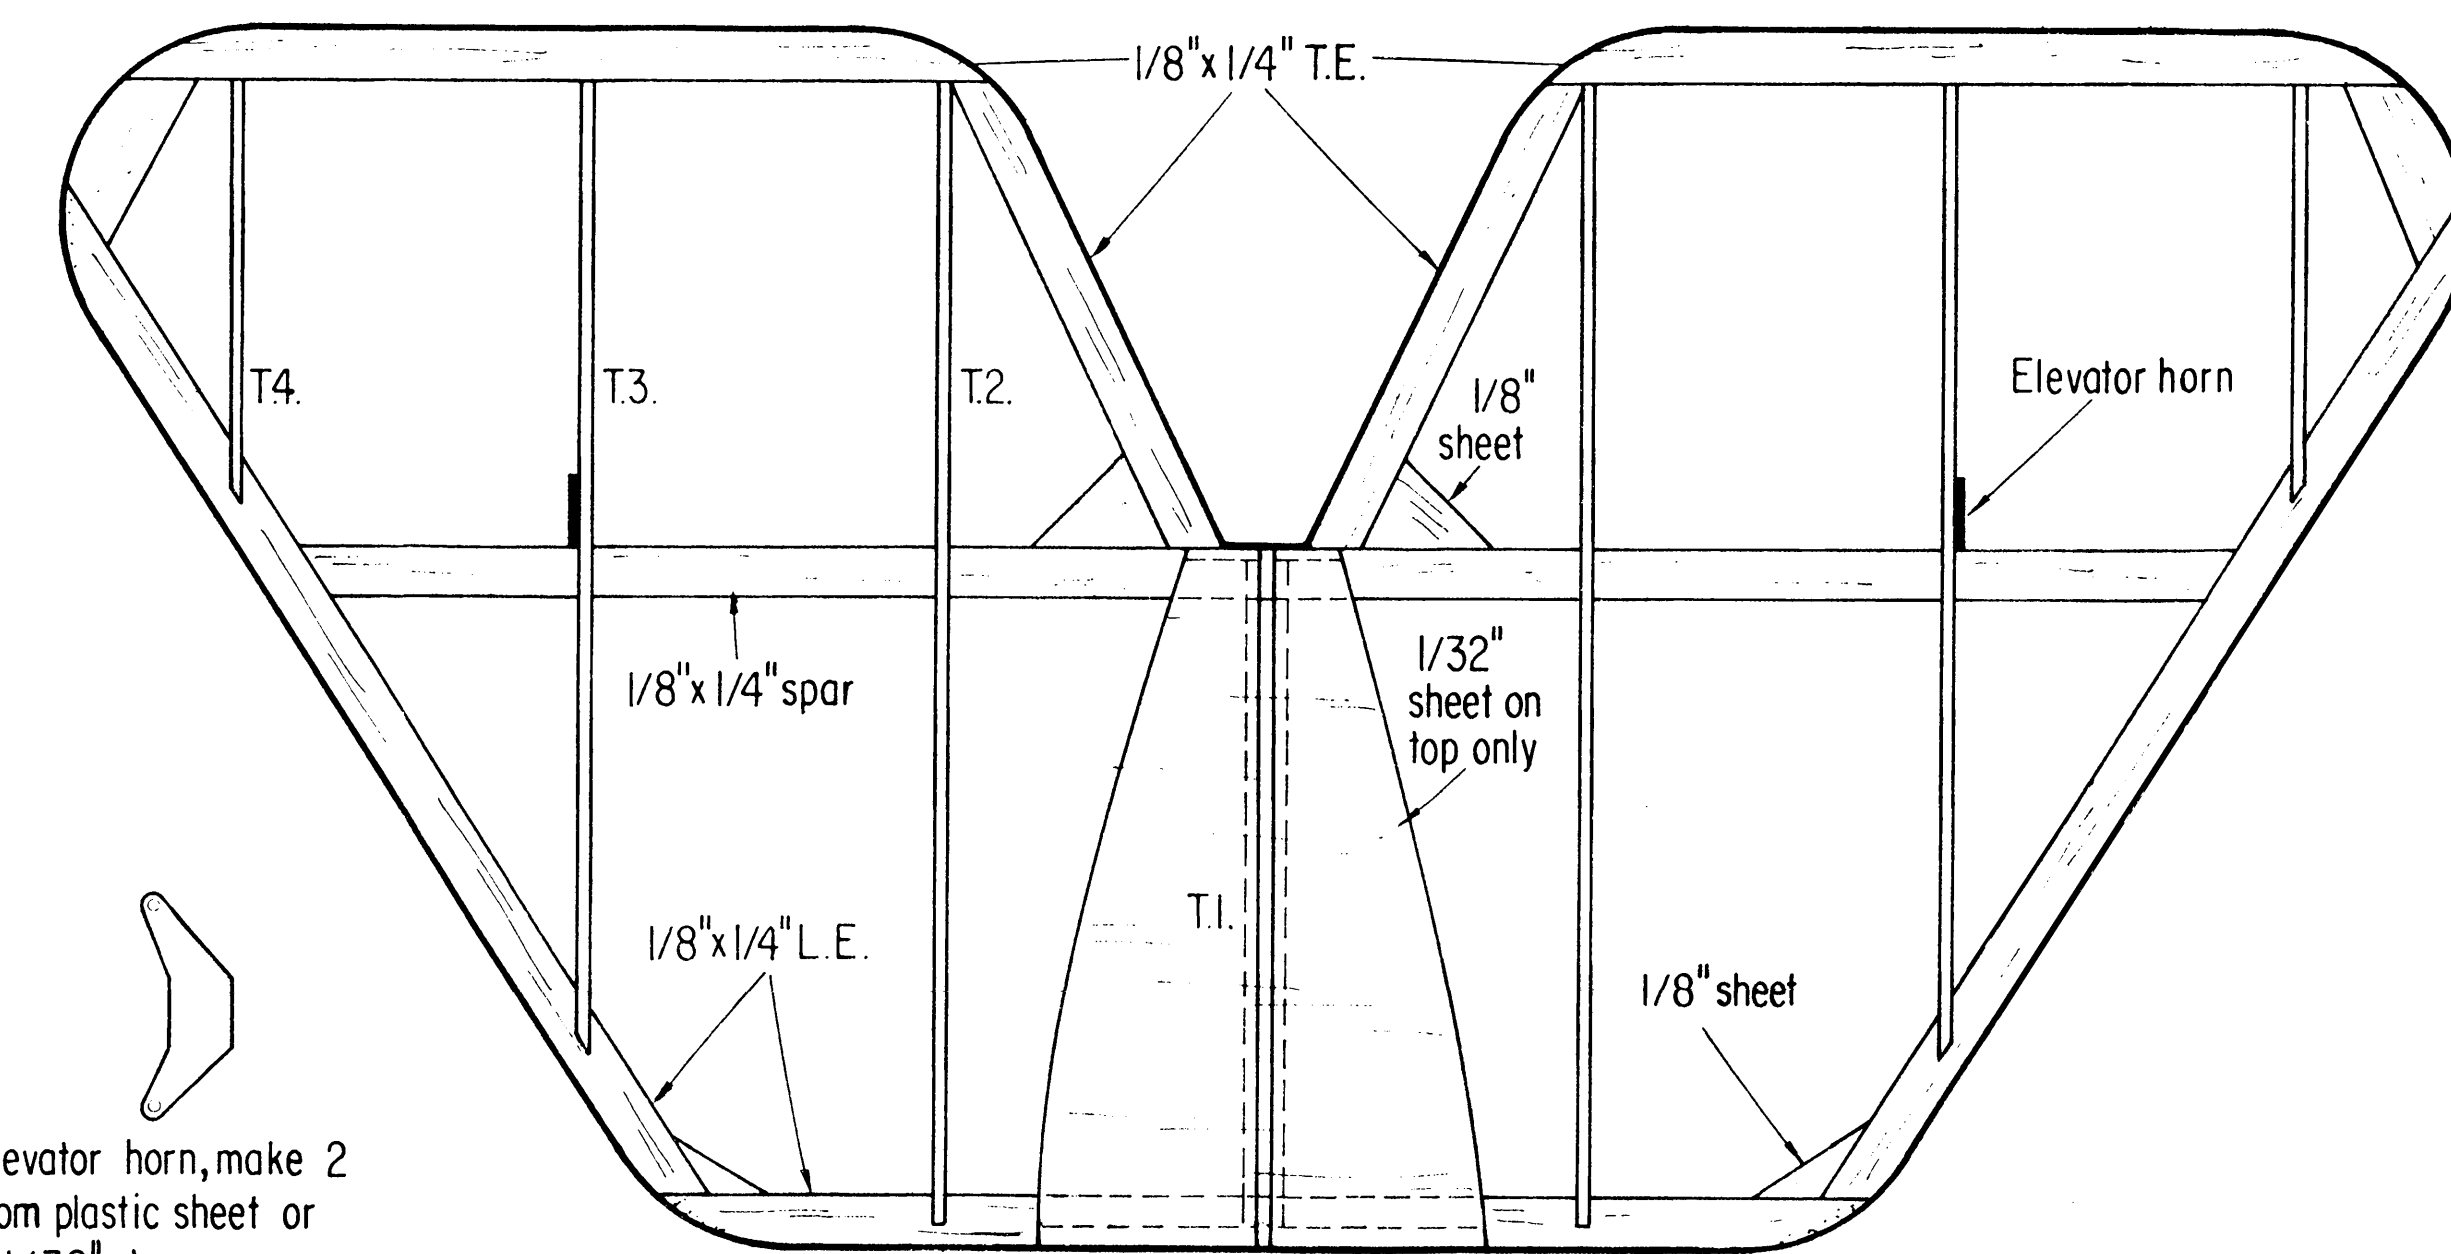
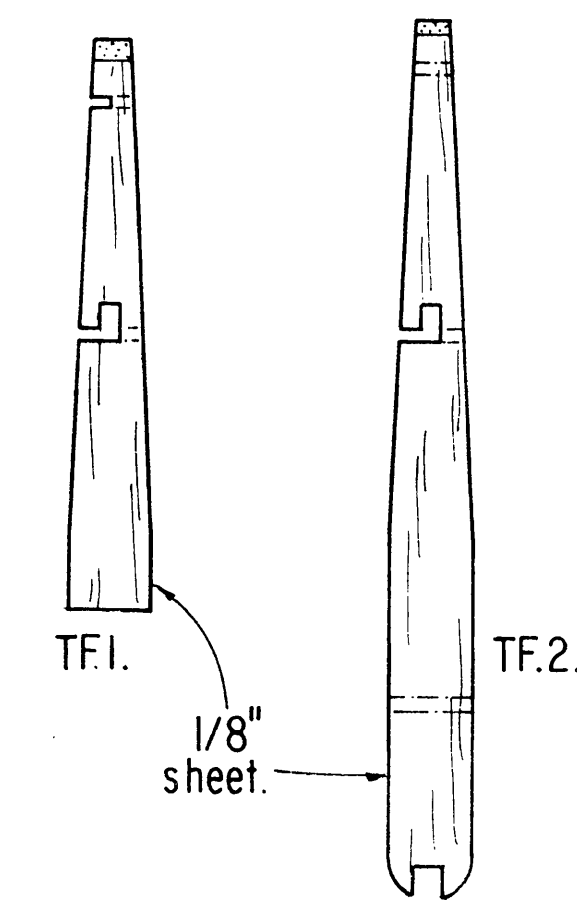
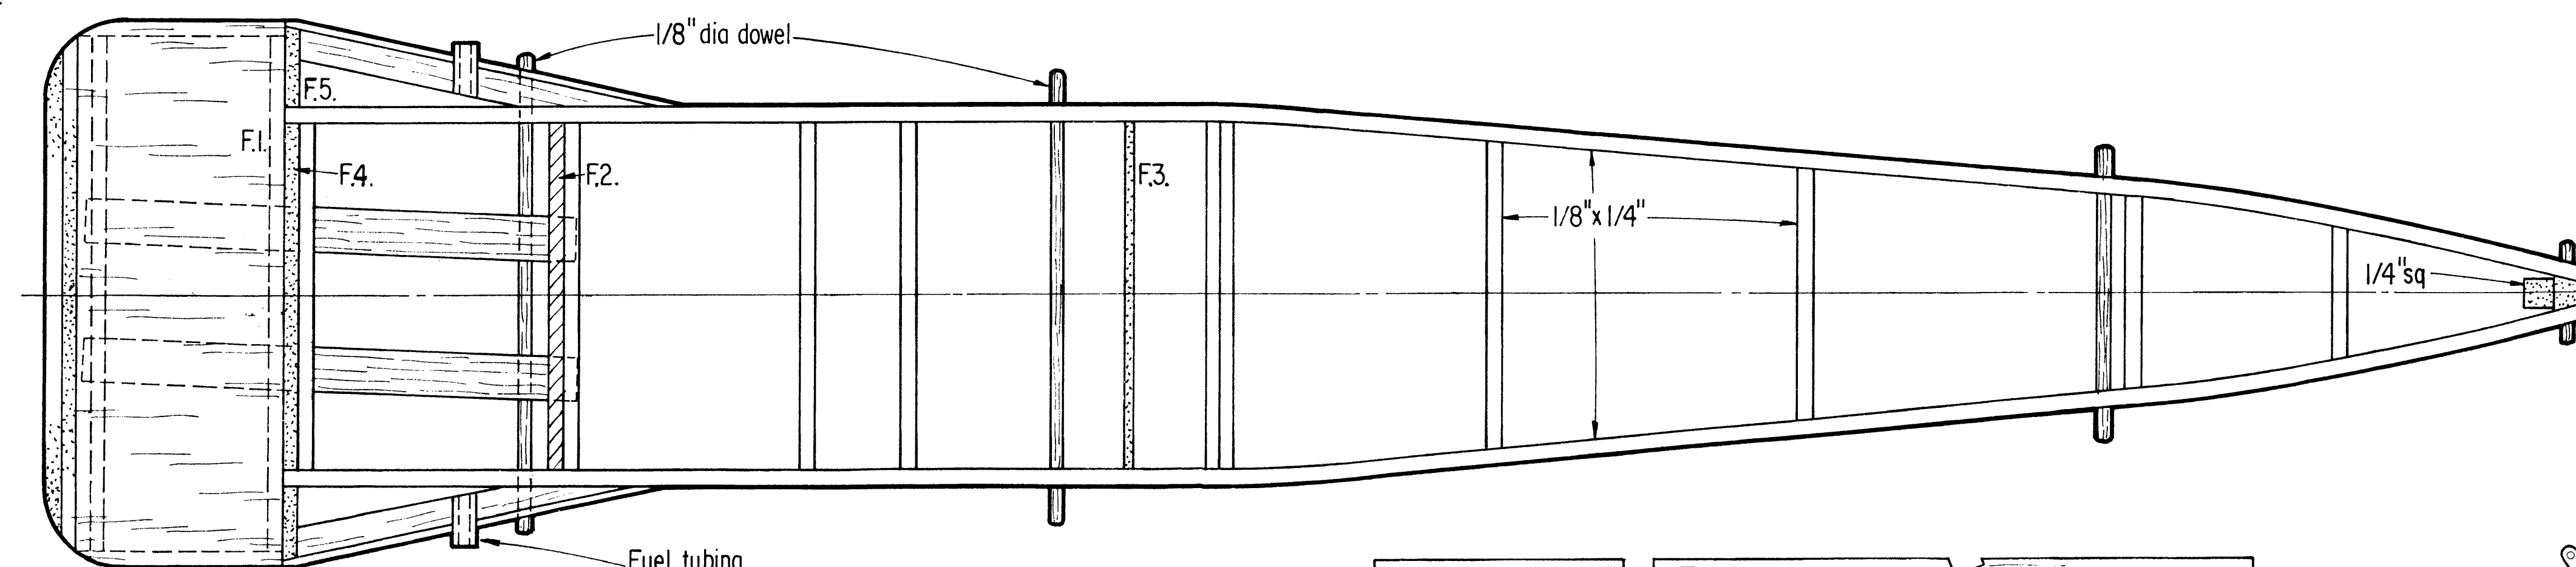
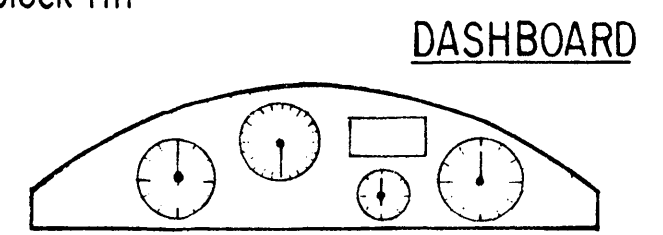
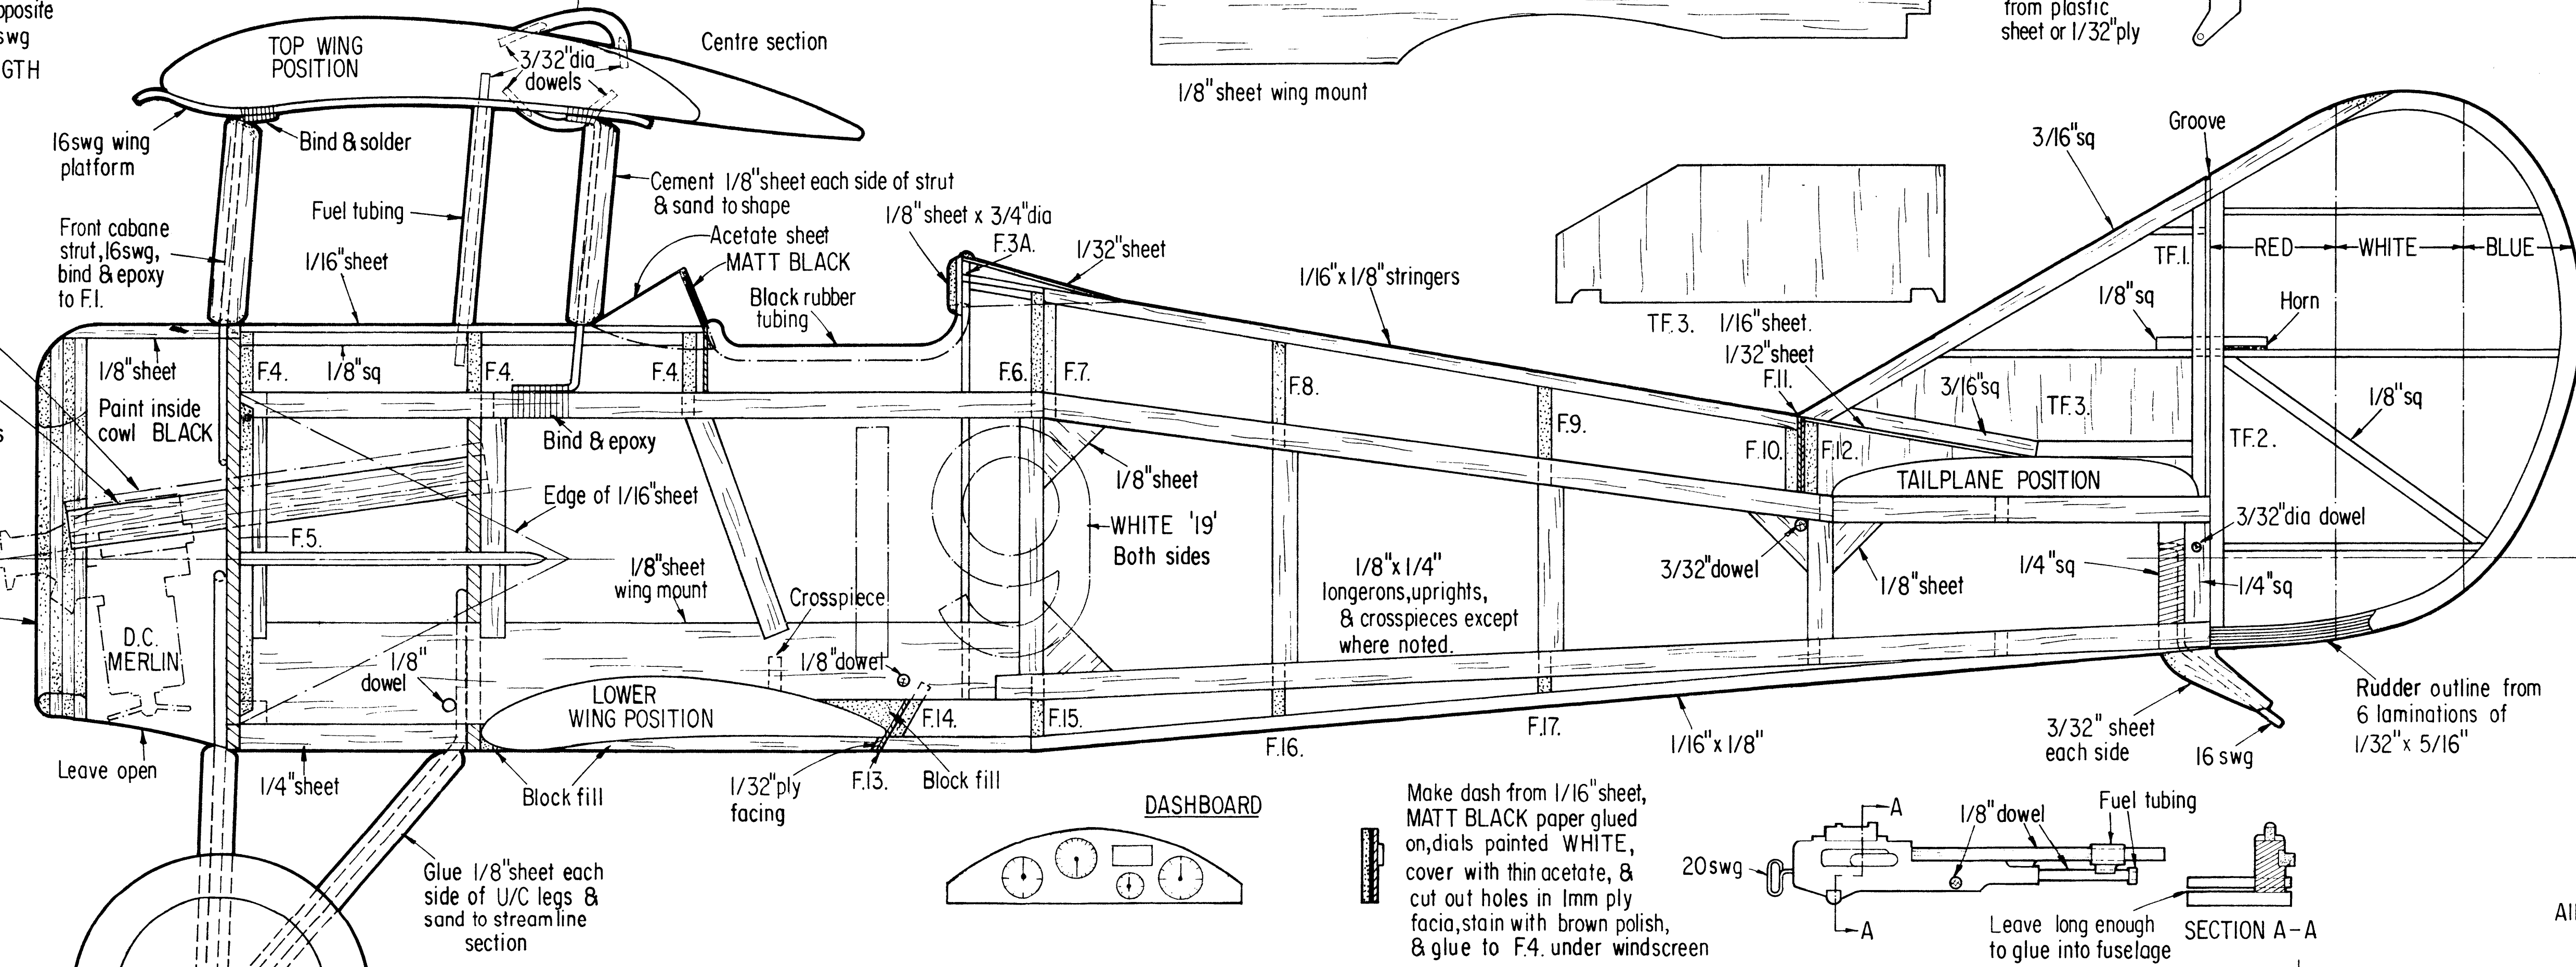
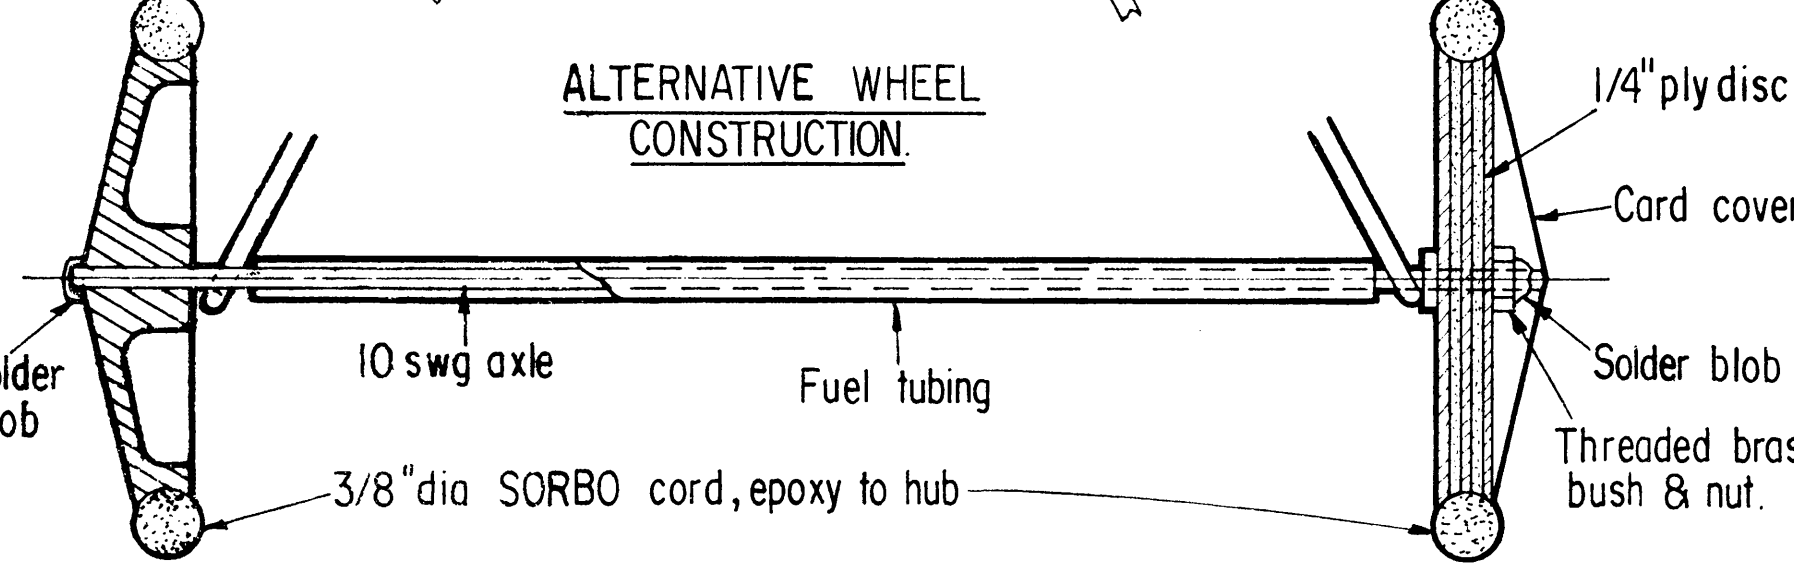


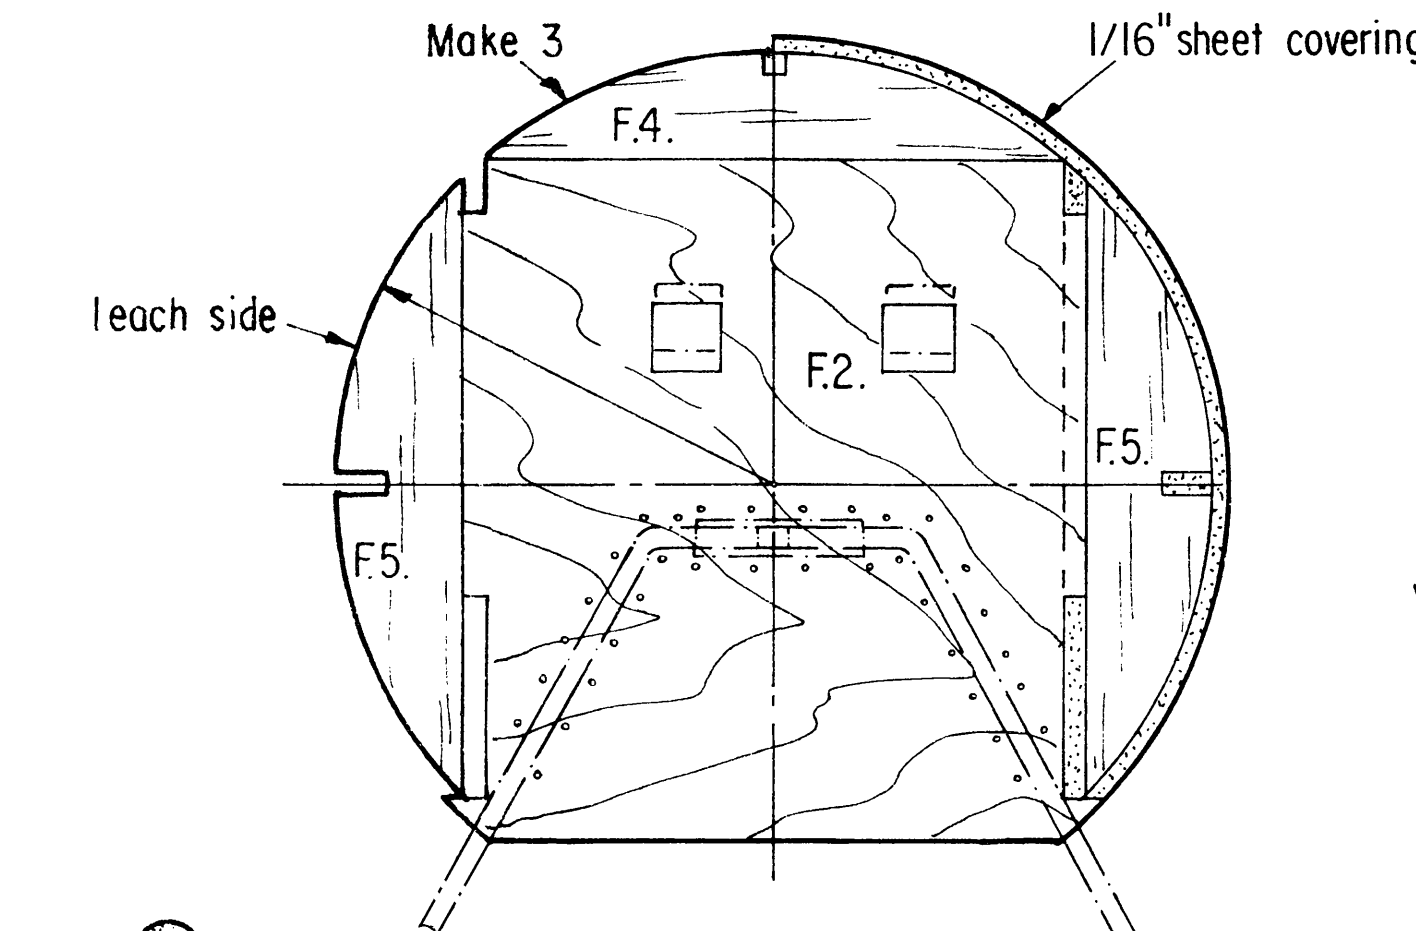





### FUSELAGE FORMERS

F.I., F.2. — 1/8" ply  
F.3. — 1/16" sheet.  
F.4,5,6,7,8,9,  
10,12,14,15,  
16,17. — 1/8" sheet.  
F.II(2), F.13. — 1/32" ply

1/8" x 1/4" L.E.

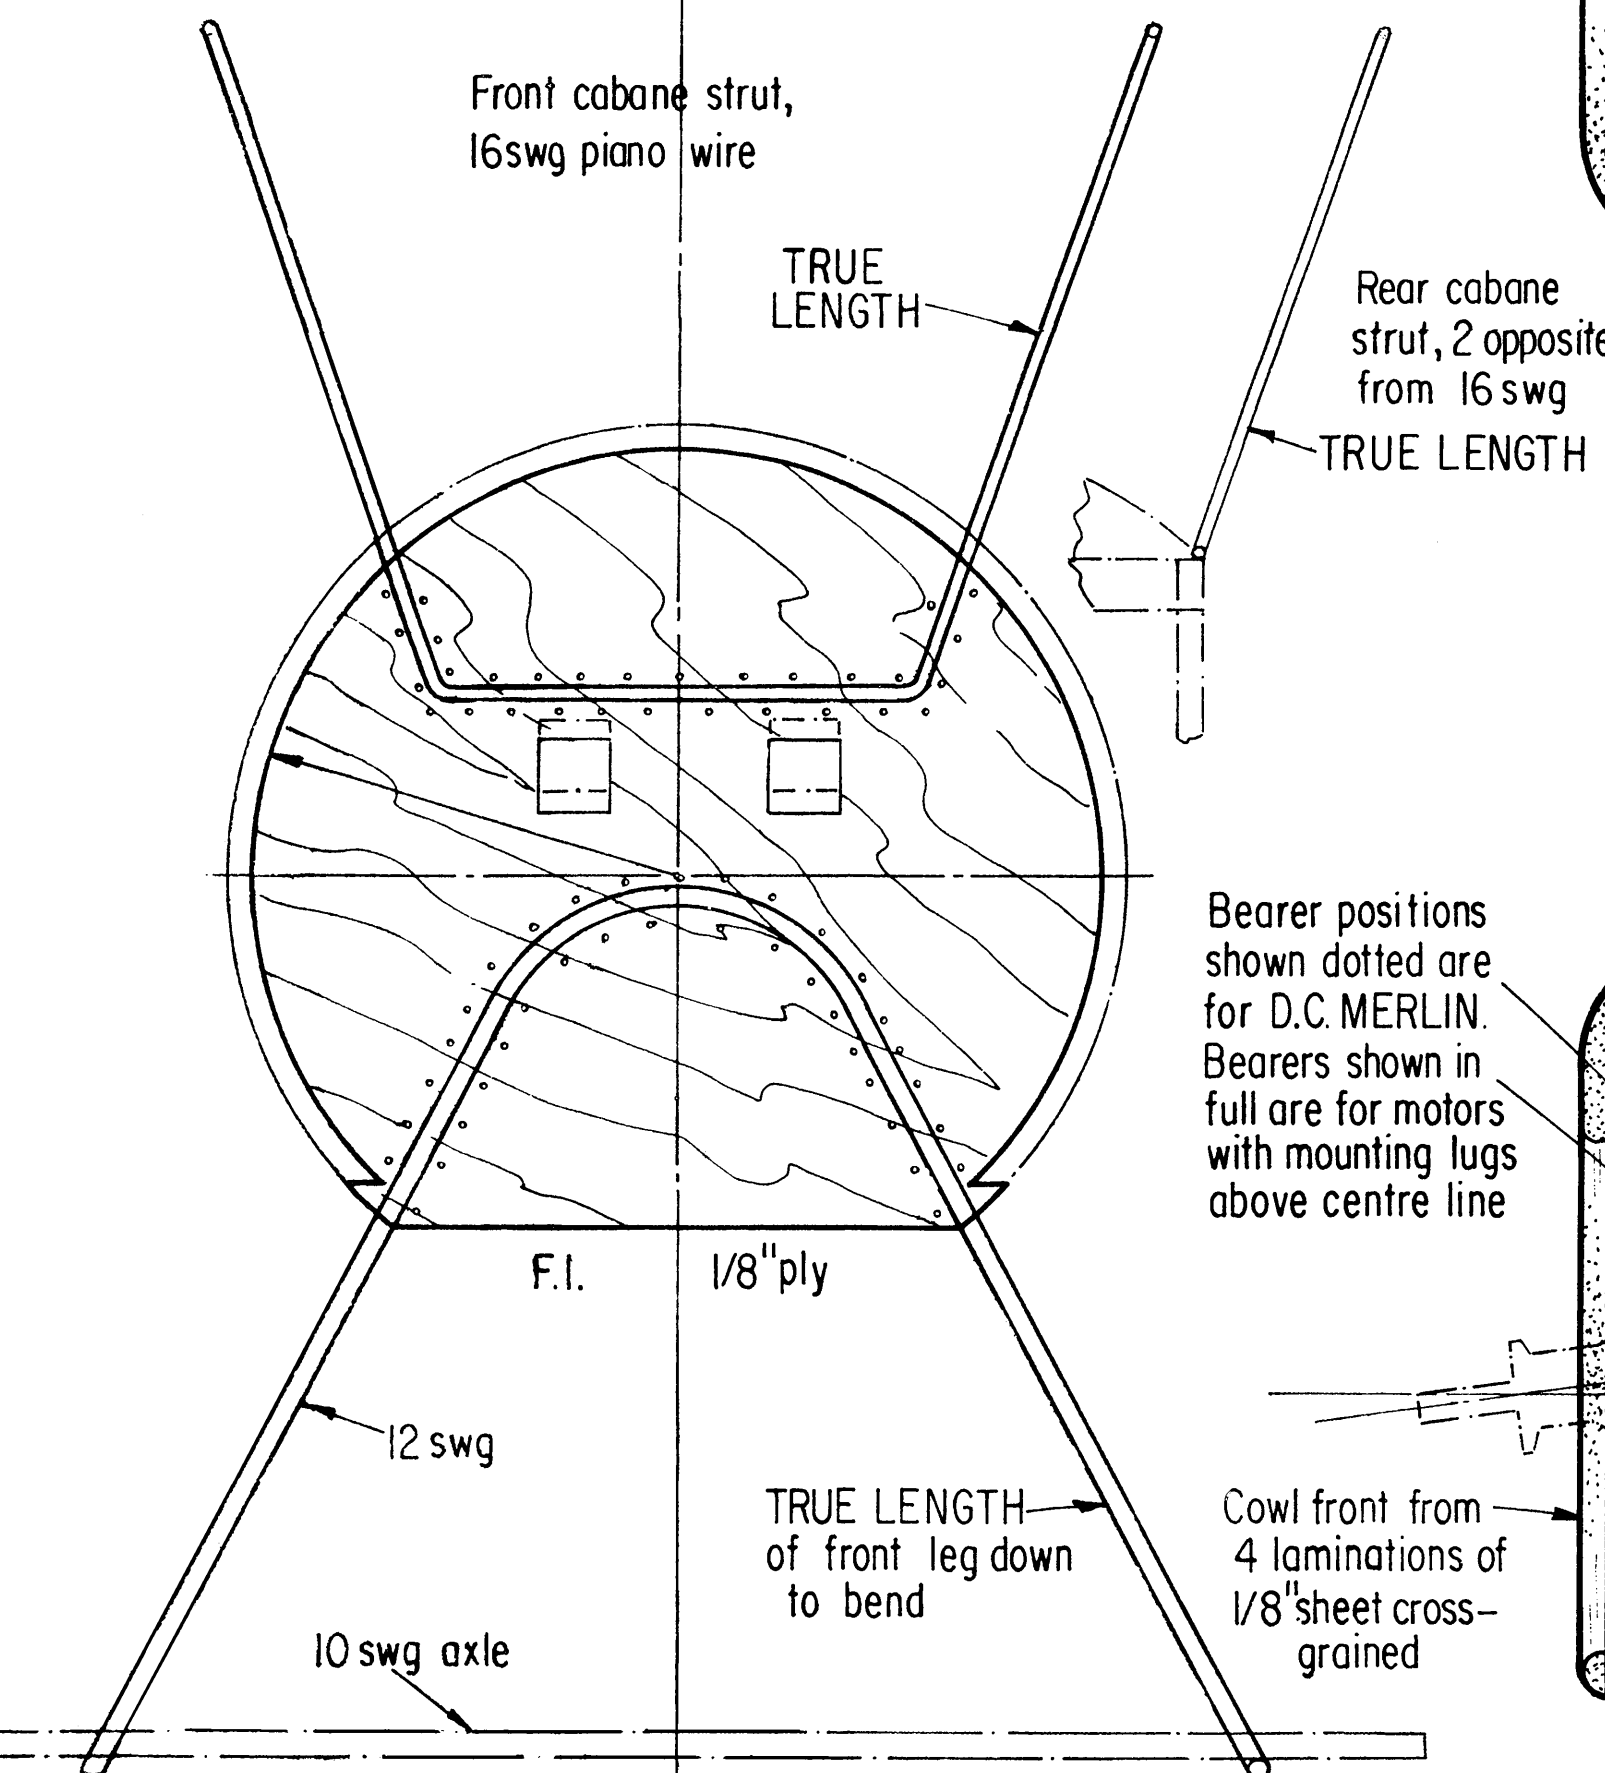

Make dash from 1/16" sheet,  
MATT BLACK paper glued  
on, dials painted WHITE,  
cover with thin acetate, &  
cut out holes in Imm ply  
facia, stain with brown polish,  
& glue to F.4. under windscreen

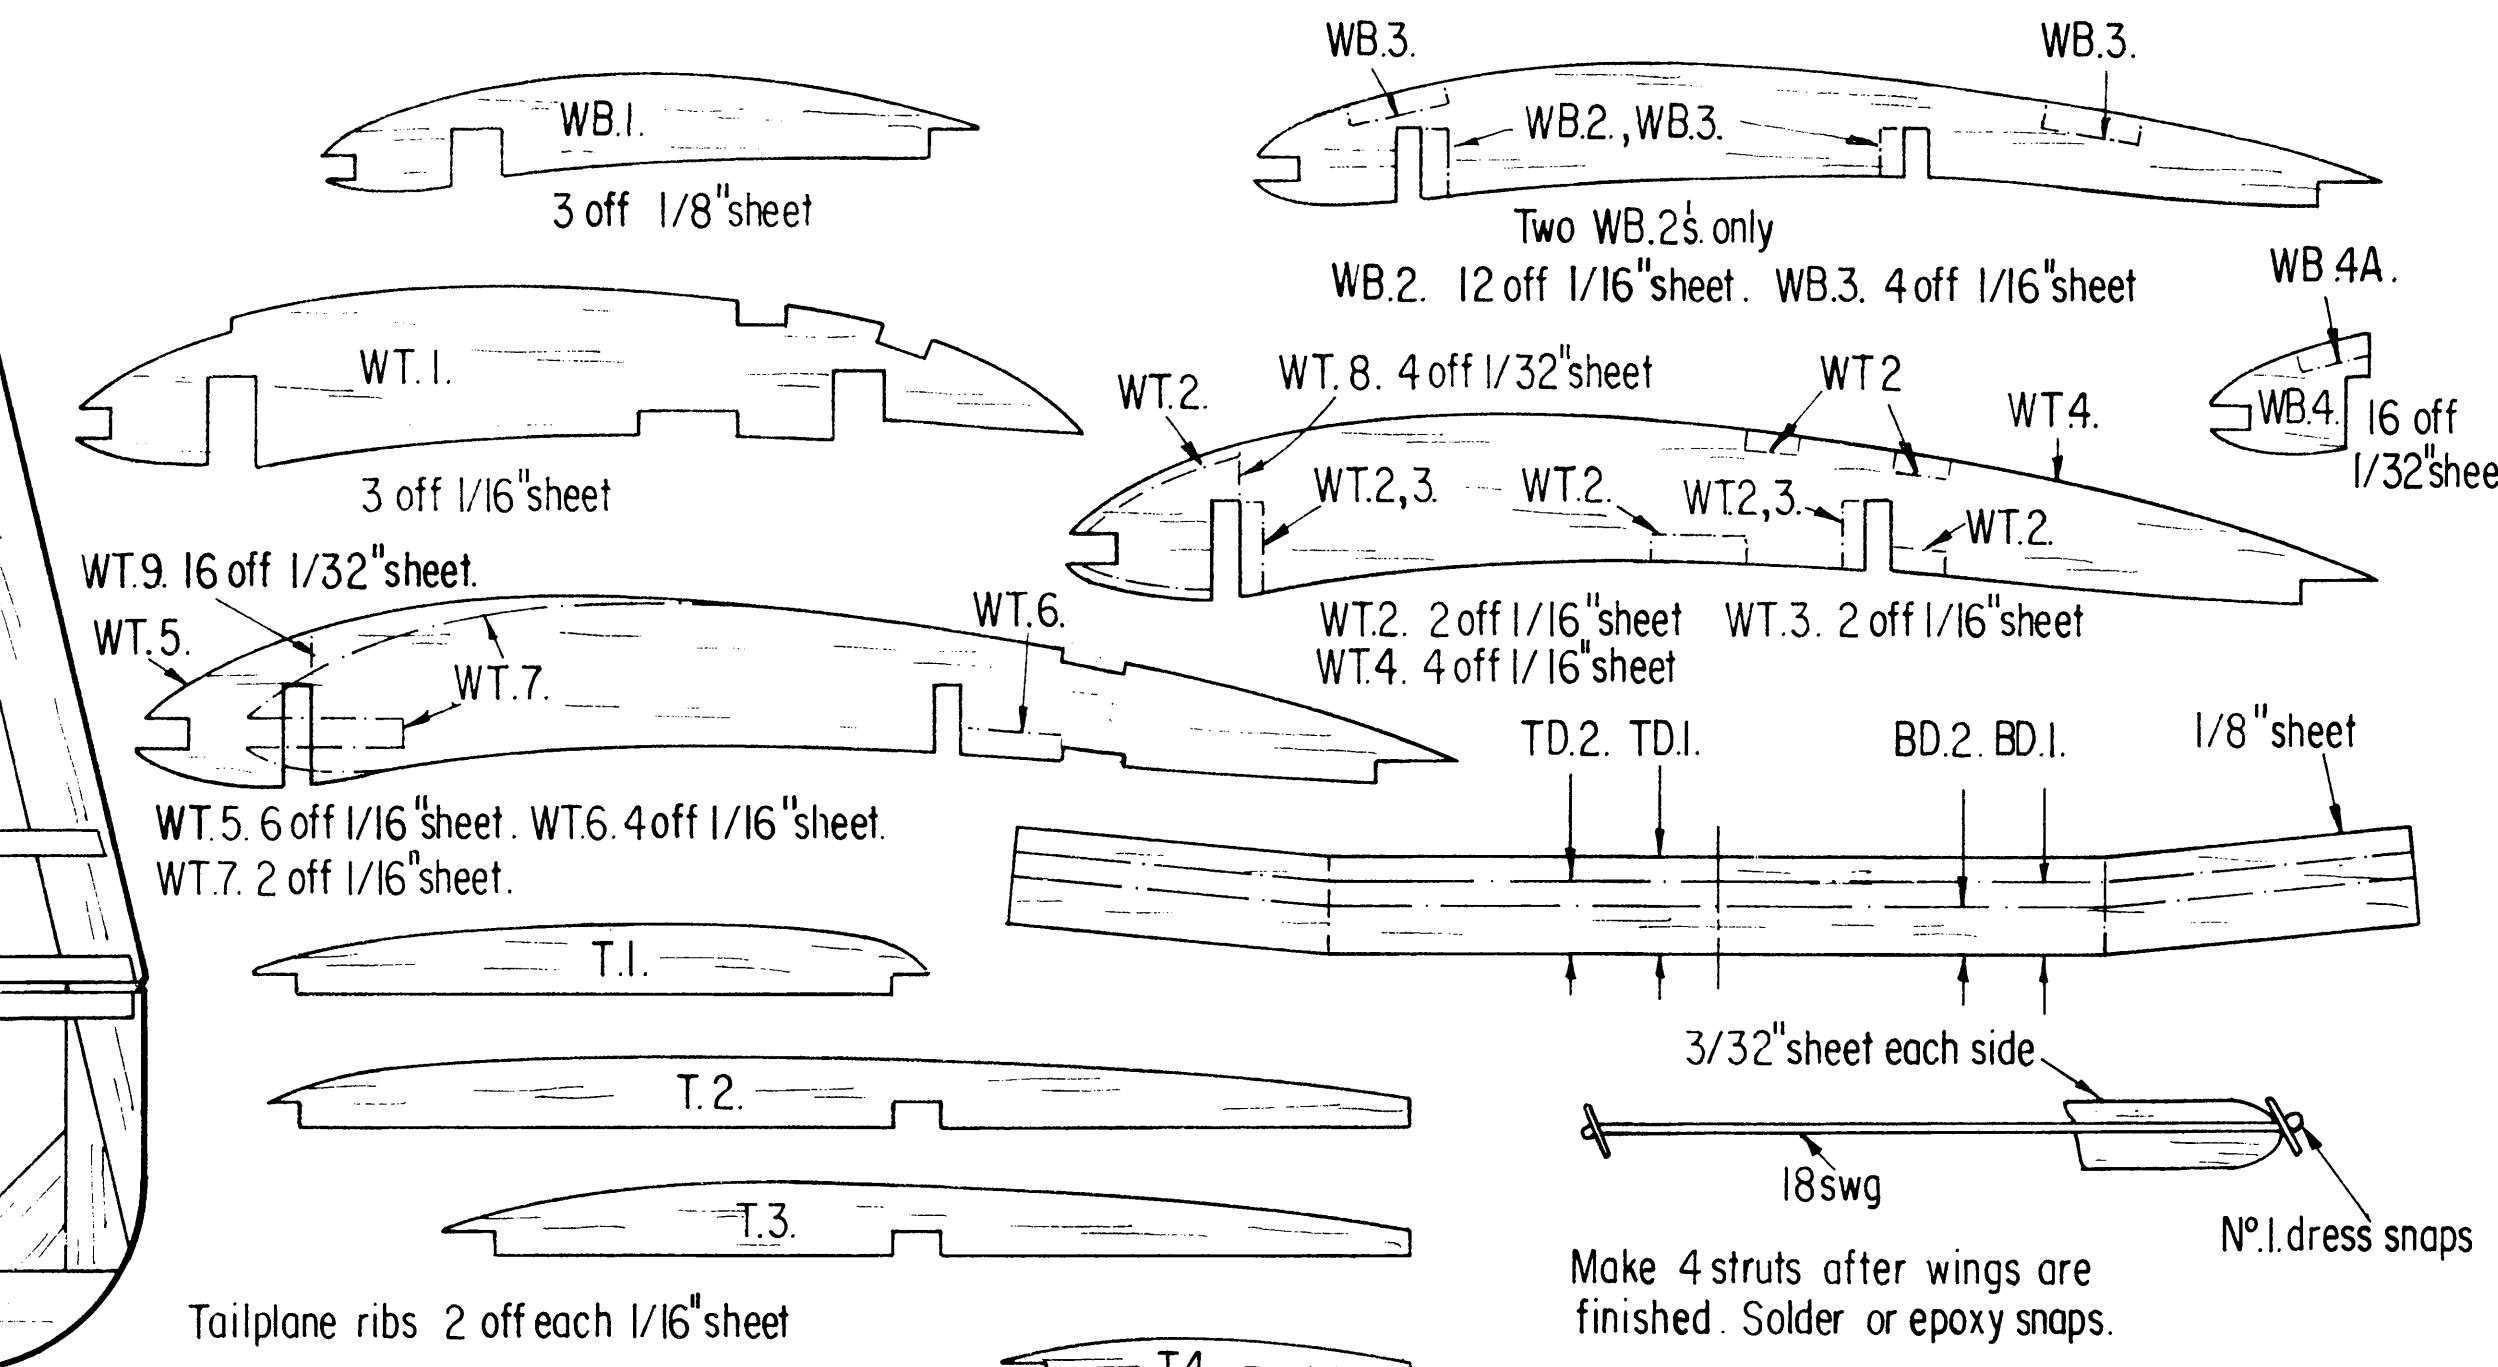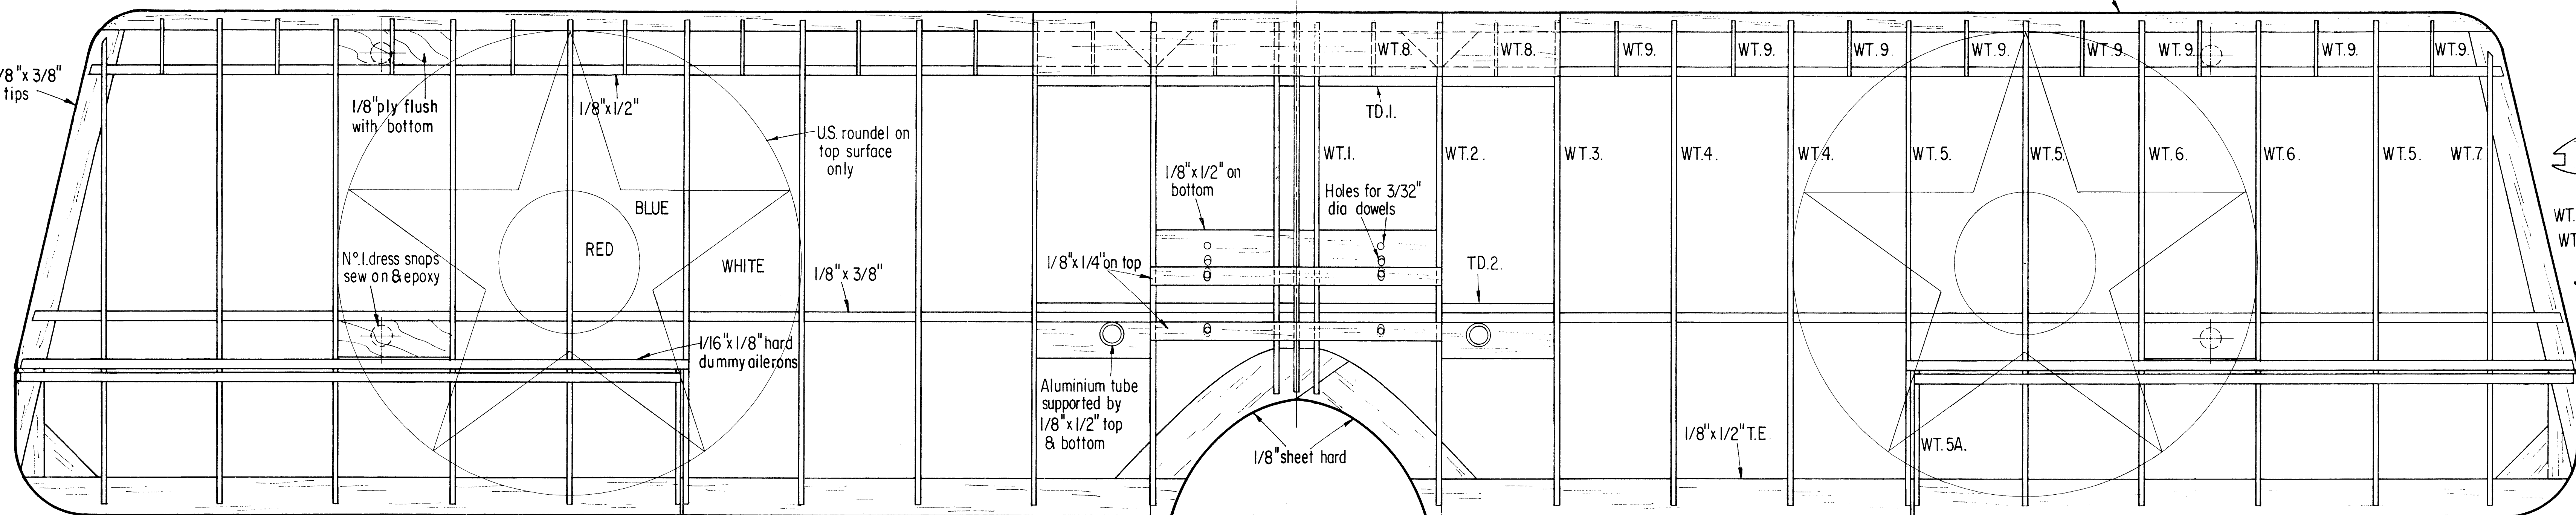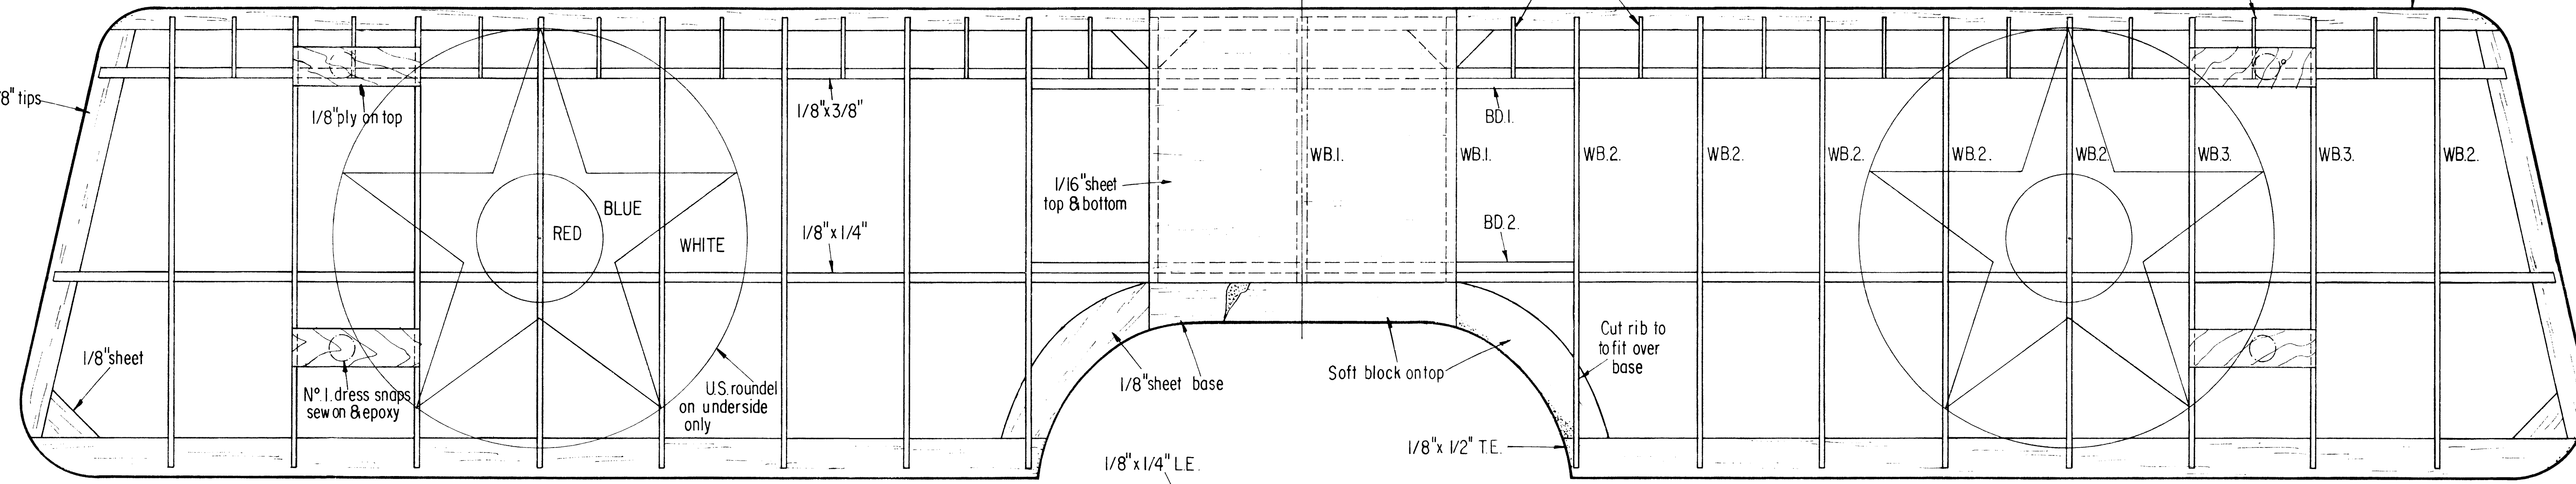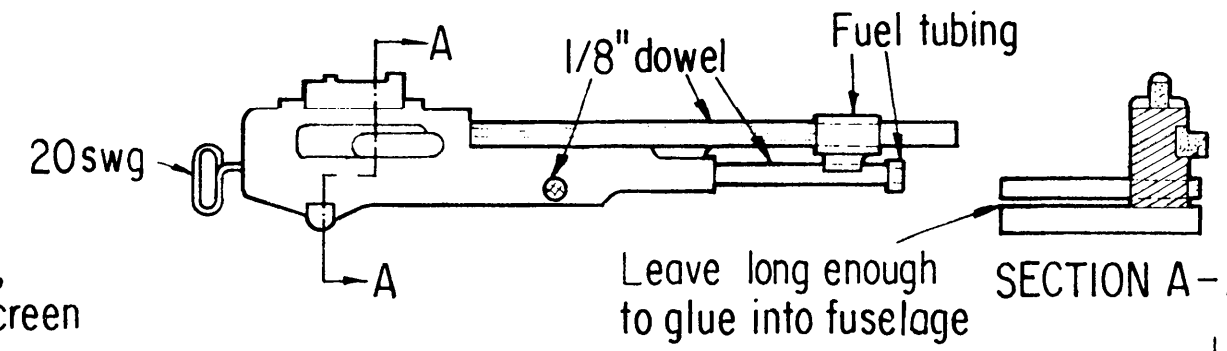

WHEN DOPING WINGS PUT IN APPROX 1.5° WASHOUT. ALL TIPS.