


WING ASSEMBLY: MOUNT TOP WING ON CABANE STRUTS - CEMENT OUTER STRUTS UNDER TOP WING - BEVEL LOWER WING EDGES TO PROPER ANGLE - CEMENT TO FUSELAGE - FASTEN LOWER STRUT ENDS. FOLLOW SEQUENCE NUMBERS ON FRONT VIEW.

MAKE OUTER PANELS ONLY FOR LOWER WINGS

PROP. BLOCK: 1" X 1 1/4" X 6 3/4"

DH Moth

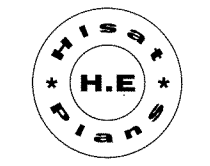

Thomas