

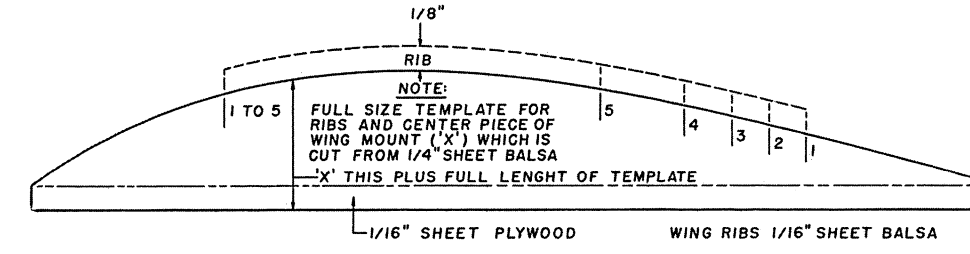
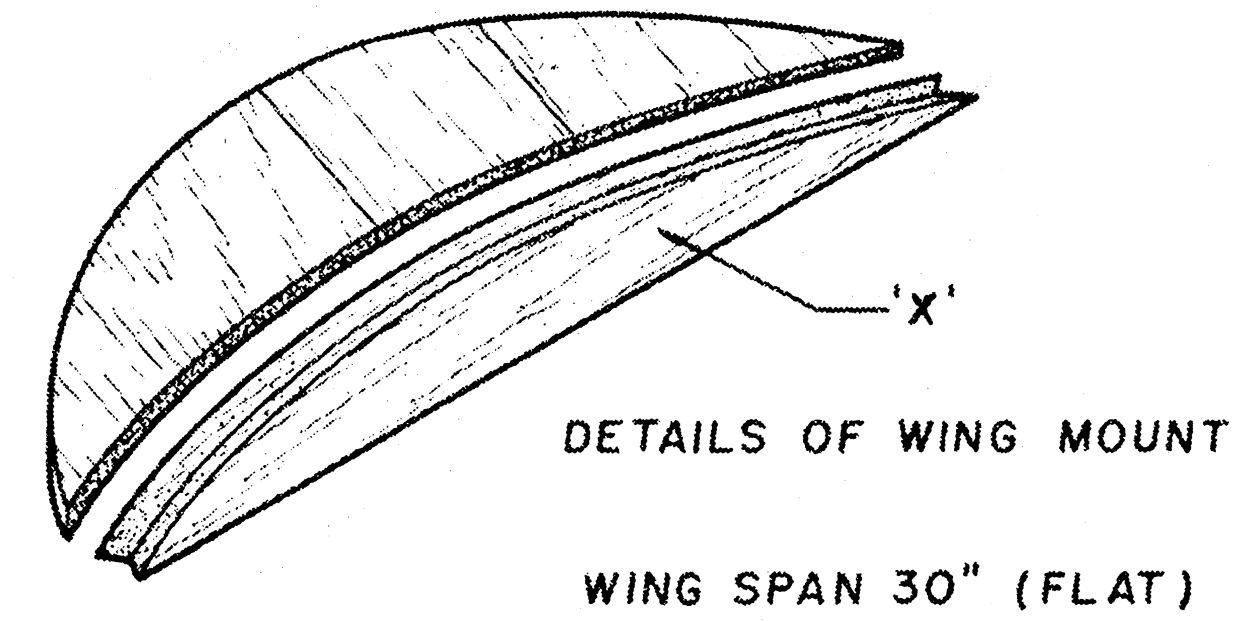
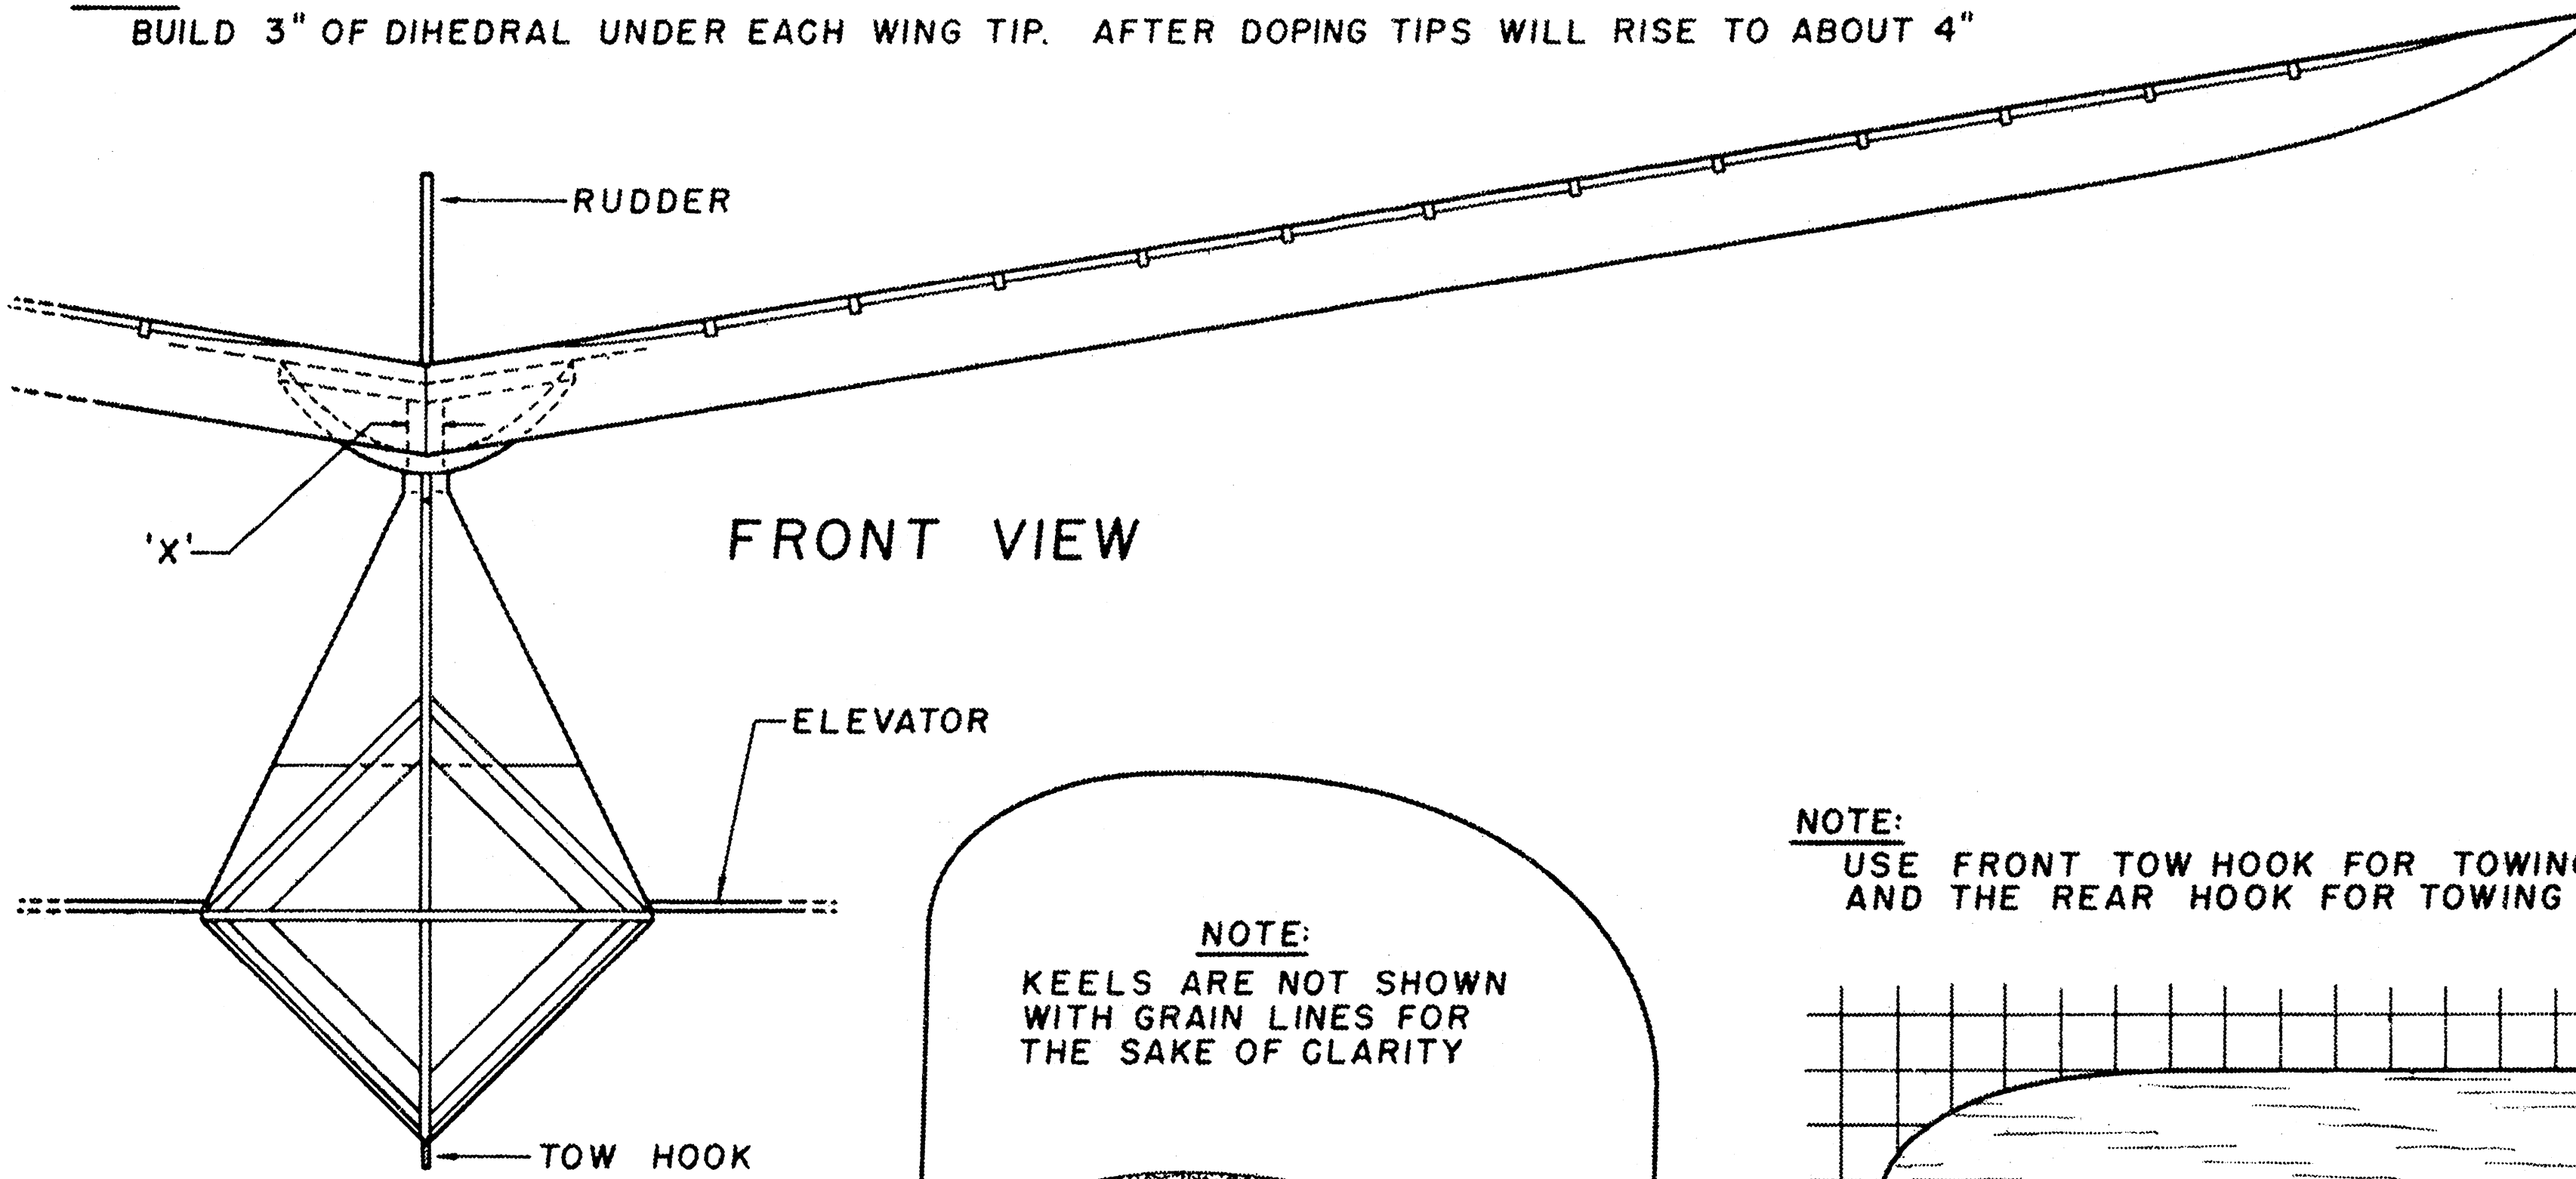


NOTE:
 BUILD 3" OF DIHEDRAL UNDER EACH WING TIP. AFTER DOPING TIPS WILL RISE TO ABOUT 4"

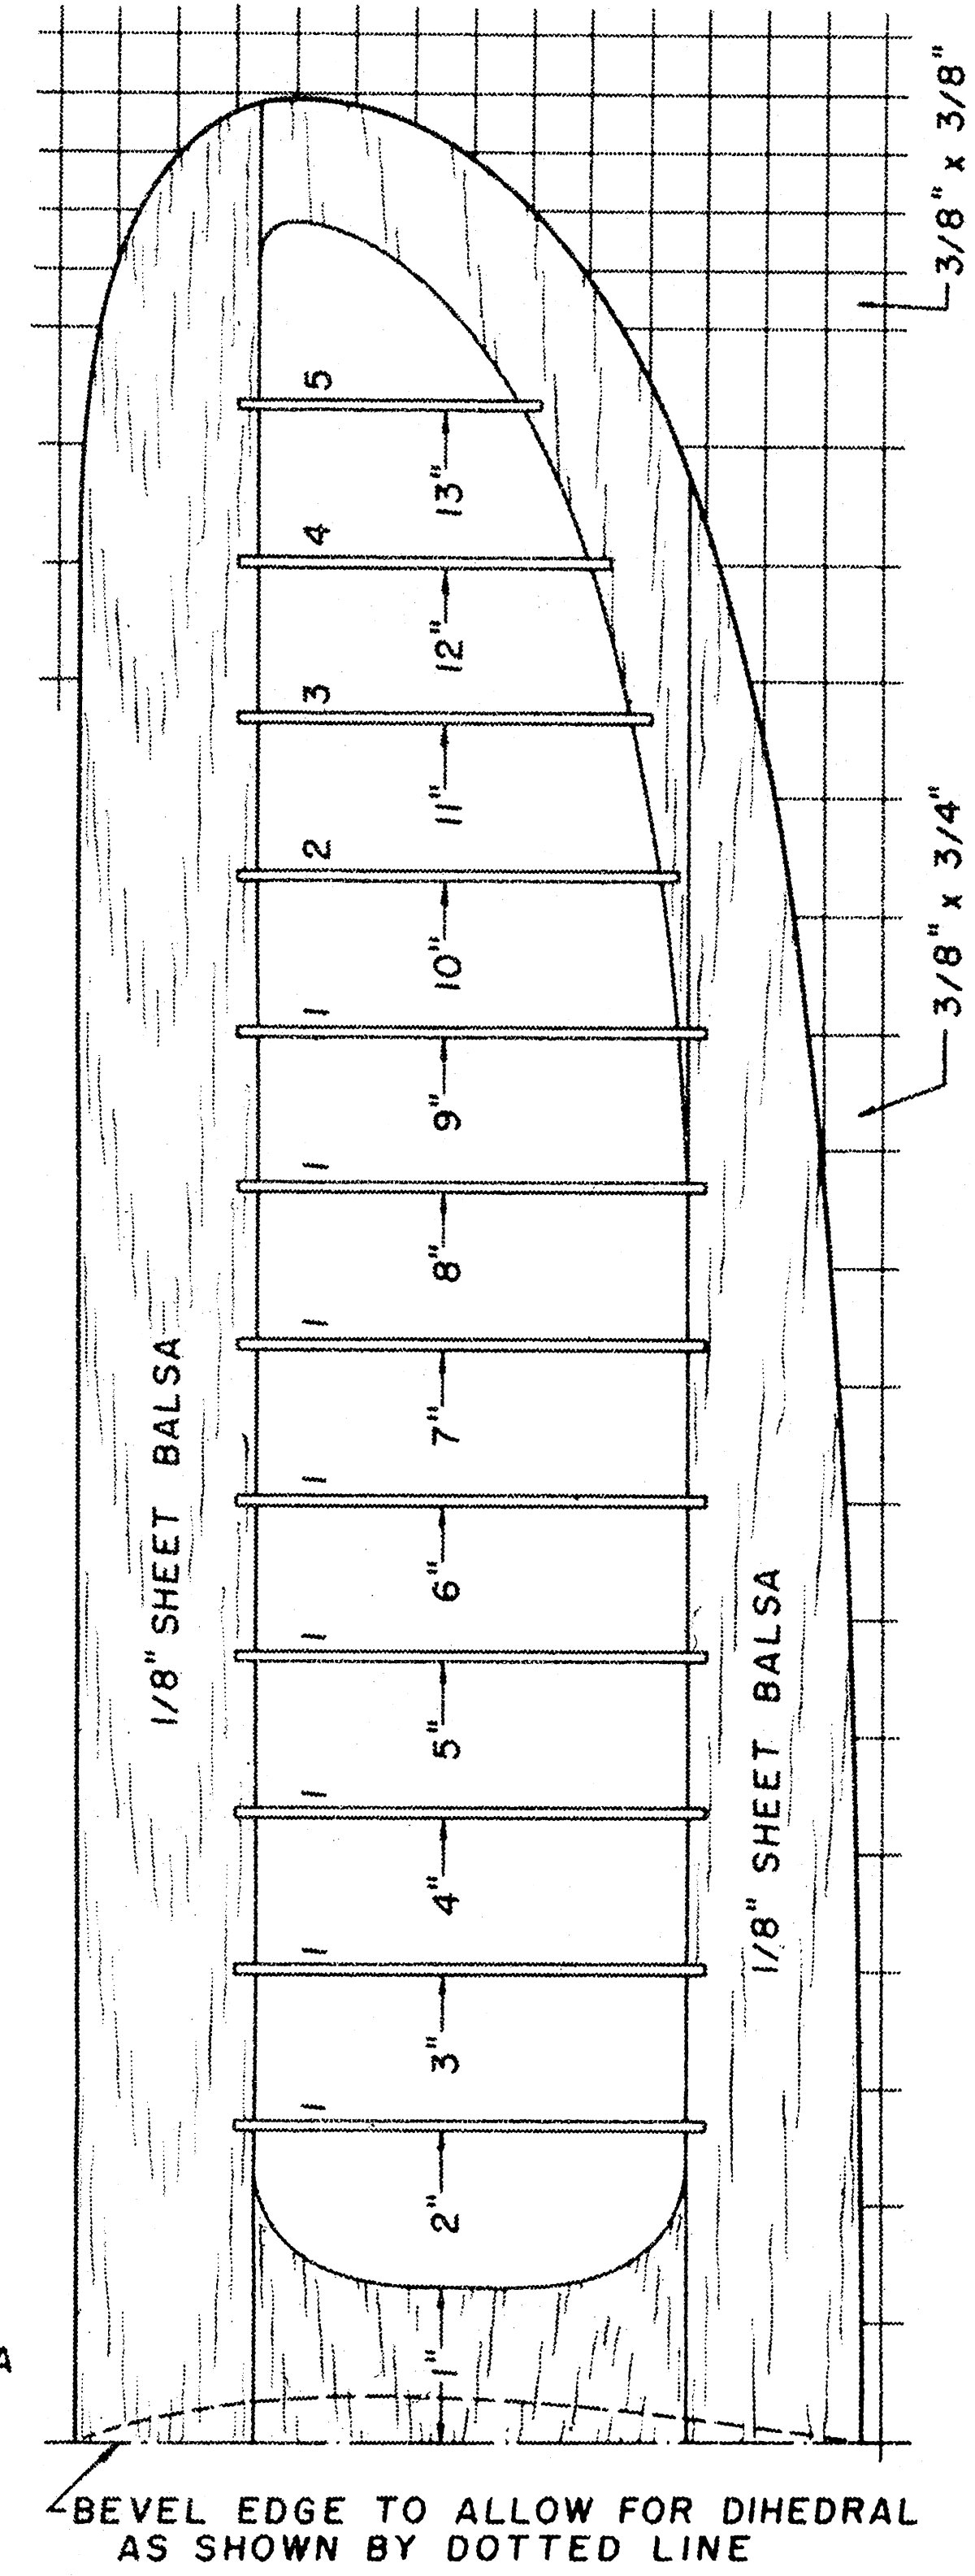


NOTE:
 USE FRONT TOW HOOK FOR TOWING IN WINDY WEATHER AND THE REAR HOOK FOR TOWING IN CALM WEATHER

NOTE:
 KEELS ARE NOT SHOWN WITH GRAIN LINES FOR THE SAKE OF CLARITY

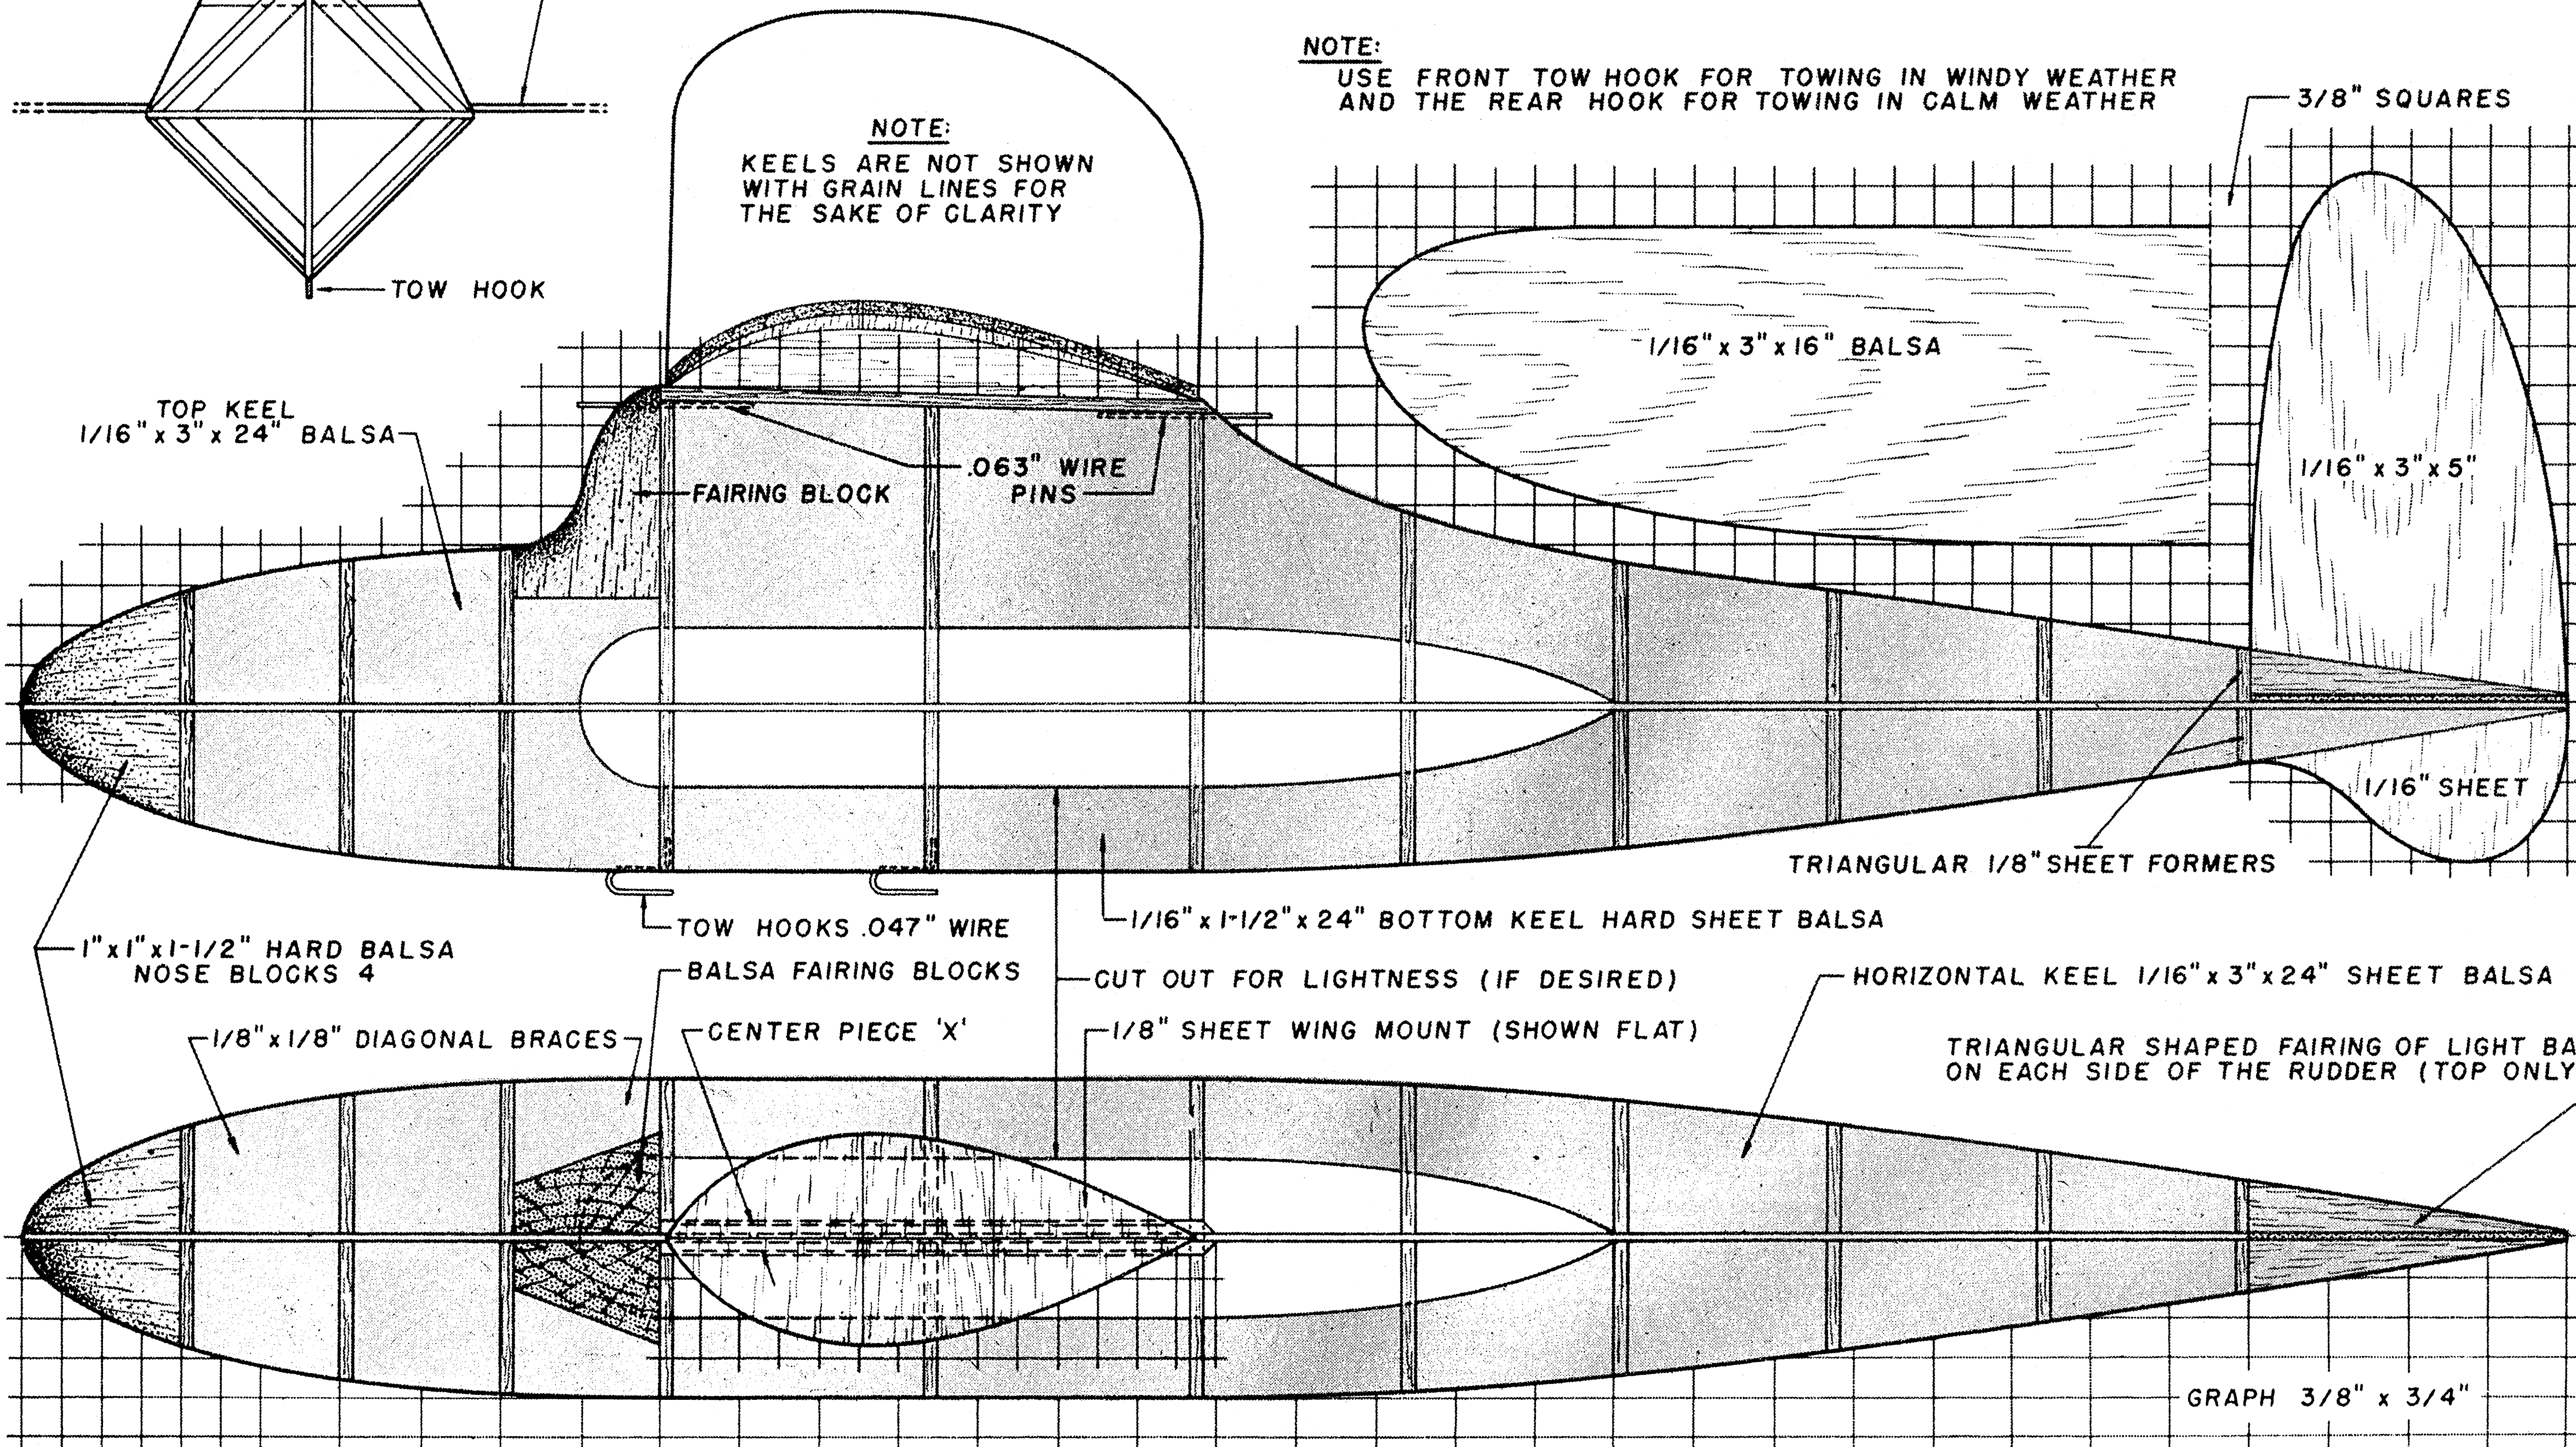

SCALE: 1" = 3"

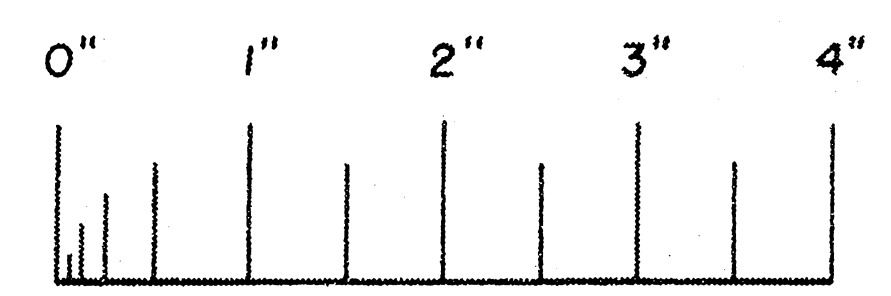

DESIGNED BY JERRY BROFMAN

PLANS DRAWN BY Jay Thomas Holmes