


KIT No. 196

CRUSADER

SHEET No. 2

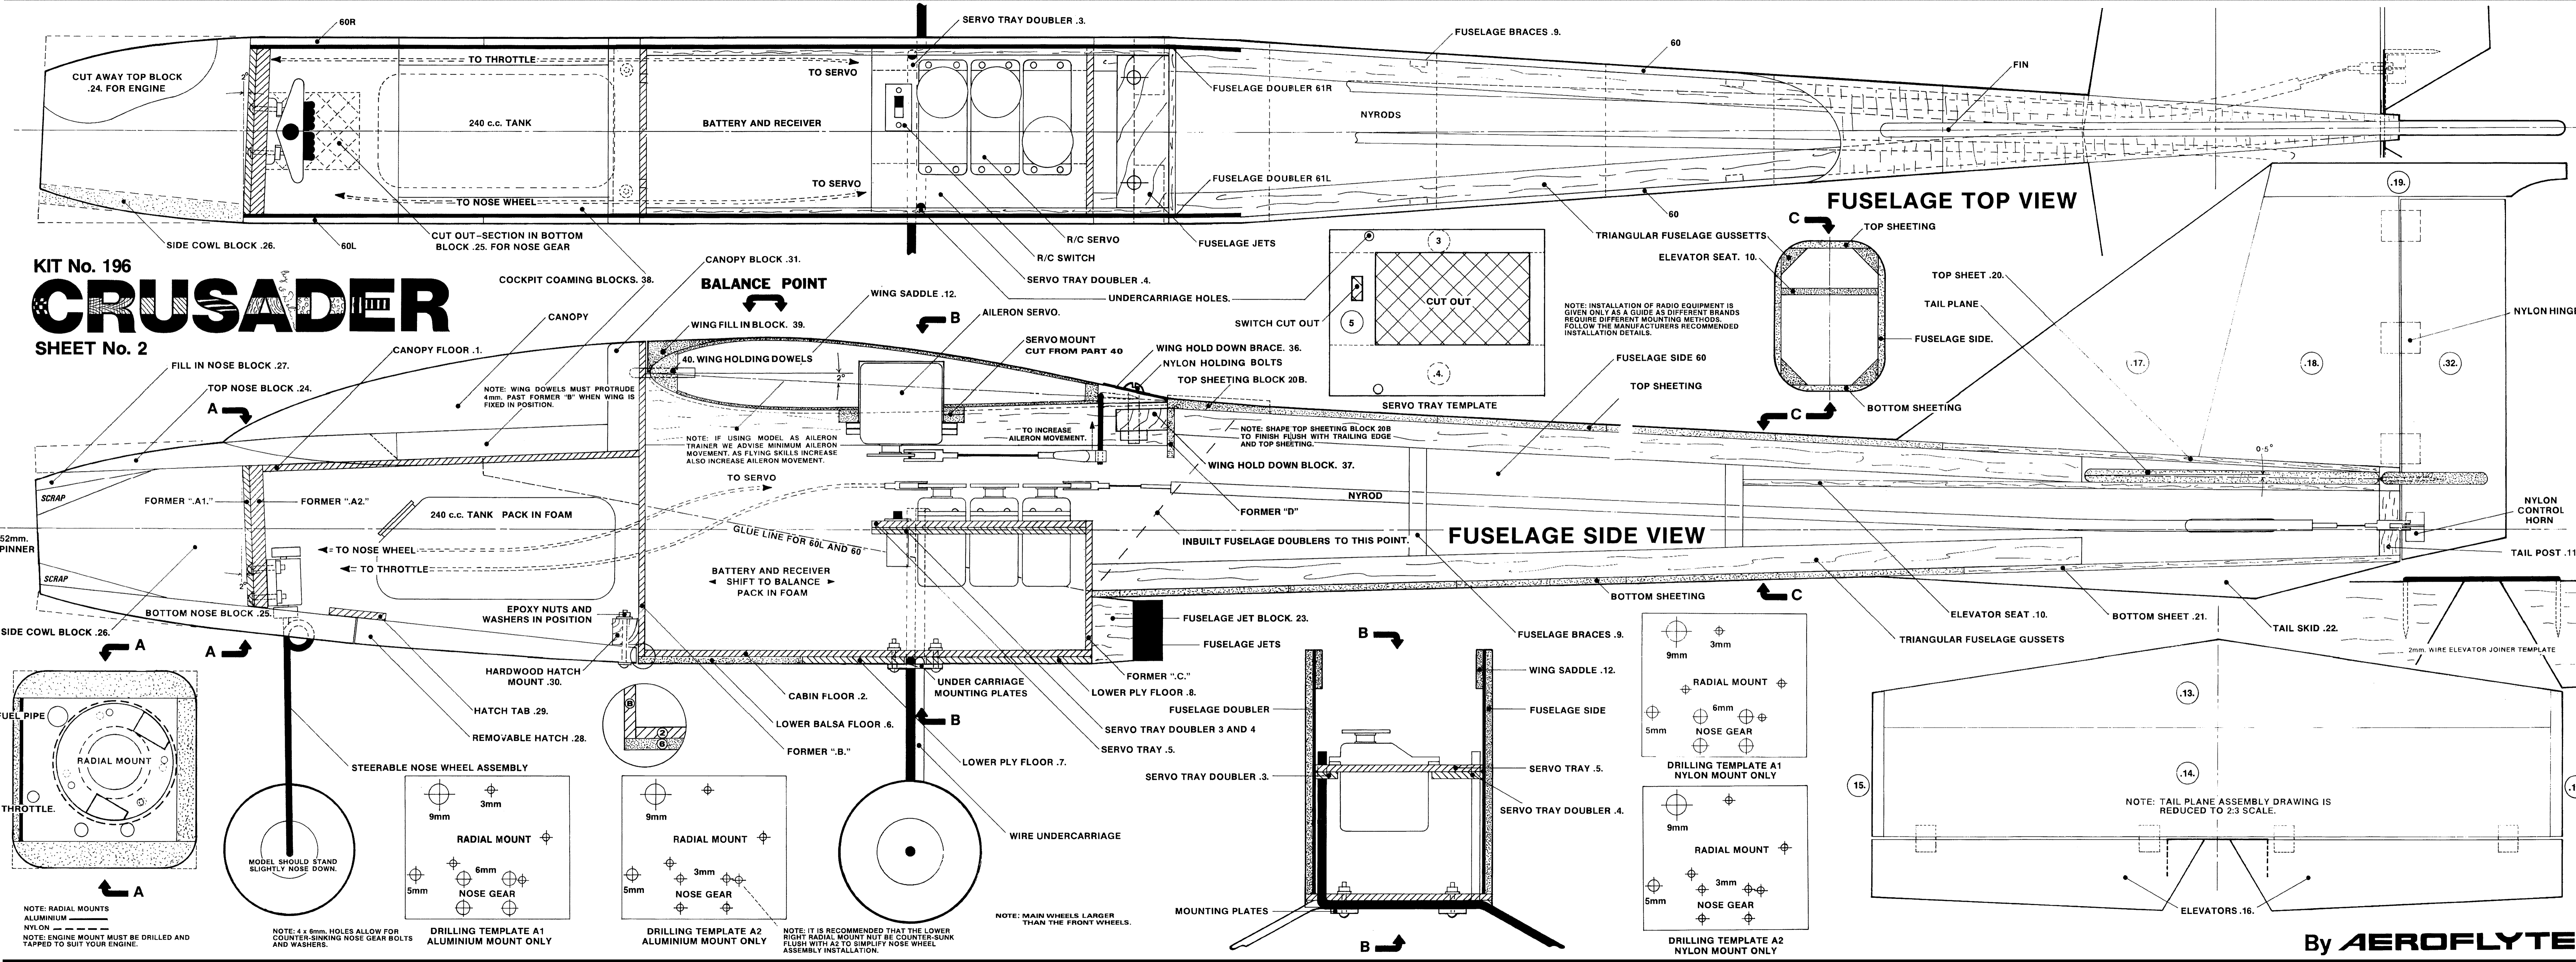

NOTE: RADIAL MOUNTS ALUMINIUM NYLON NOTE: ENGINE MOUNT MUST BE DRILLED AND TAPPED TO SUIT YOUR ENGINE.

NOTE: 4 x 6mm. HOLES ALLOW FOR COUNTER-SINKING NOSE GEAR BOLTS AND WASHERS.

DRILLING TEMPLATE A1 ALUMINIUM MOUNT ONLY

DRILLING TEMPLATE A2 ALUMINIUM MOUNT ONLY

NOTE: IT IS RECOMMENDED THAT THE LOWER RIGHT RADIAL MOUNT NOT BE COUNTER-SUNK FLUSH WITH A2 TO SIMPLIFY NOSE WHEEL ASSEMBLY INSTALLATION.

NOTE: MAIN WHEELS LARGER THAN THE FRONT WHEELS.

NOTE: INSTALLATION OF RADIO EQUIPMENT IS GIVEN ONLY AS A GUIDE AS DIFFERENT BRANDS REQUIRE DIFFERENT MOUNTING METHODS. FOLLOW THE MANUFACTURERS RECOMMENDED INSTALLATION DETAILS.

NOTE: TAIL PLANE ASSEMBLY DRAWING IS REDUCED TO 2:3 SCALE.

CRUSADER

BEFORE ASSEMBLY PLEASE LOCATE THESE PARTS IN YOUR KIT AND NUMBER THEM AS SHOWN.

HARDWOOD PART 37

PLY PART 29

PLY PART 36

PLY PART 40

Cut to Form 3 servo mounts.

PLY PART 3

PLY PART 4

BALSA BLOCK 23

BALSA BLOCK 31

BALSA BLOCK 39

HARDWOOD BLOCK 30

BALSA BLOCK 38 - 2 OFF

BALSA BLOCK 15-2 OFF

BALSA BLOCK 19

BALSA BLOCK 22

BALSA BLOCK 27

BALSA BLOCK 33

2 OFF