




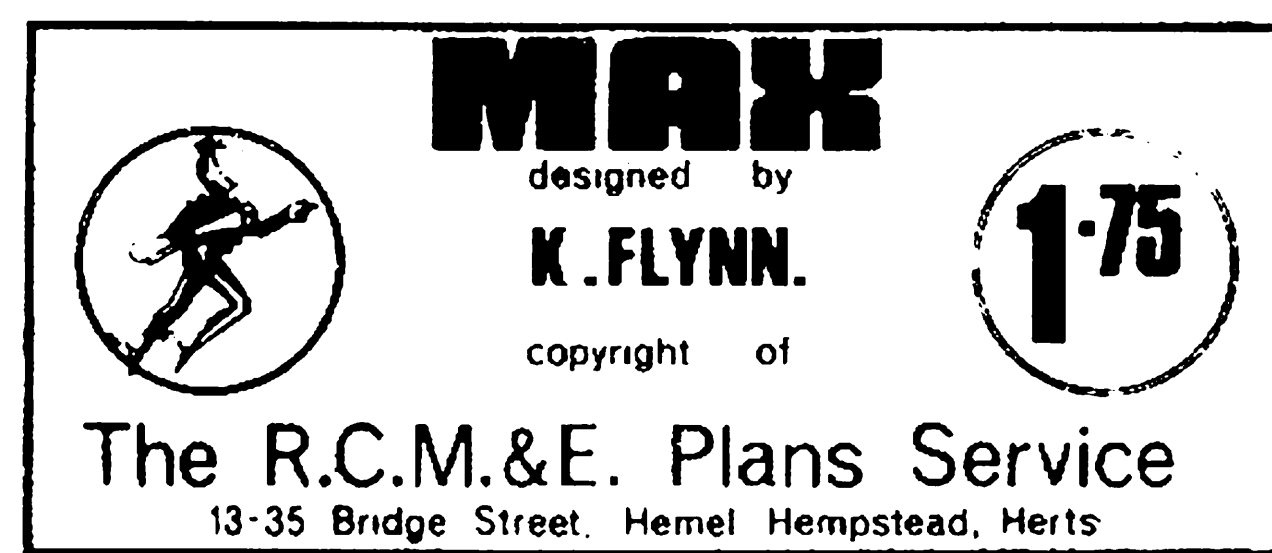


ALL WOODS Balsa UNLESS STATED OTHERWISE

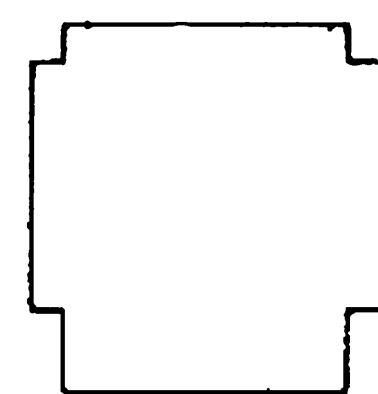

F.1.

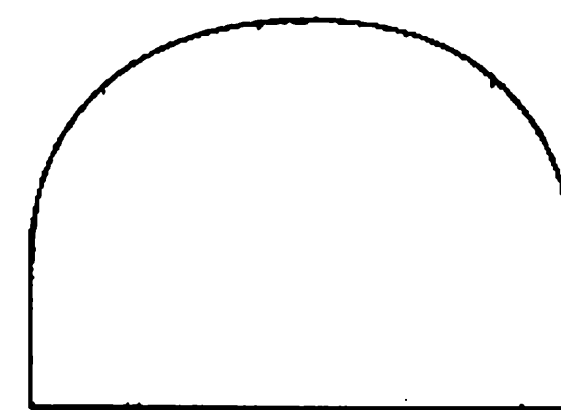

F.2.

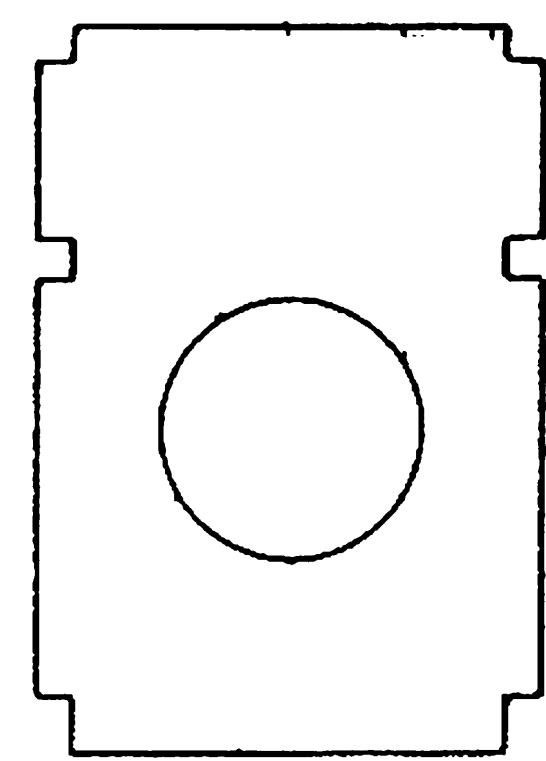

F.3.



F.4.



F.5.




F.6.




F.7.

ALL FUSELAGE FORMERS FROM 3/16" SHT.

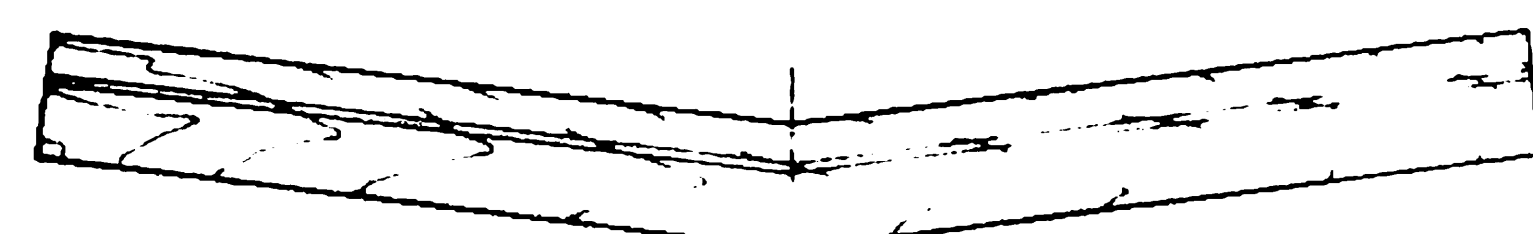



3/32" (2mm) PLY WING BRACES - 3 OFF

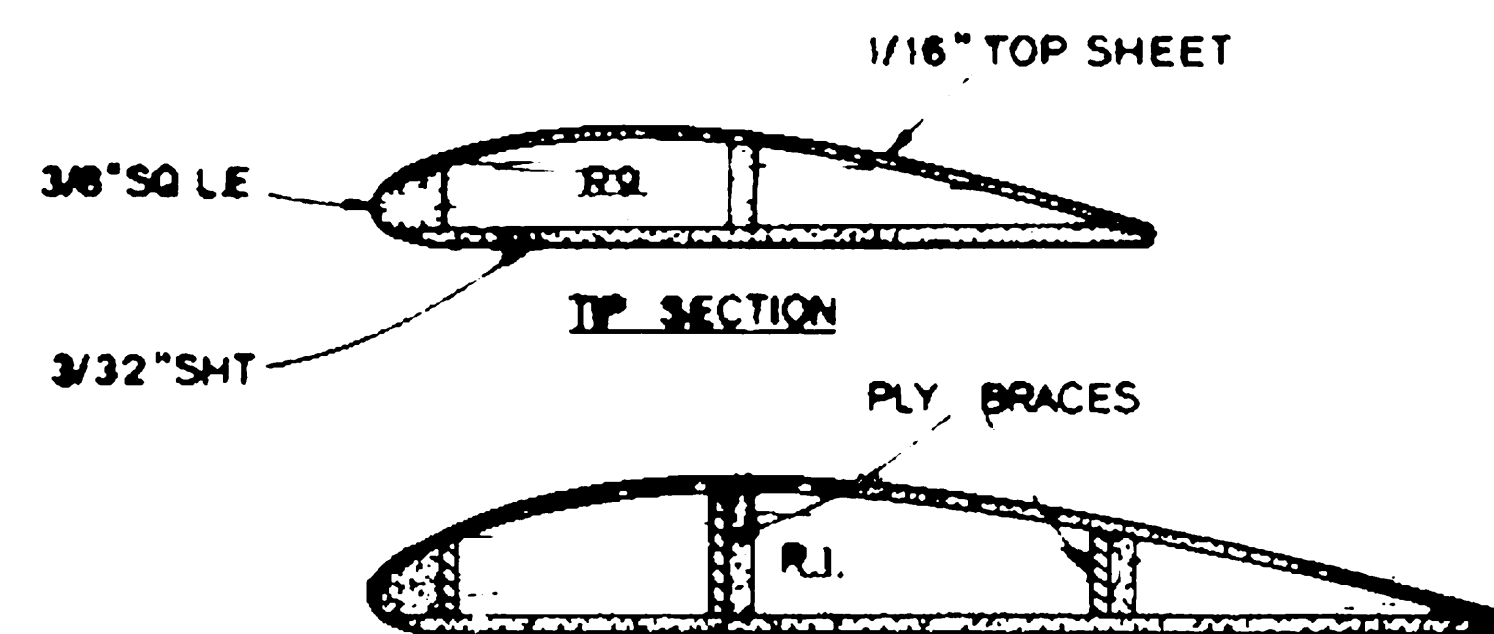

ROOT SECTION

3/8" SQ LE

SCRAP BLOCK TIPS

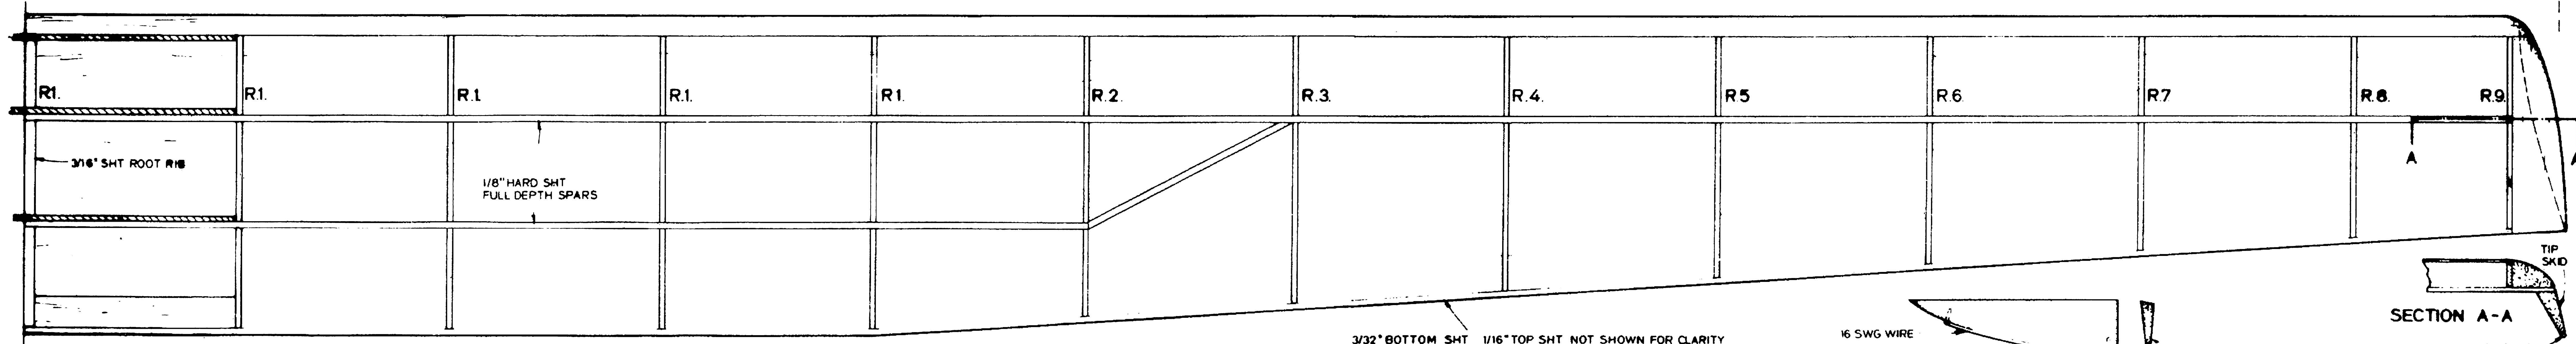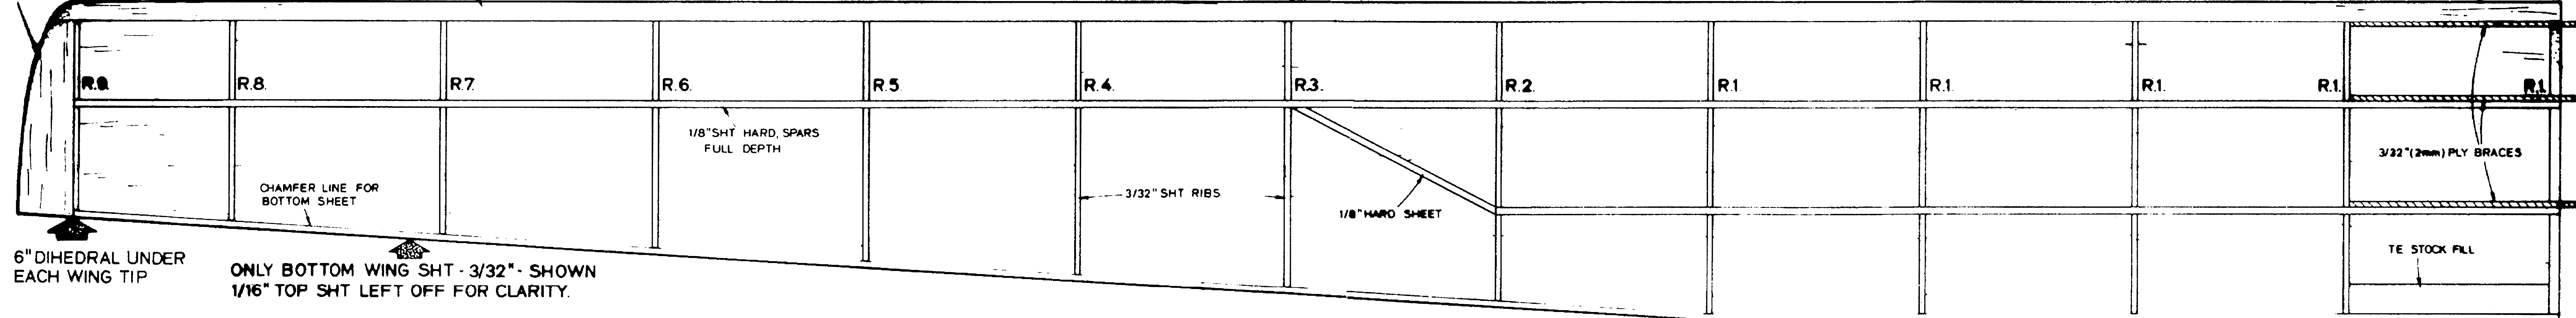

SECTION A-A

16 SWG WIRE