



★ STEP BY STEP INSTRUCTIONS ★

STUDY PLAN AND INSTRUCTIONS BEFORE STARTING WORK. WHEN READY FOR WORK, PIN PLAN TO WORKBOARD AND COVER WITH WAX PAPER TO PREVENT BALSA FRAMES FROM STICKING TO PLAN. USE MODEL AIRPLANE CEMENT (NOT FURNISHED) TO FASTEN FRAMES TOGETHER. USE COMMON PINS TO HOLD FRAME MEMBERS IN PLACE DURING CONSTRUCTION. WORK ACCURATELY AND CAREFULLY FOR BEST RESULTS.


A. FUSelage CONSTRUCTION

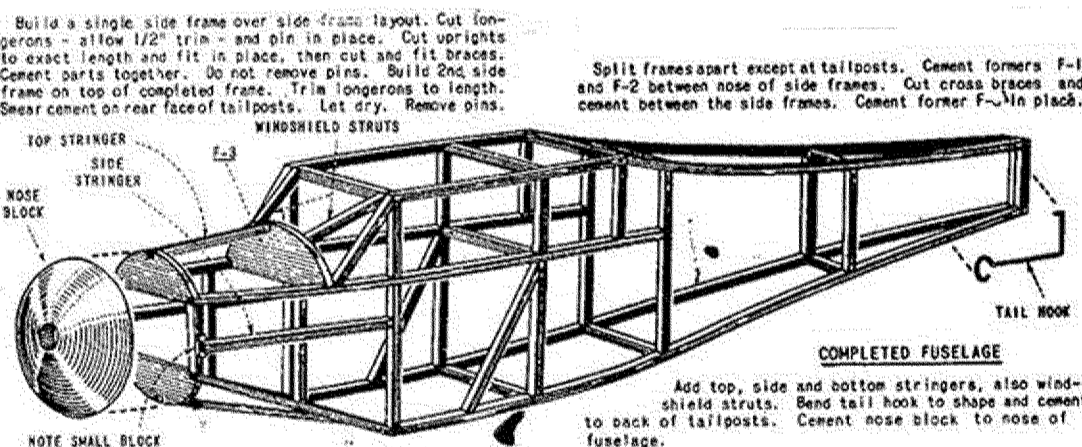


B. WING CONSTRUCTION

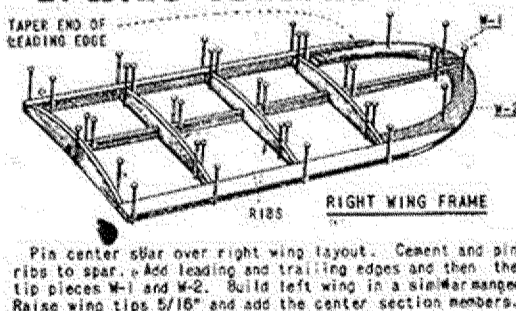





C. RUDDER AND STABILIZER CONSTRUCTION

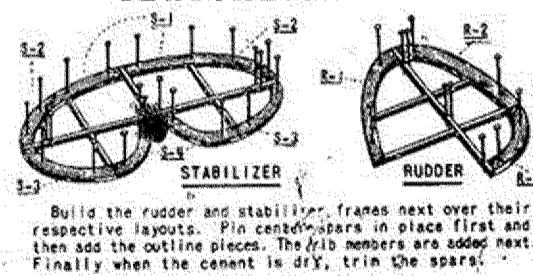

D. COVERING THE FRAMES

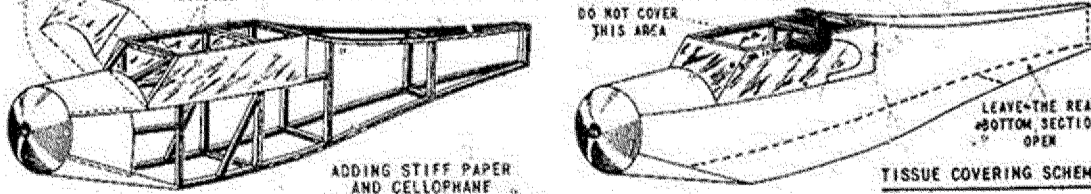

E. ASSEMBLING THE MODEL

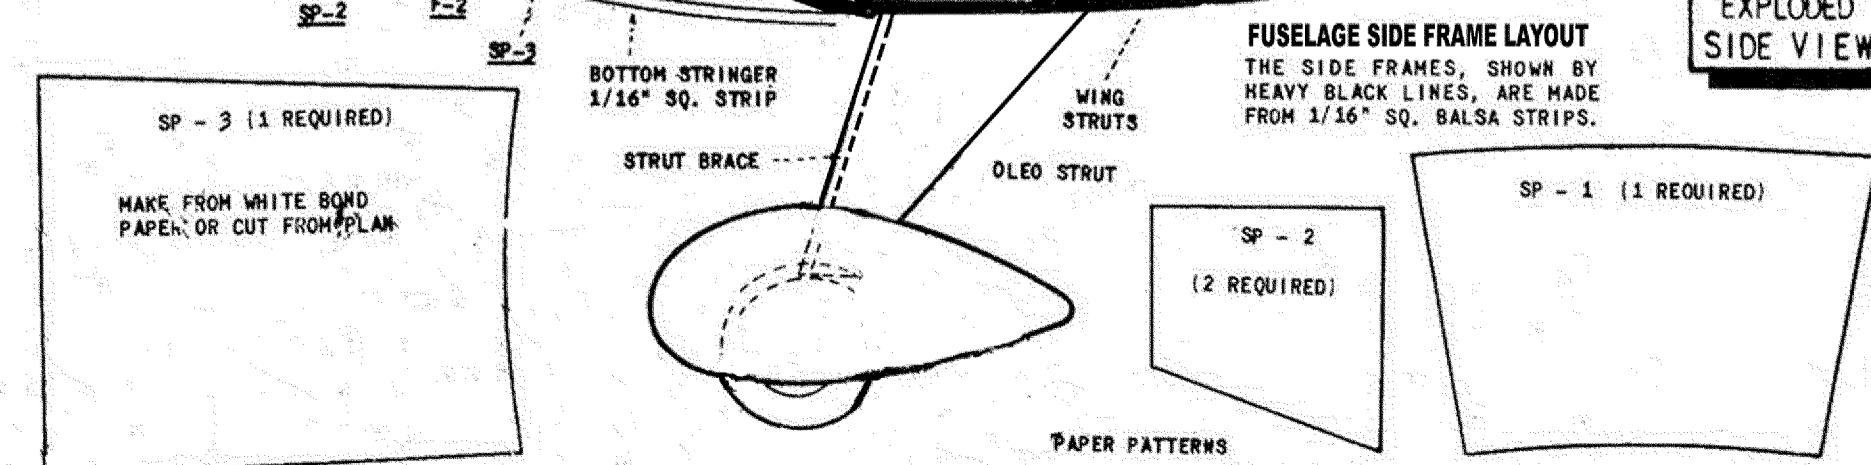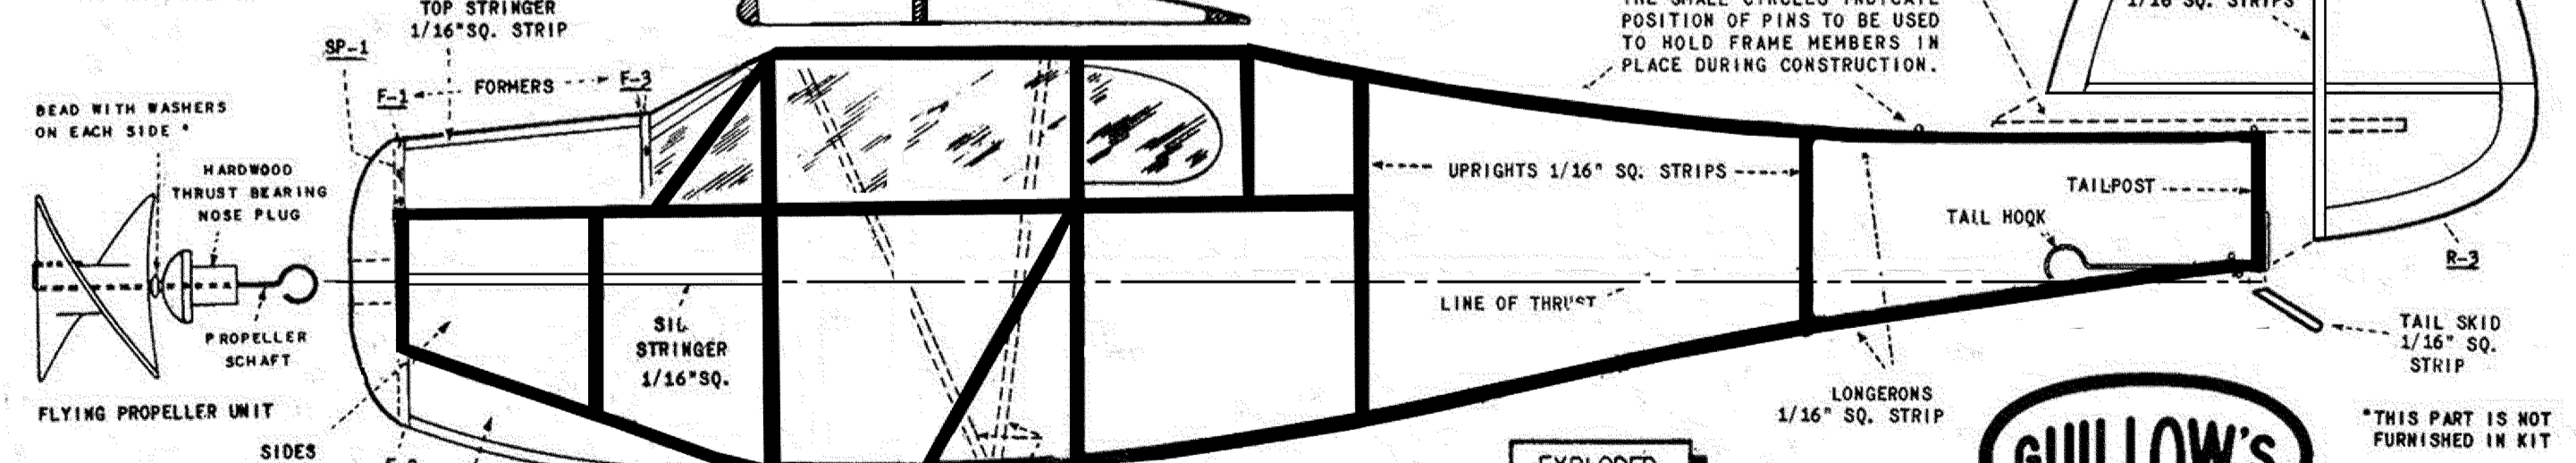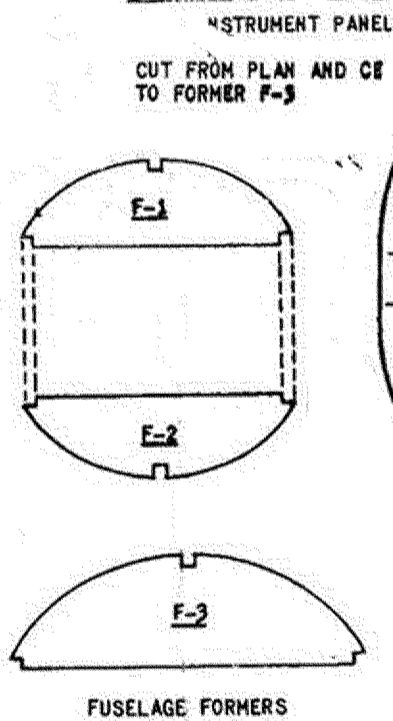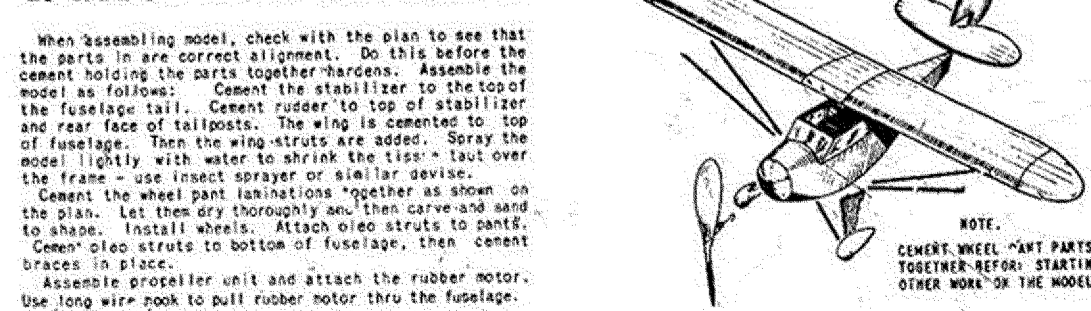

**GULLOW'S**

**MONOCOUE DELUXE**

Kit 50-7 Wing Span - 20" Length - 12 3/4"

Fine pre-war sport plane

PAUL K. GULLOW • WAKEFIELD, MASS.

Redrawn May, 2011 pd1