

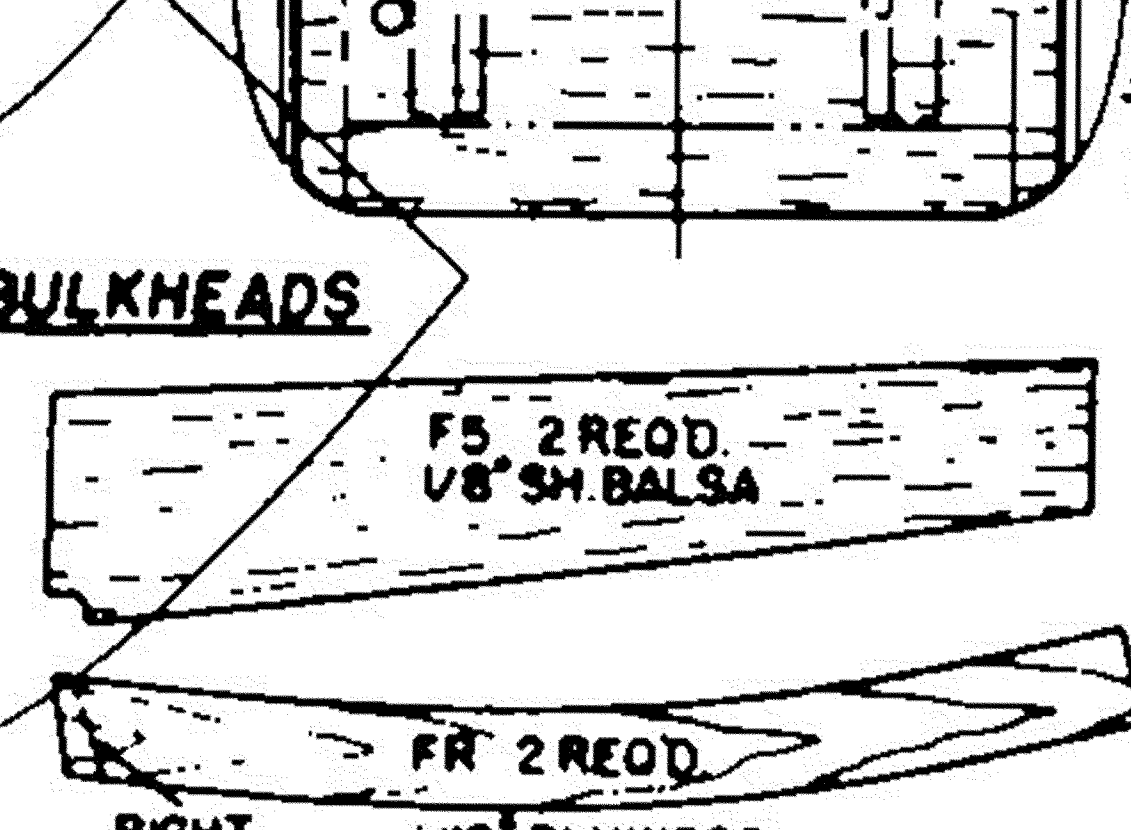
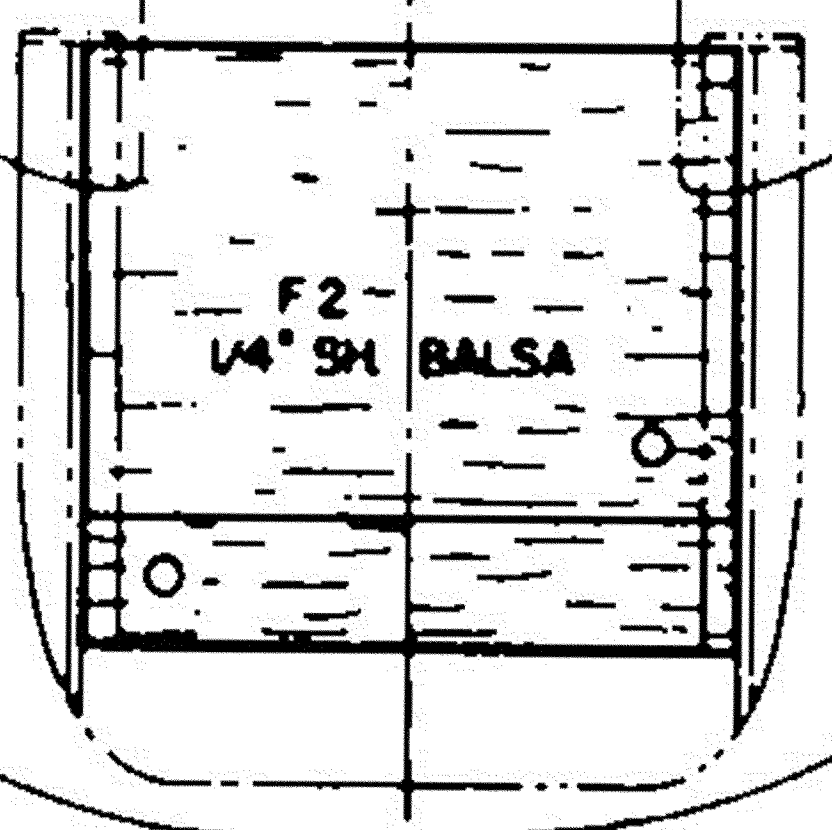
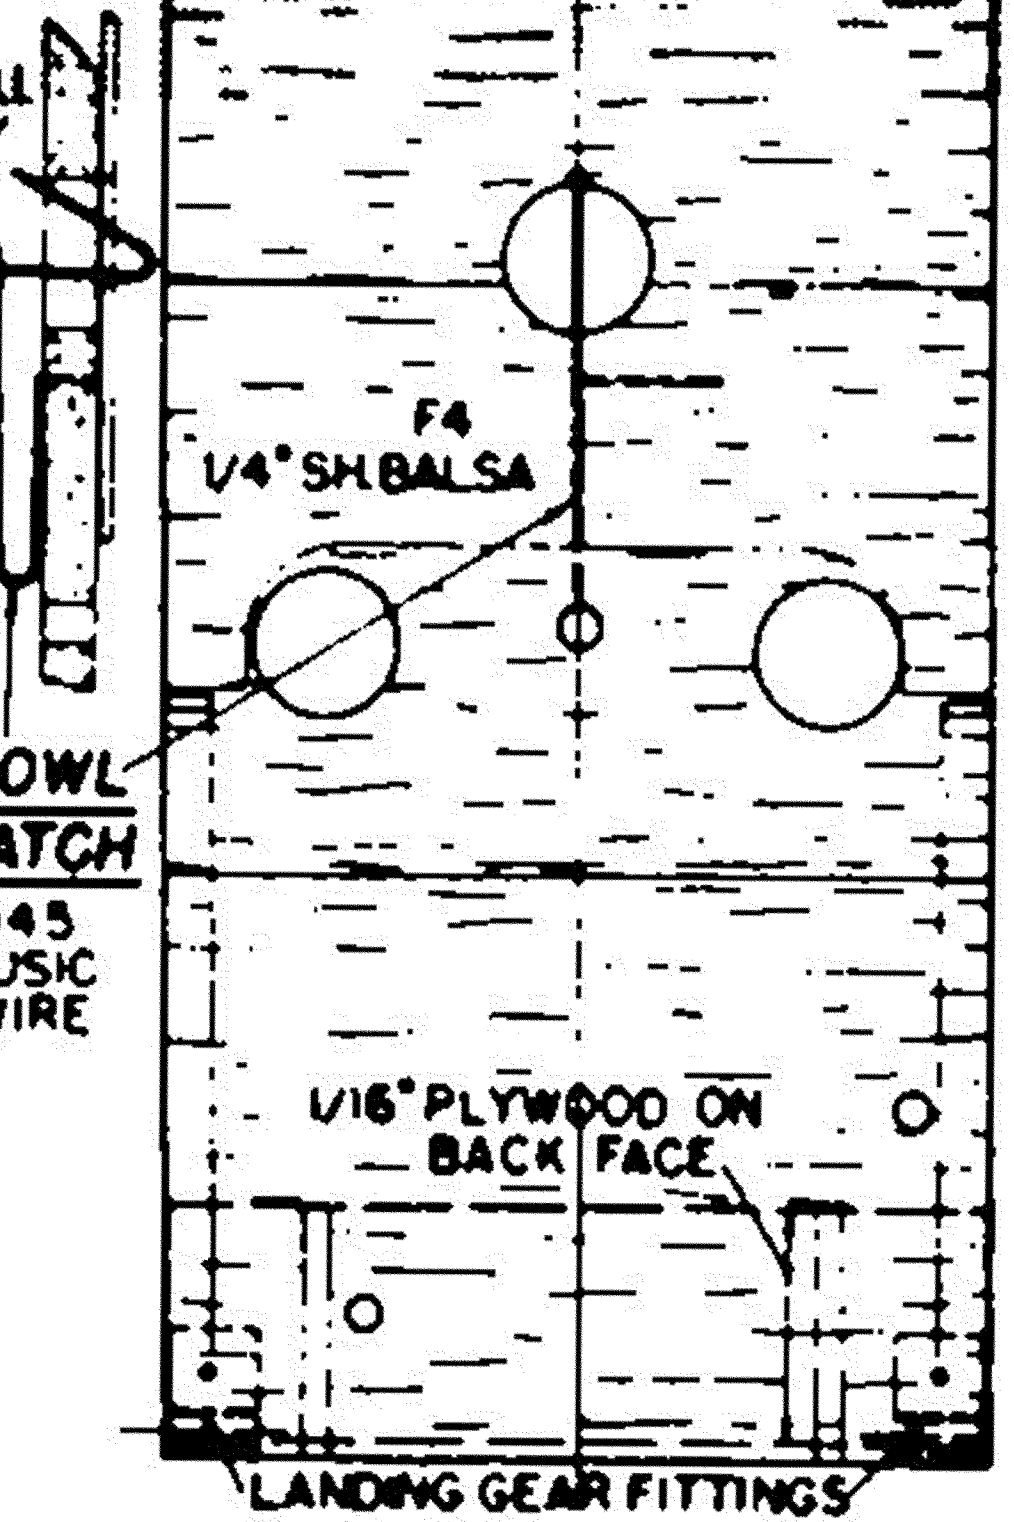
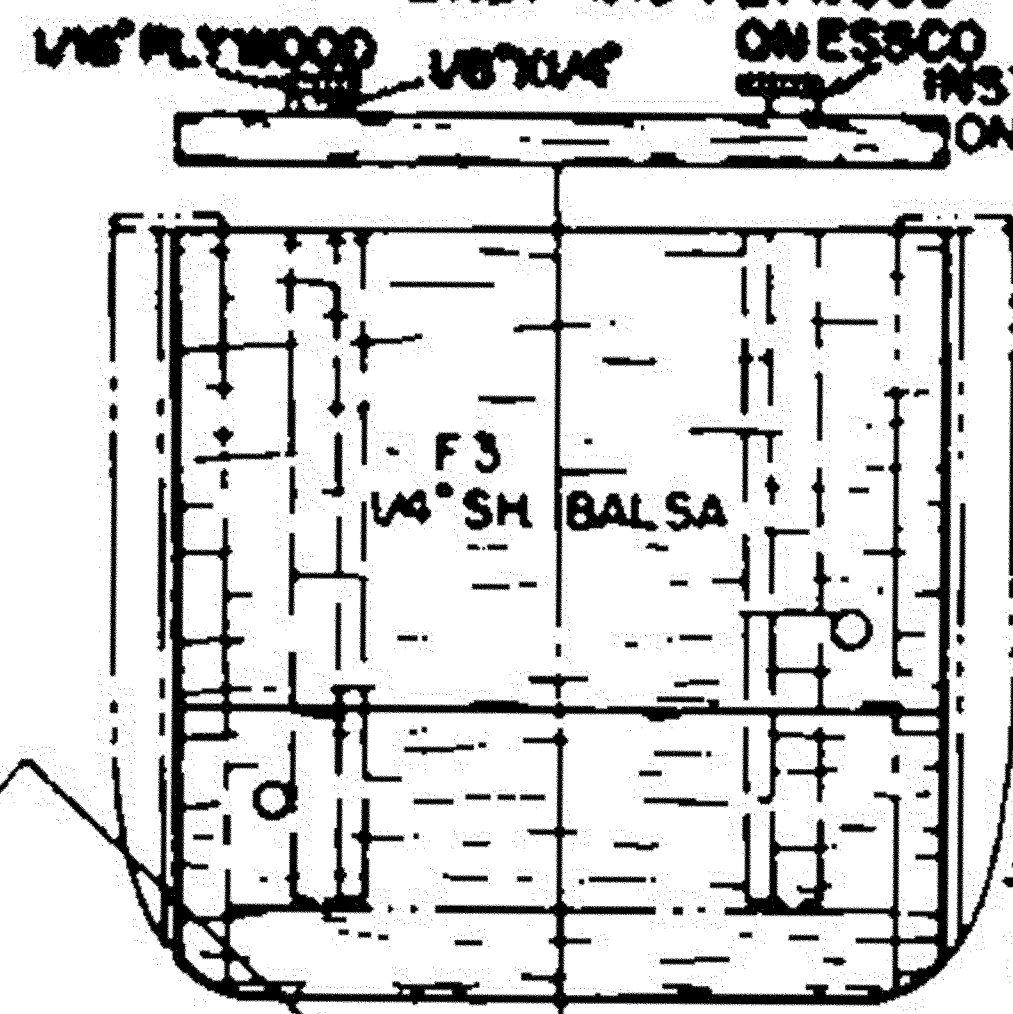
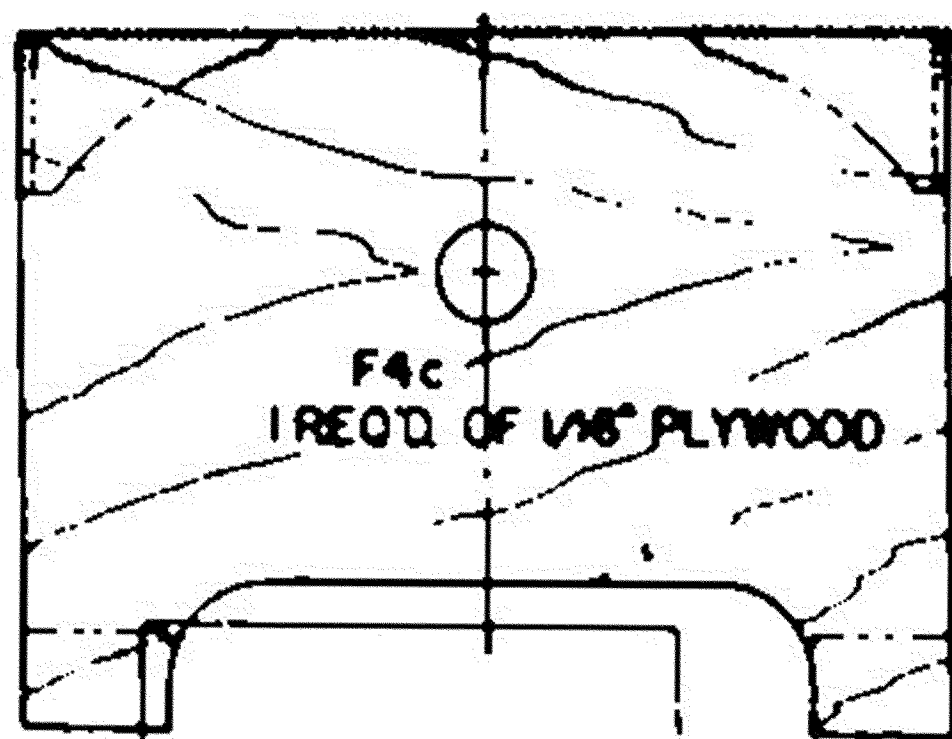


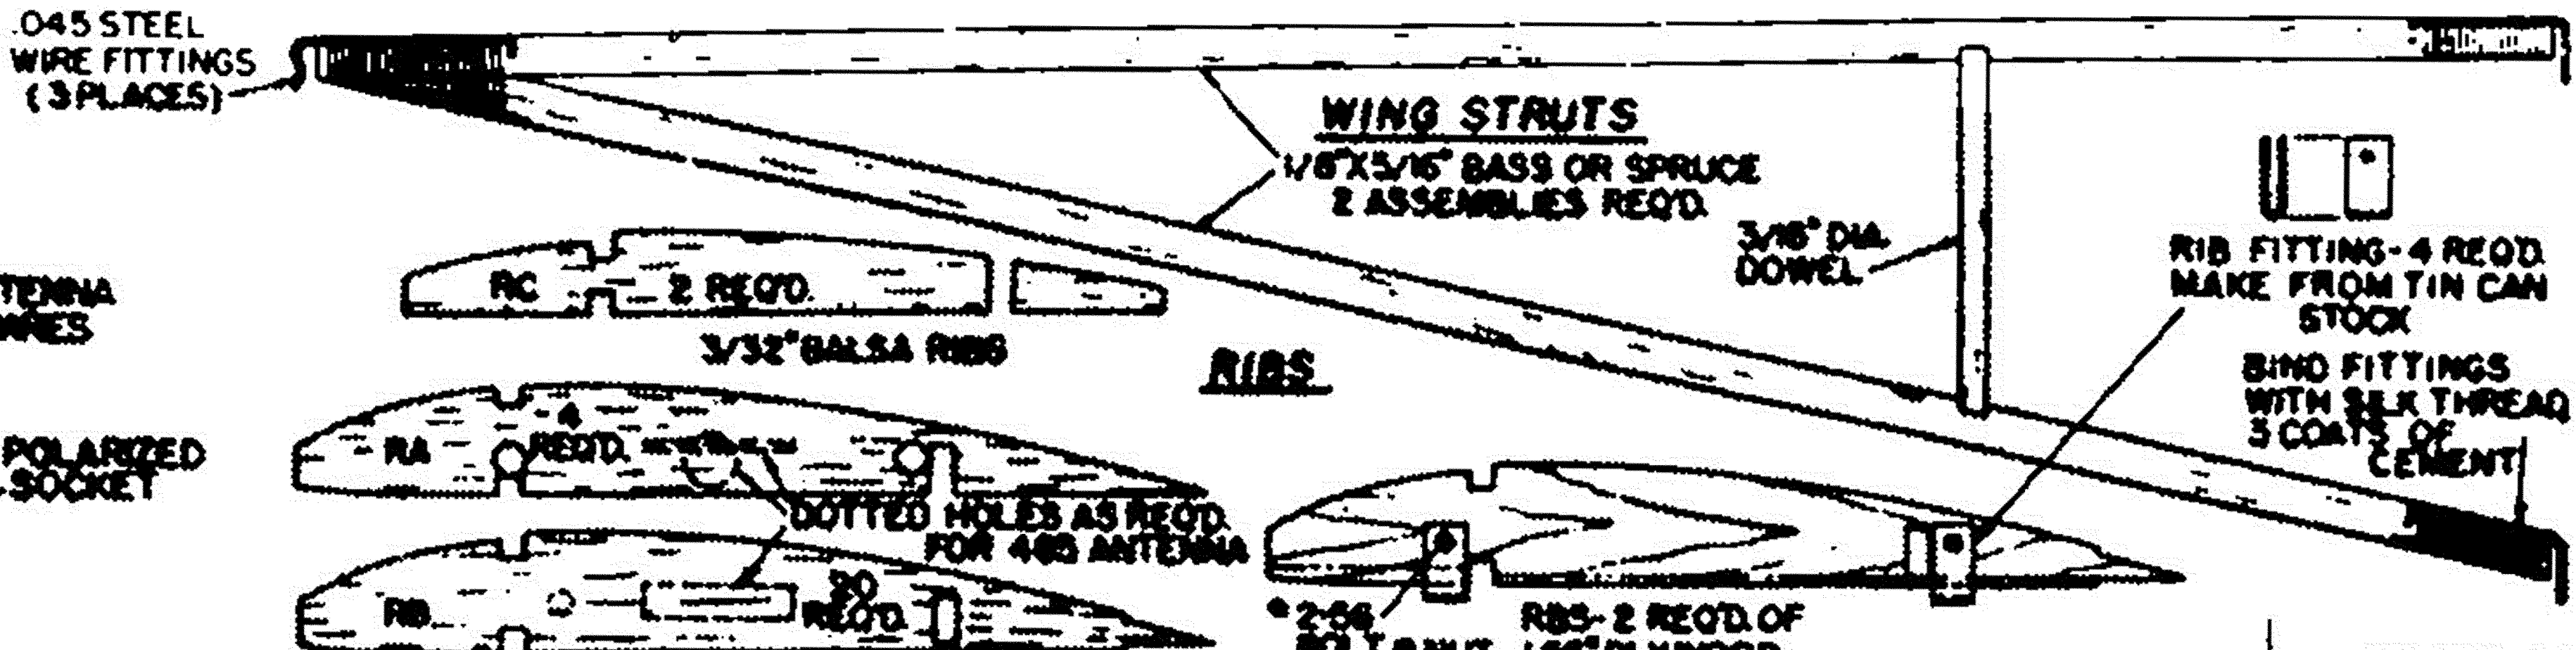


**BABCOCK 465mc RECEIVER INSTALLATION**

REMOVE UPPER PORTION OF BLKHD. 2 & 3 AFTER FUSELAGE IS FINISHED, THEN INSTALL FLOOR & BATTERY COMPARTMENT.

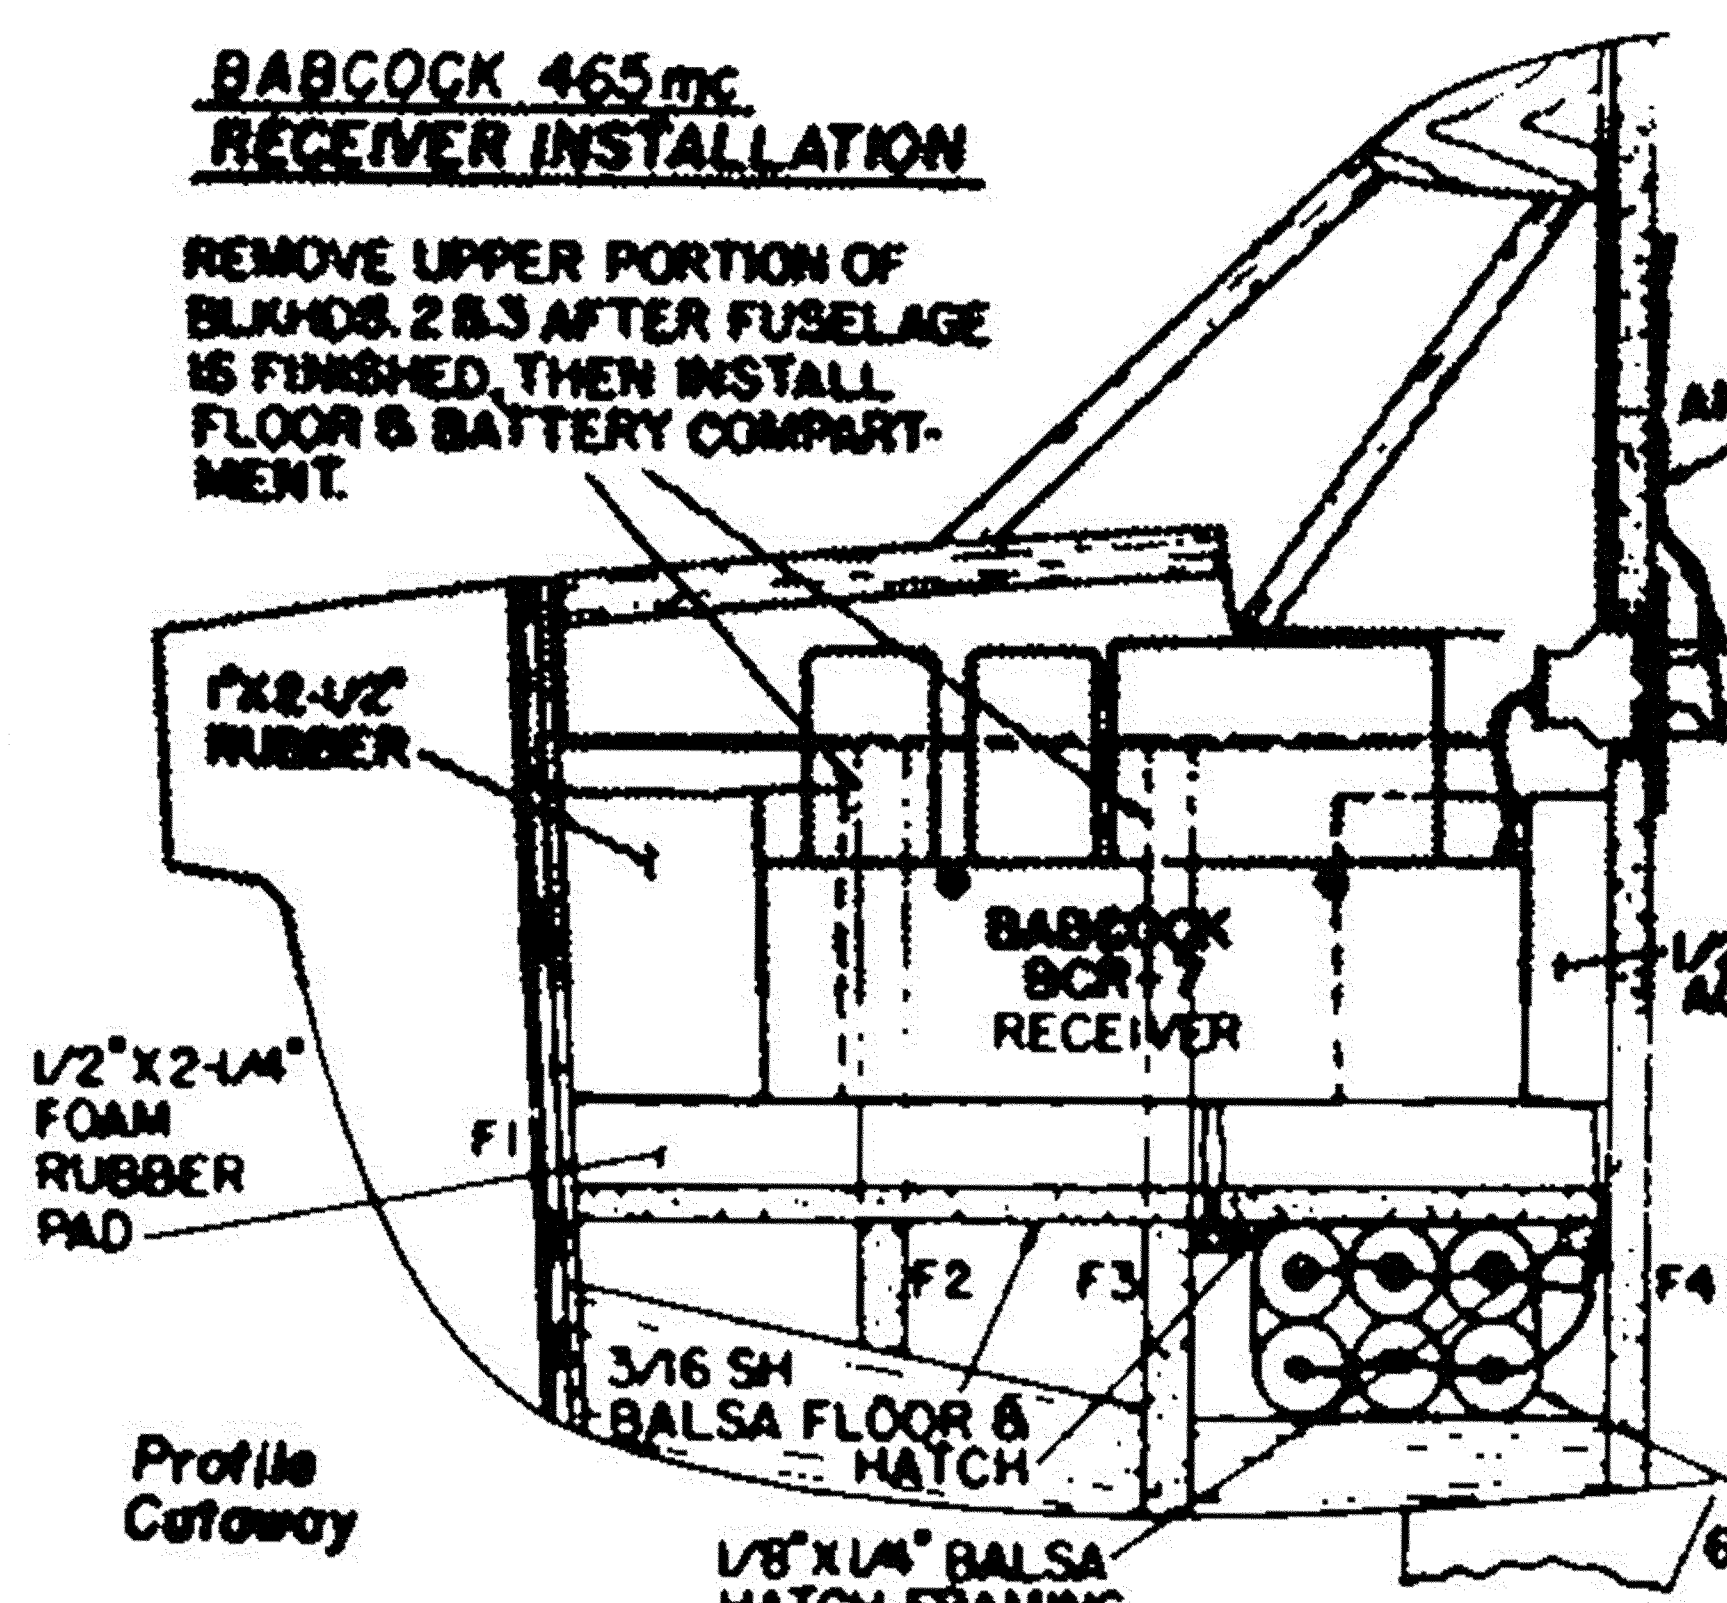

**WIRING DIAGRAM-BABCOCK 465mc**

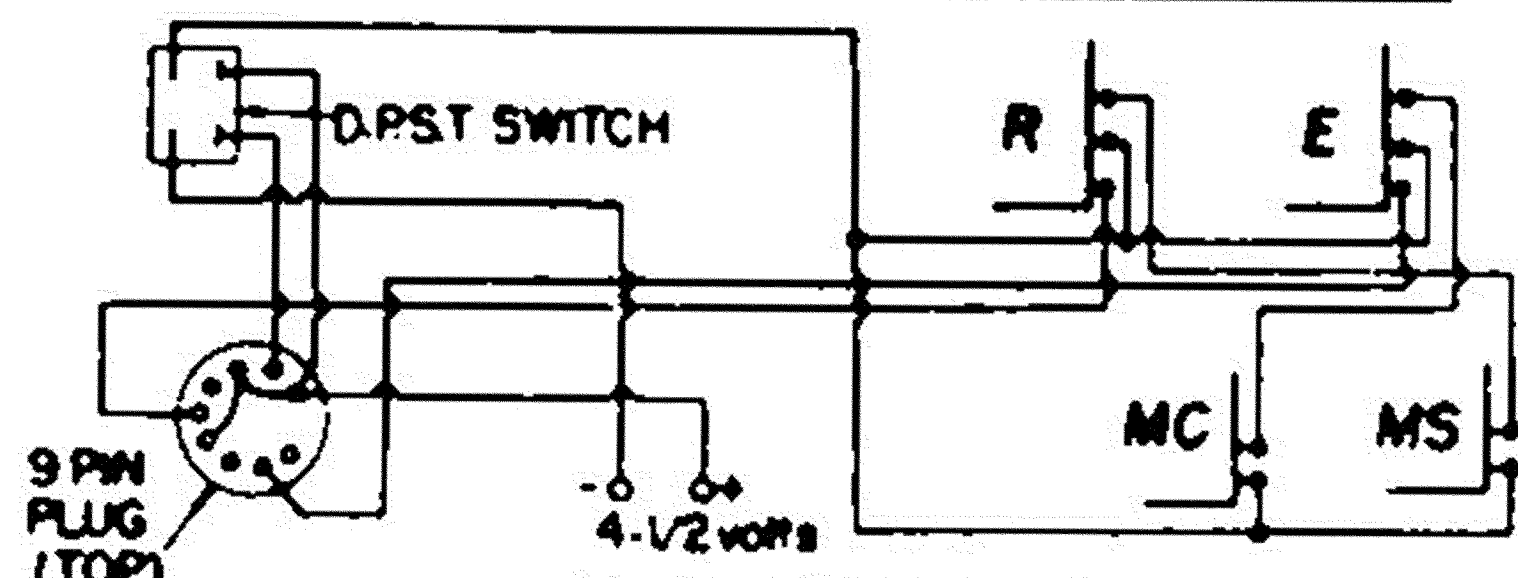

**WIRING DIAGRAM-CASCADED ESCPNTS.**

