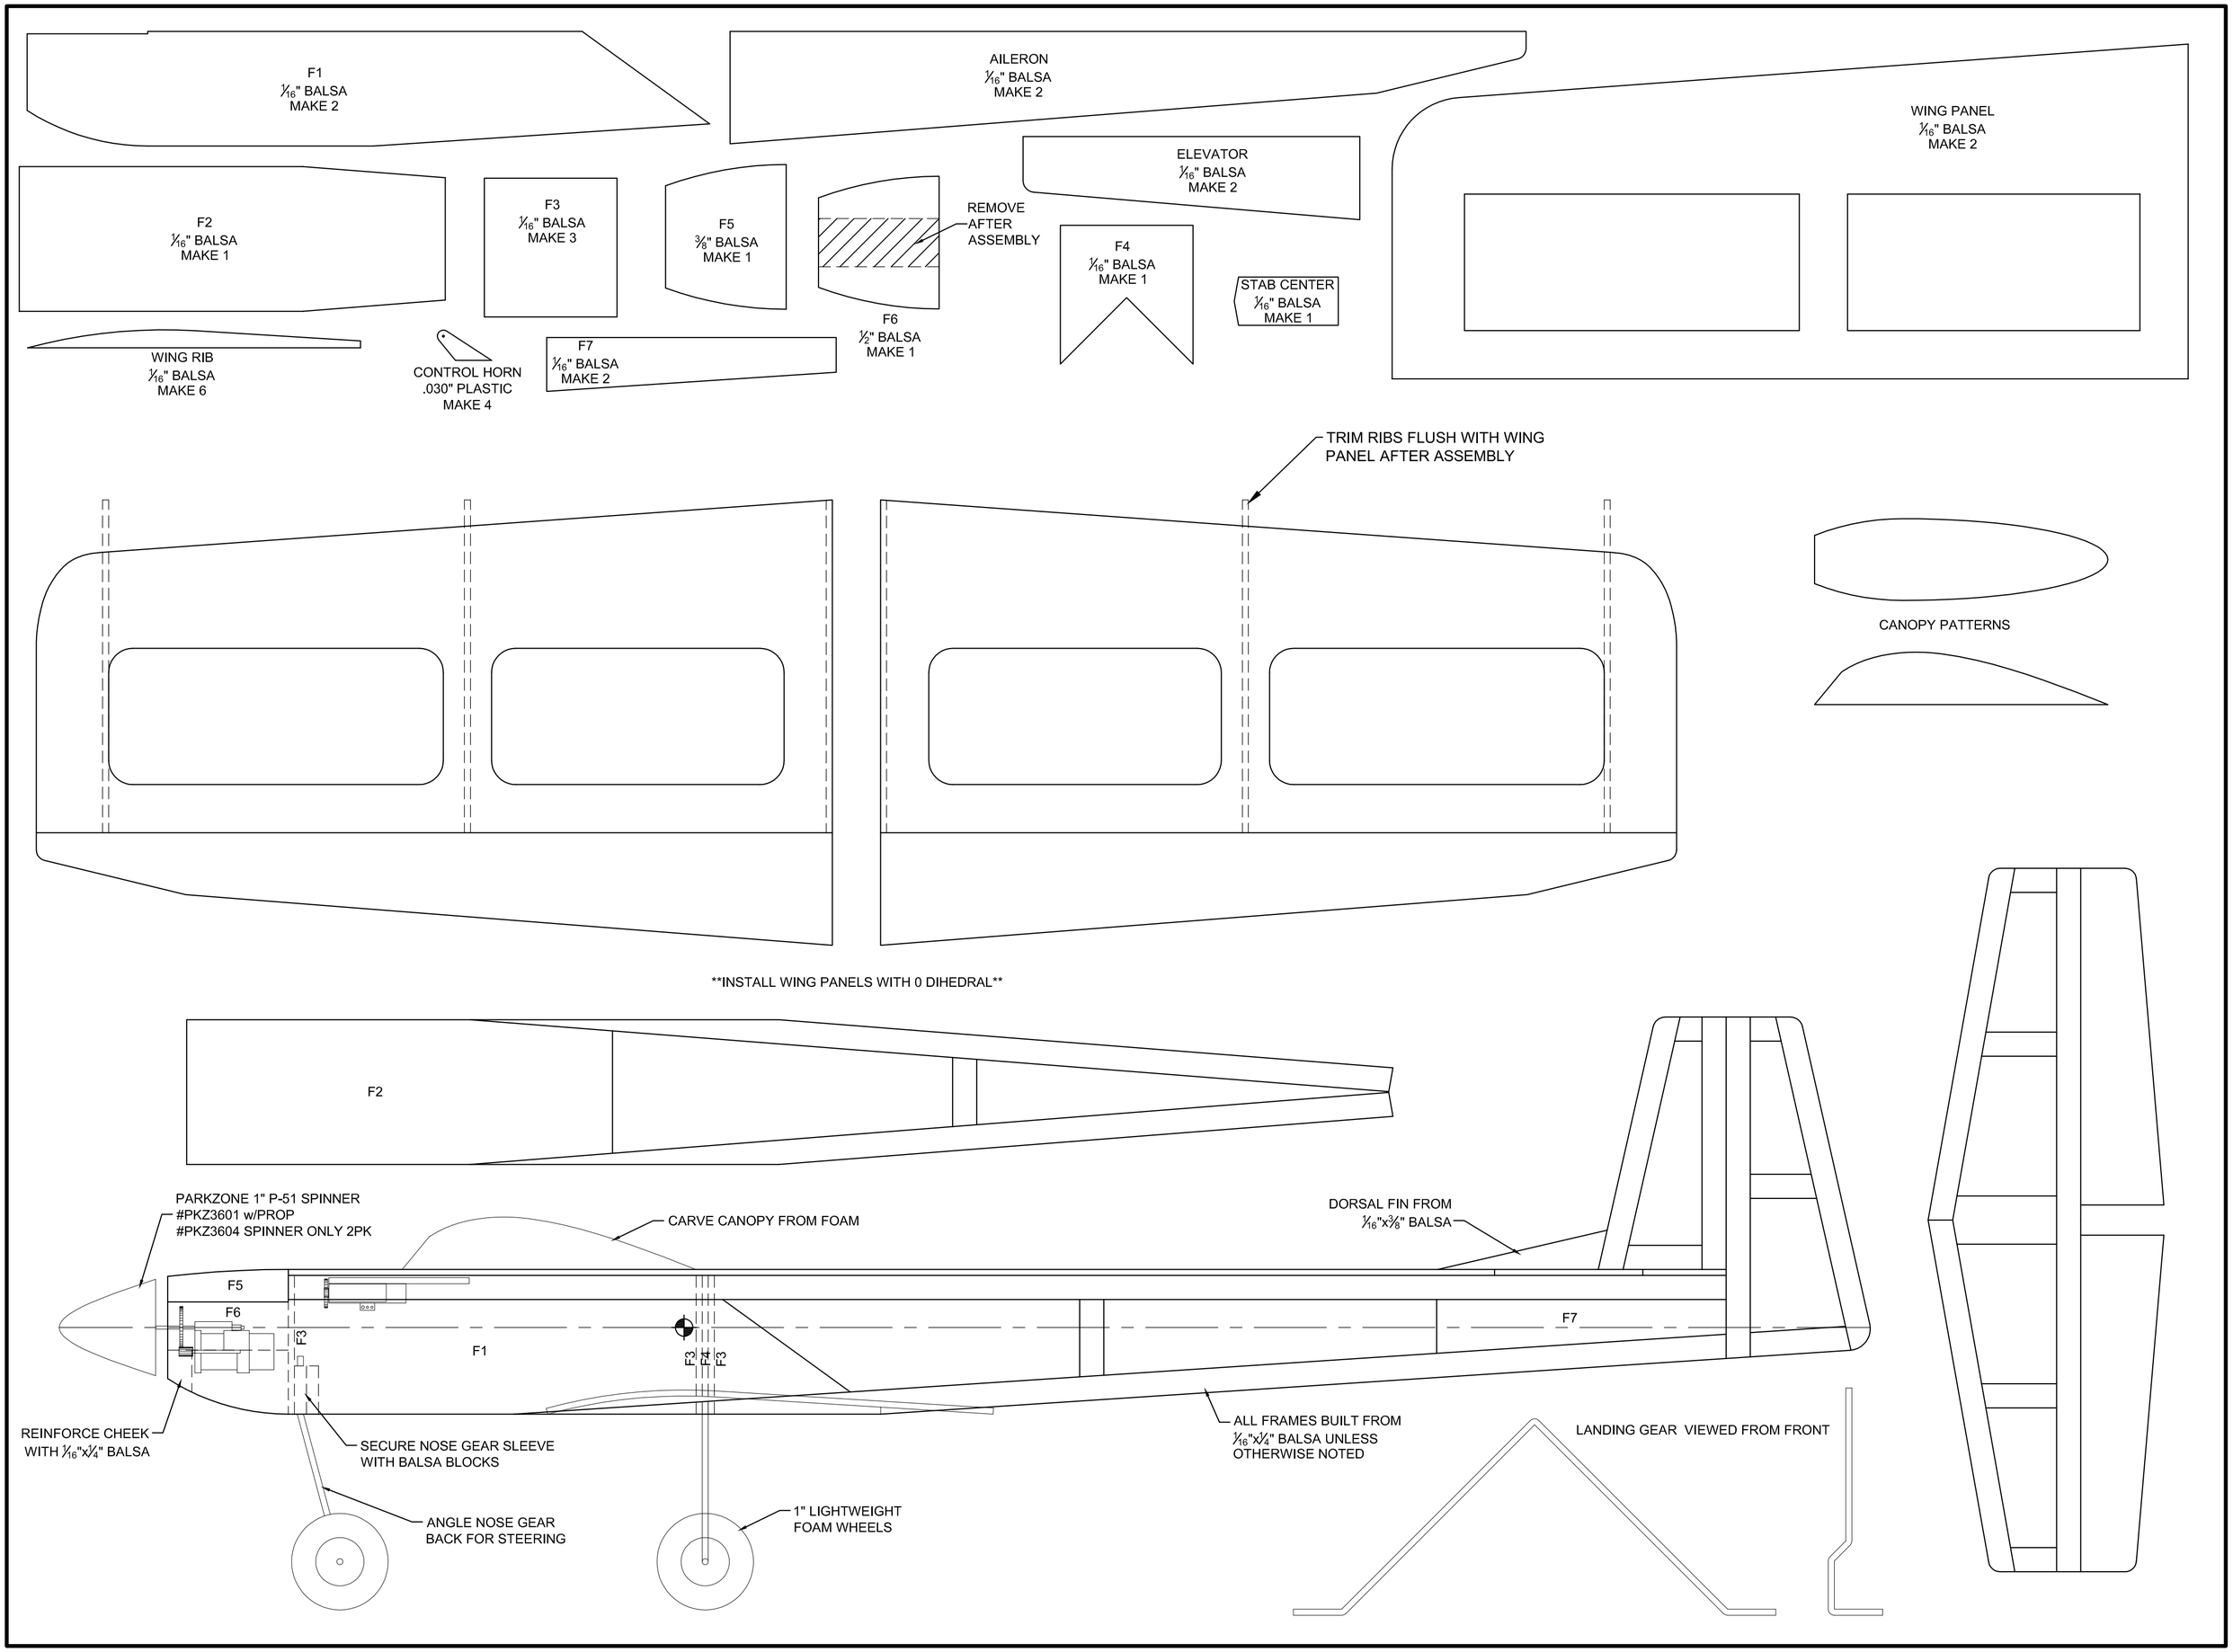
F1
1/16" BALSA
MAKE 2
AILERON
1/16" BALSA
MAKE 2
WING PANEL
1/16" BALSA
MAKE 2
ELEVATOR
1/16" BALSA
MAKE 2
F2
1/16" BALSA
MAKE 1
F3
1/16" BALSA
MAKE 3
F5
3/8" BALSA
MAKE 1
REMOVE
AFTER
ASSEMBLY
F4
1/16" BALSA
MAKE 1
STAB CENTER
1/16" BALSA
MAKE 1
F6
1/2" BALSA
MAKE 1
WING RIB
1/16" BALSA
MAKE 6
CONTROL HORN
.030" PLASTIC
MAKE 4
F7
1/16" BALSA
MAKE 2
TRIM RIBS FLUSH WITH WING
PANEL AFTER ASSEMBLY
CANOPY PATTERNS
INSTALL WING PANELS WITH 0 DIHEDRAL
F2
PARKZONE 1" P-51 SPINNER
#PKZ3601 w/PROP
#PKZ3604 SPINNER ONLY 2PK
CARVE CANOPY FROM FOAM
DORSAL FIN FROM
1/16"x3/8" BALSA
F5
F6
F3
F1
F3
F4
F3
F7
REINFORCE CHEEK
WITH 1/16"x3/4" BALSA
SECURE NOSE GEAR SLEEVE
WITH BALSA BLOCKS
ANGLE NOSE GEAR
BACK FOR STEERING
1" LIGHTWEIGHT
FOAM WHEELS
ALL FRAMES BUILT FROM
1/16"x3/4" BALSA UNLESS
OTHERWISE NOTED
LANDING GEAR VIEWED FROM FRONT