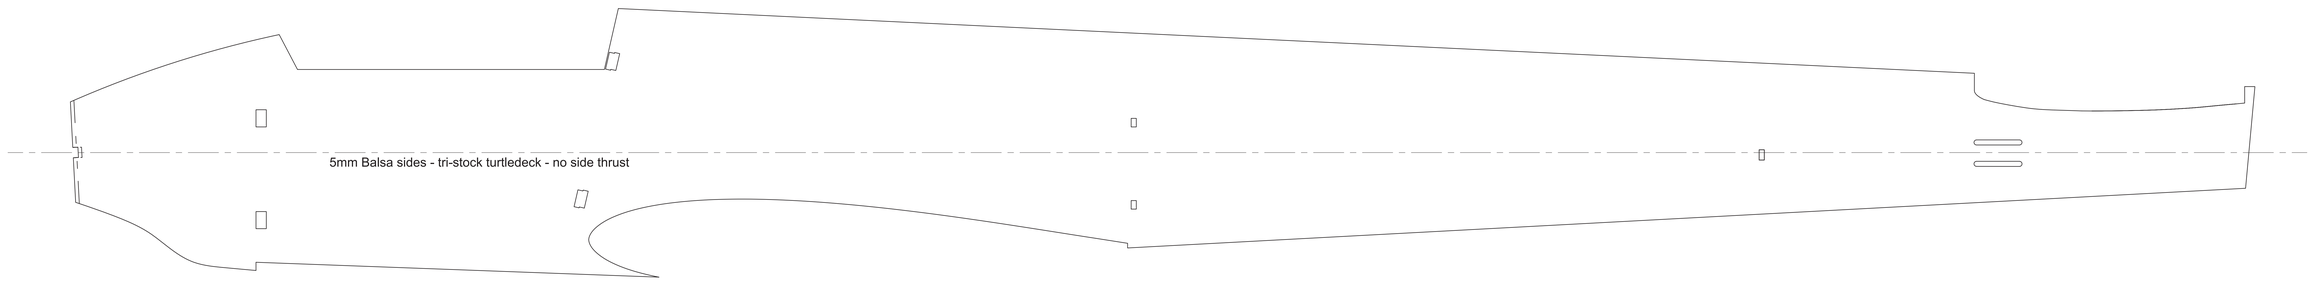

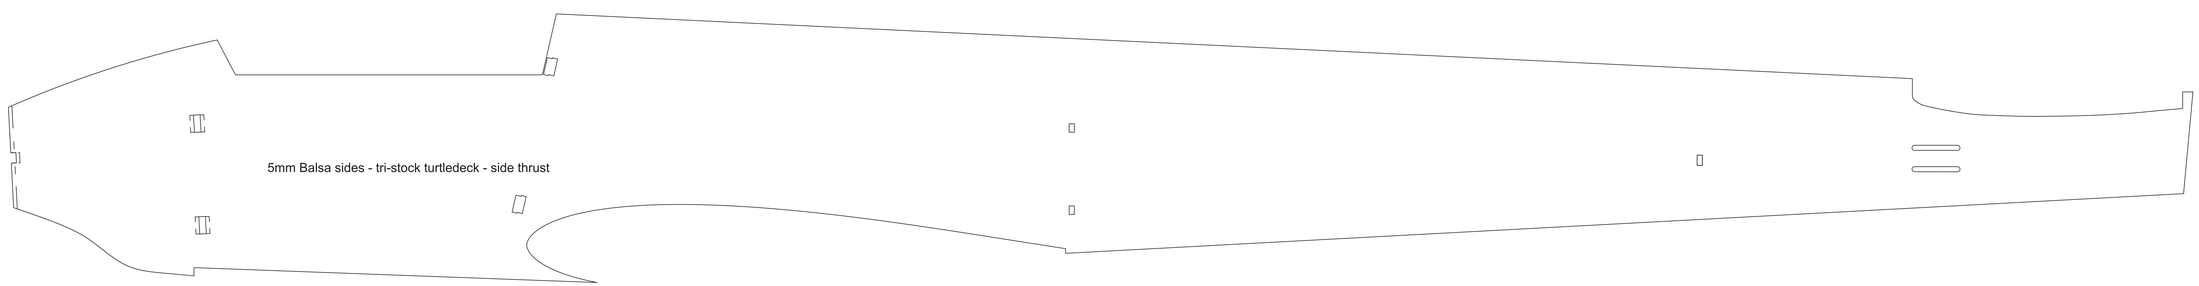

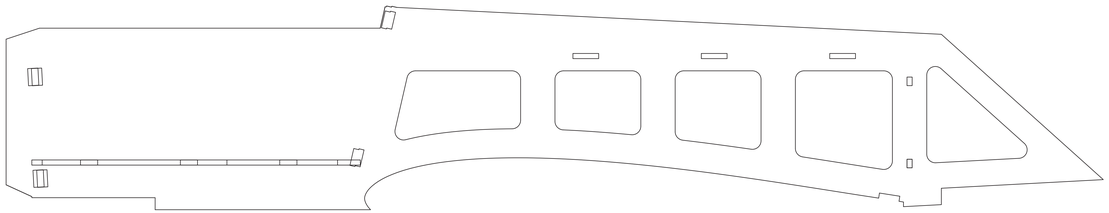

Motor mount cut-out: Left side only:
See front view

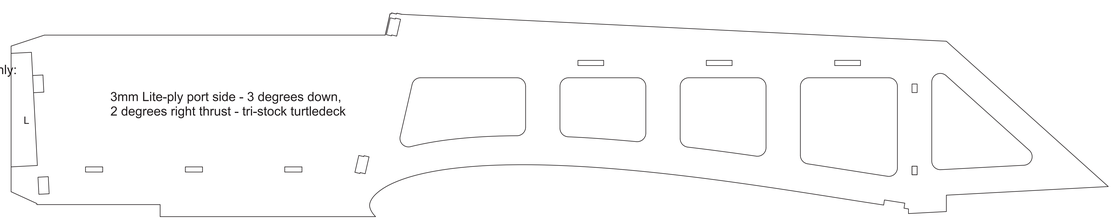

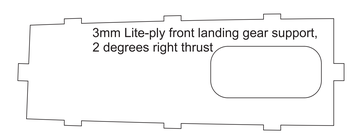

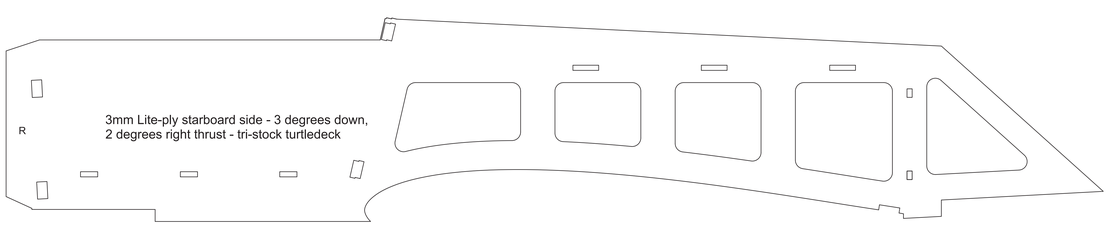

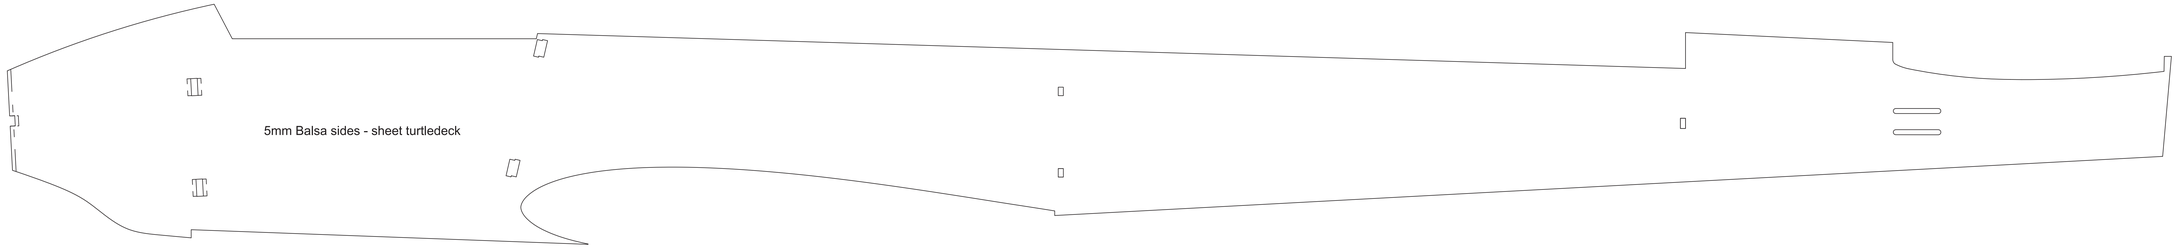
5mm Balsa sides - sheet turtledeck

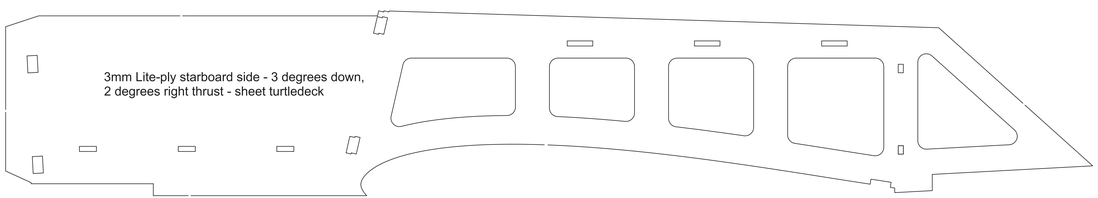
3mm Lite-ply starboard side - 3 degrees down,
2 degrees right thrust - sheet turtledeck

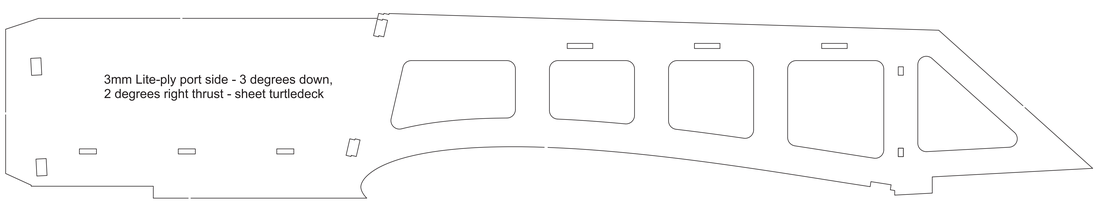
3mm Lite-ply port side - 3 degrees down,
2 degrees right thrust - sheet turtledeck

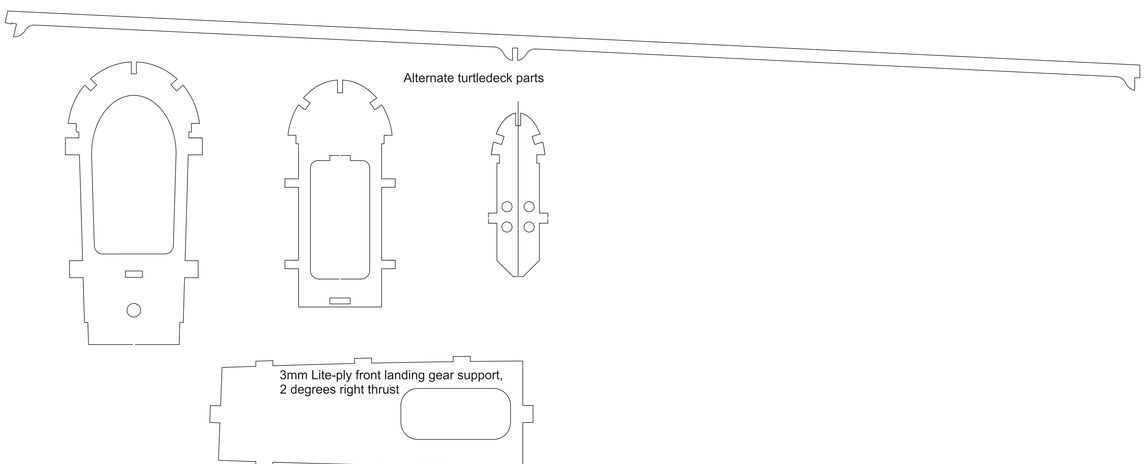
Alternate turtledeck parts
3mm Lite-ply front landing gear support,
2 degrees right thrust

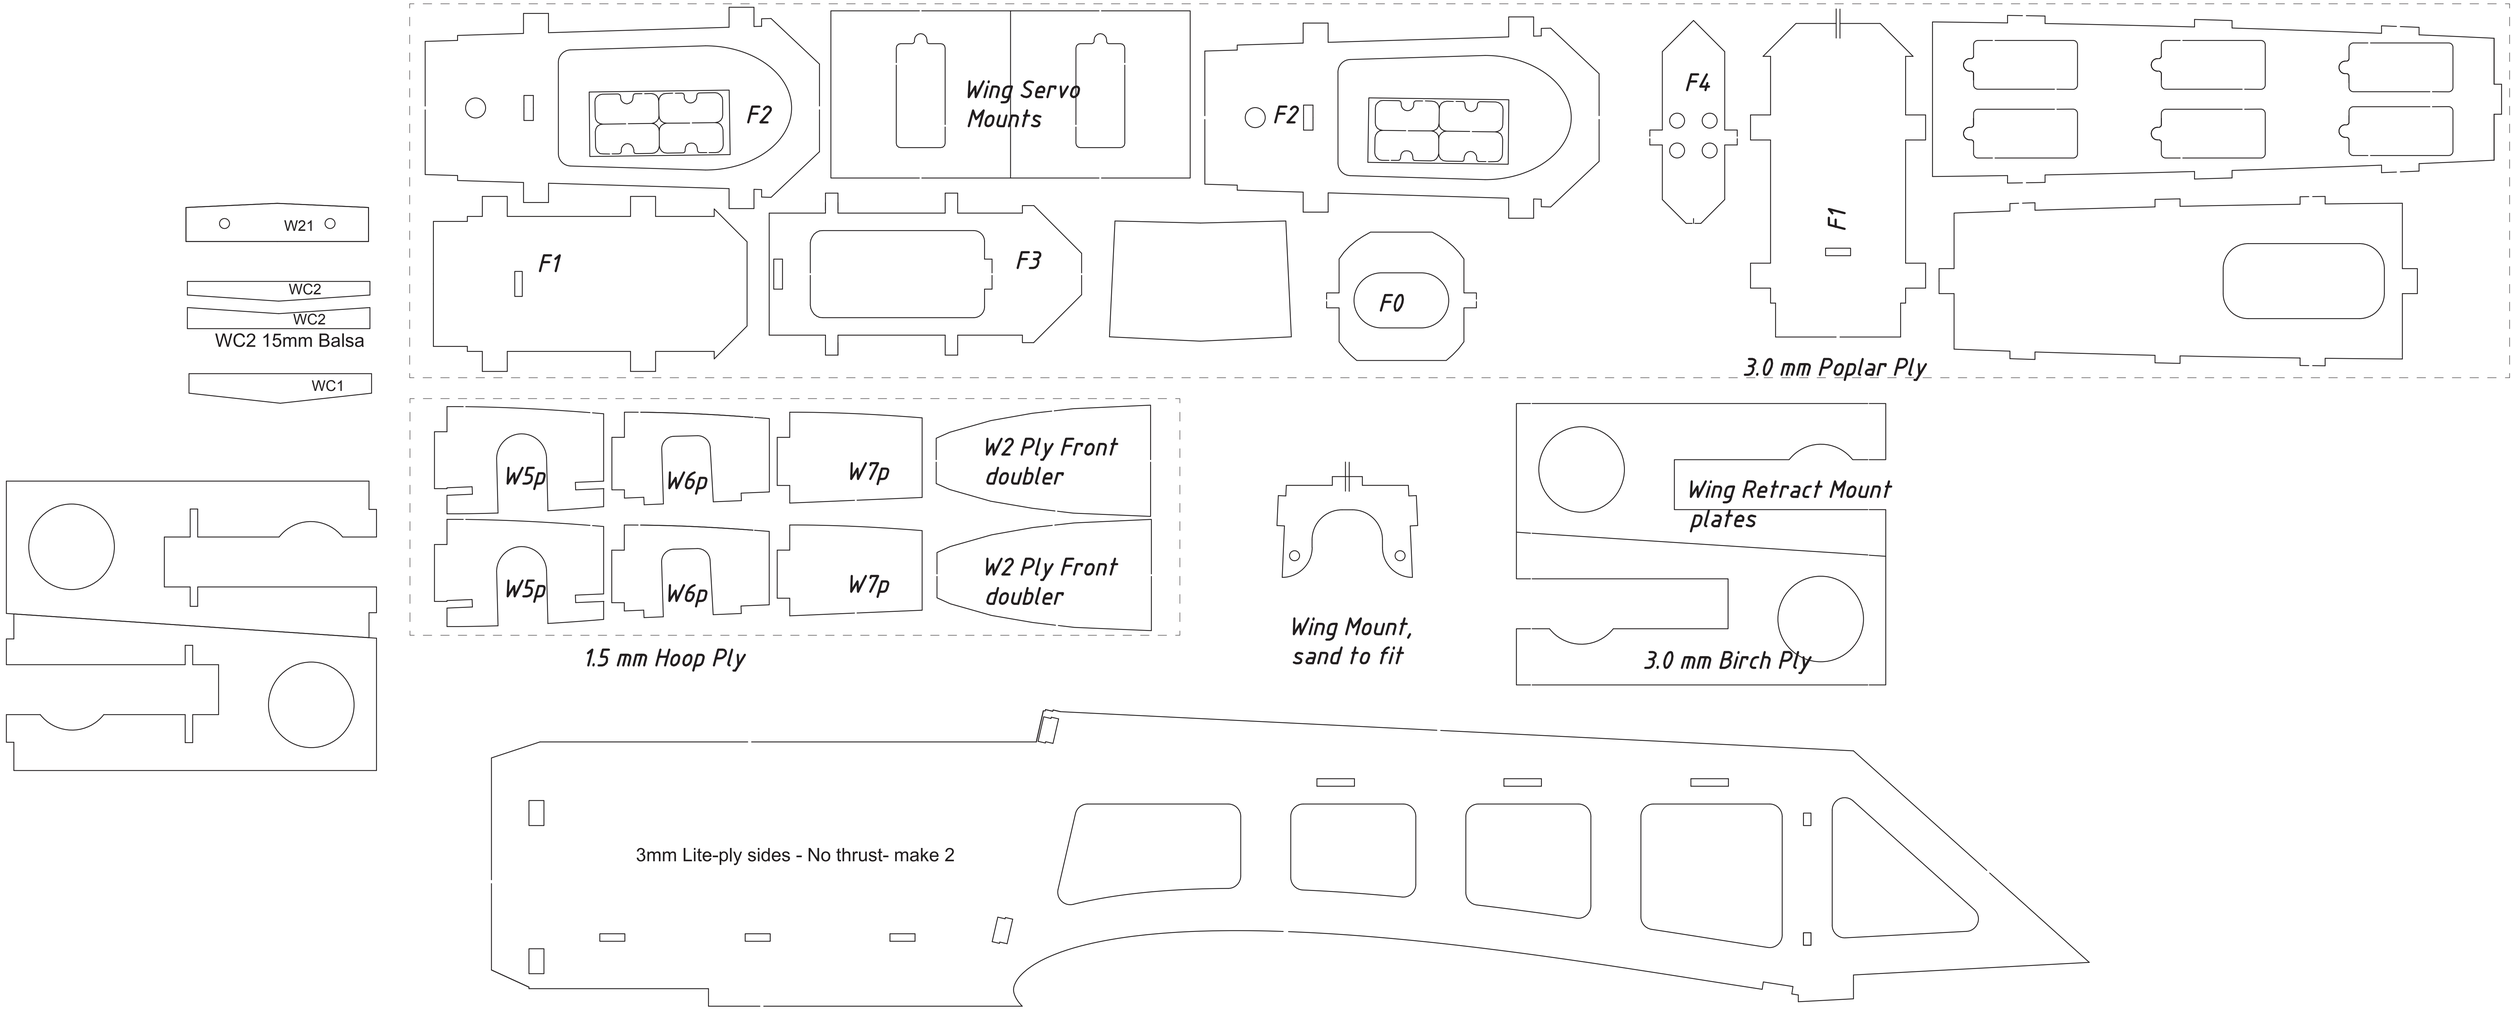
F2
Wing Servo Mounts
F2
F4
F1
F1
F3
F0
3.0 mm Poplar Ply
W21
WC2
WC2
WC2 15mm Balsa
WC1
W5p
W6p
W7p
W2 Ply Front doubler
W5p
W6p
W7p
W2 Ply Front doubler
1.5 mm Hoop Ply
Wing Mount, sand to fit
Wing Retract Mount plates
3.0 mm Birch Ply
3mm Lite-ply sides - No thrust- make 2

3mm



2mm

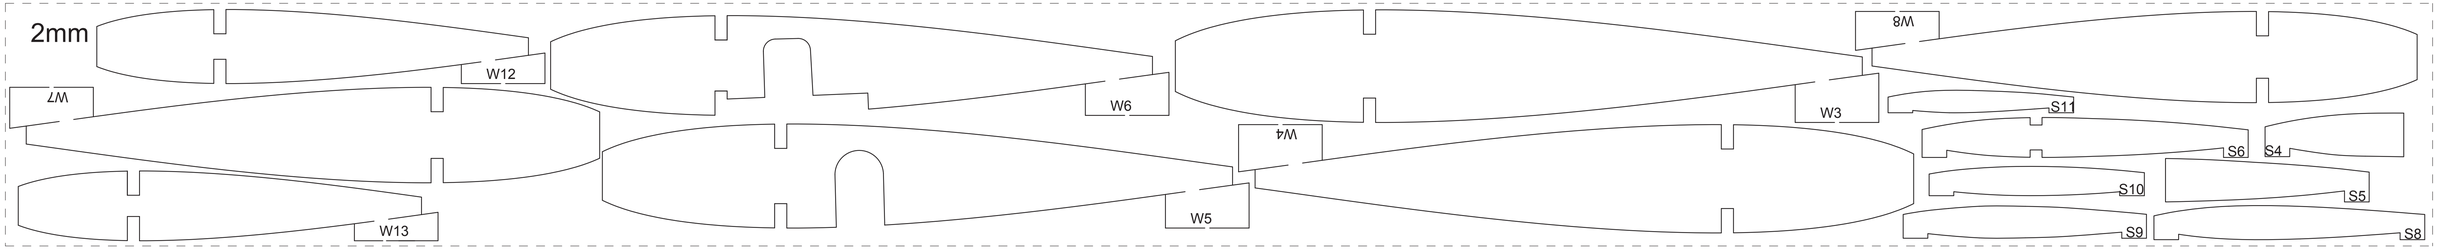

2mm

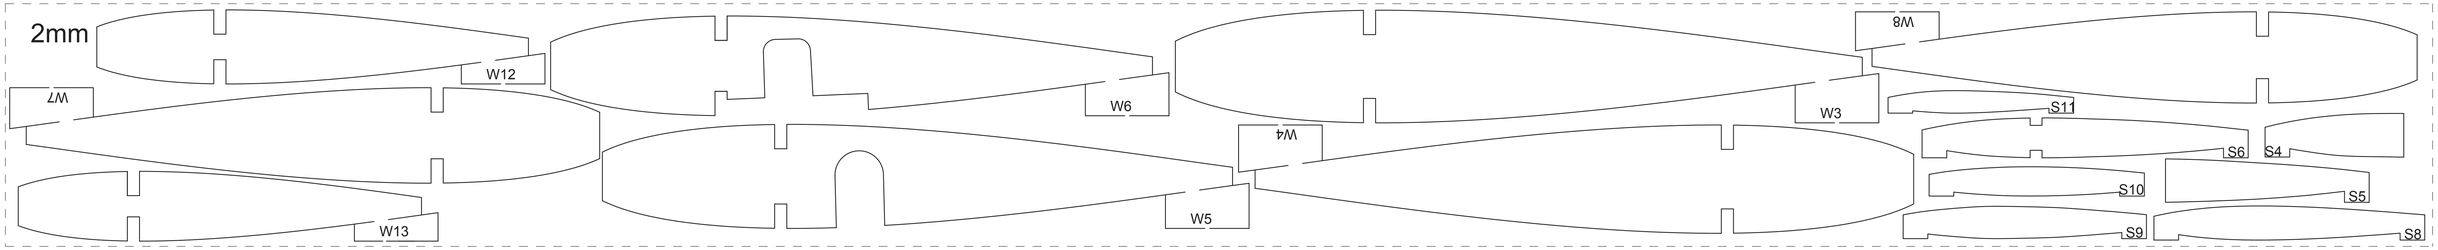

2mm

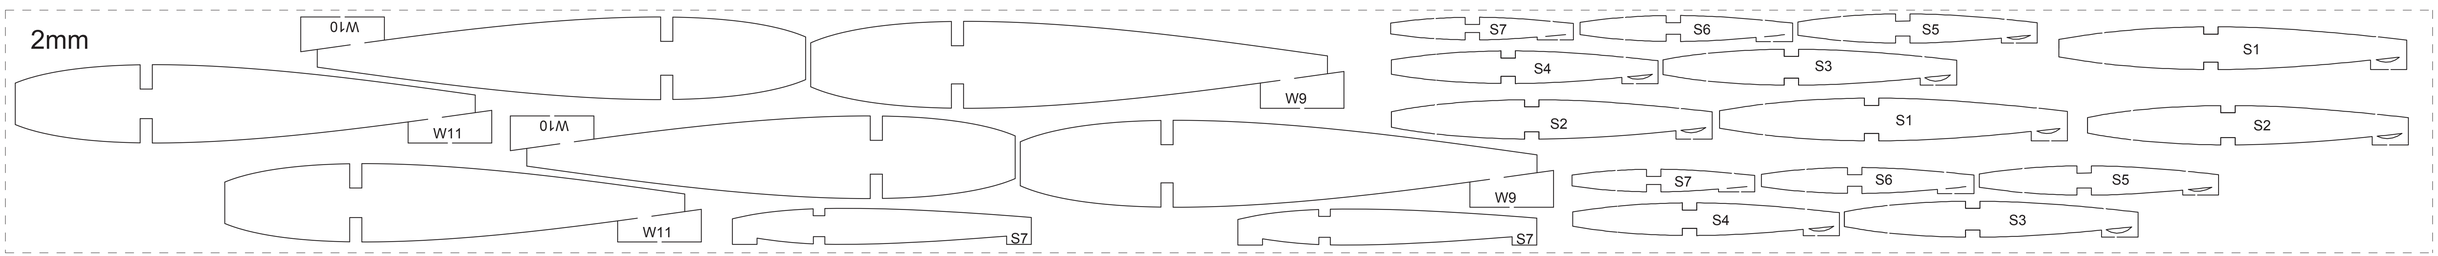
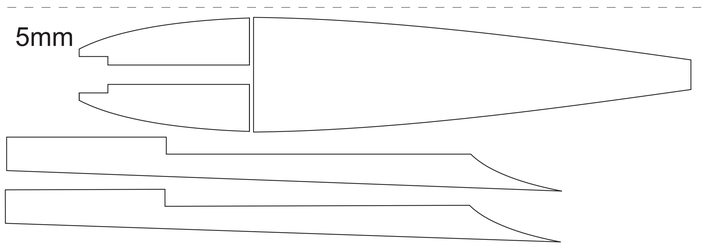
5mm