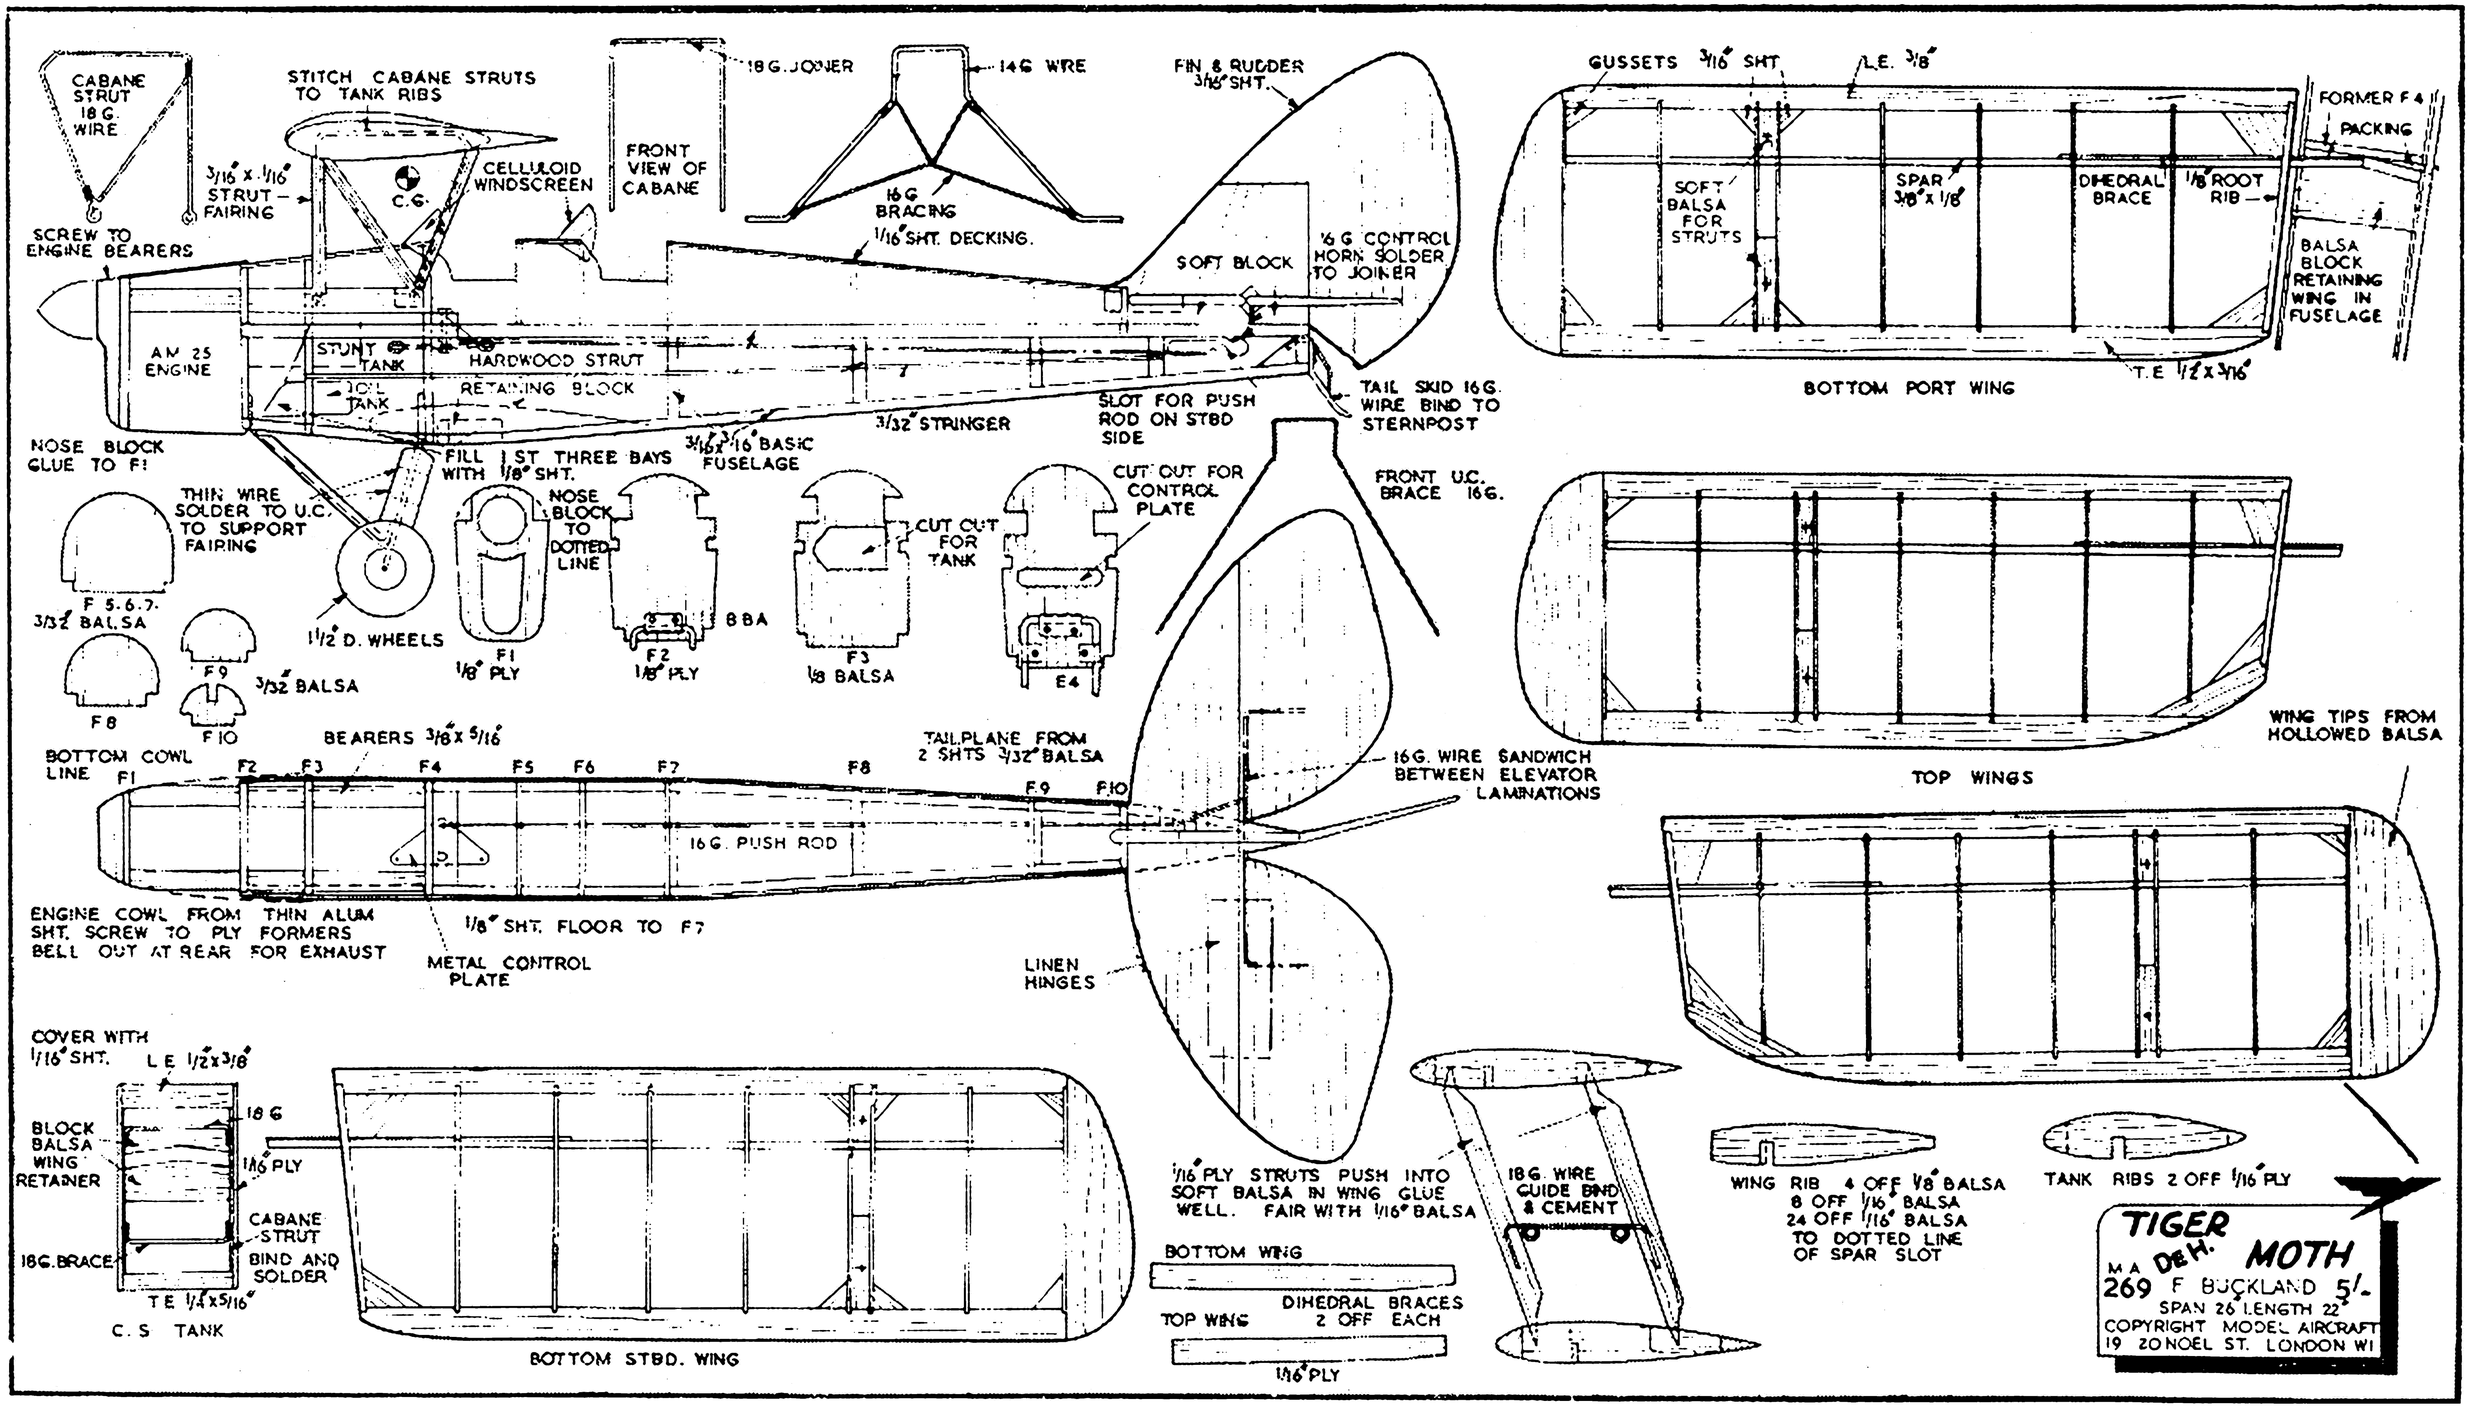
CABANE STRUT 18 G. WIRE
STITCH CABANE STRUTS TO TANK RIBS
18 G. JOINER
14 G WIRE
FIN & RUDDER 3/16" SHT.
3/16" x 1/16" STRUT FAIRING
C.G.
CELLULOID WINDSCREEN
FRONT VIEW OF CABANE
16 G BRACING
1/16" SHT. DECKING.
SCREW TO ENGINE BEARERS
SOFT BLOCK
16 G CONTROL HORN SOLDER TO JOINER
AM 25 ENGINE
STUNT TANK
HARDWOOD STRUT
OIL TANK
RETAINING BLOCK
TAIL SKID 16 G. WIRE BIND TO STERNPOST
SLOT FOR PUSH ROD ON STBD SIDE
3/32" STRINGER
3/16" x 3/16" BASIC FUSELAGE
NOSE BLOCK GLUE TO F1
FILL 1ST THREE BAYS WITH 1/8" SHT.
THIN WIRE SOLDER TO U.C. TO SUPPORT FAIRING
NOSE BLOCK TO DOTTED LINE
CUT OUT FOR TANK
CUT OUT FOR CONTROL PLATE
FRONT U.C. BRACE 16 G.
F 5.6.7. 3/32" BALSA
1 1/2" D. WHEELS
F1 1/8" PLY
F2 1/8" PLY
8 BA
F3 1/8 BALSA
E4
F9
3/32" BALSA
F8
F10
BOTTOM COWL LINE
BEARERS 3/8" x 5/16"
F1 F2 F3 F4 F5 F6 F7 F8 F9 F10
TAILPLANE FROM 2 SHTS 3/32" BALSA
16 G. WIRE SANDWICH BETWEEN ELEVATOR LAMINATIONS
16 G. PUSH ROD
ENGINE COWL FROM THIN ALUM SHT. SCREW TO PLY FORMERS BELL OUT AT REAR FOR EXHAUST
1/8" SHT. FLOOR TO F7
METAL CONTROL PLATE
LINEN HINGES
GUSSETS 3/16" SHT
L.E. 3/8"
FORMER F4
PACKING
SOFT BALSA FOR STRUTS
SPAR 3/8" x 1/8"
DIHEDRAL BRACE
1/8" ROOT RIB
BALSA BLOCK RETAINING WING IN FUSELAGE
T.E 1/2" x 3/16"
BOTTOM PORT WING
WING TIPS FROM HOLLOWED BALSA
TOP WINGS
COVER WITH 1/16" SHT.
L E 1/2" x 3/8"
18 G
BLOCK BALSA WING RETAINER
1/16" PLY
CABANE STRUT
BIND AND SOLDER
18 G. BRACE
T E 1/4" x 5/16"
C. S TANK
BOTTOM STBD. WING
1/16" PLY STRUTS PUSH INTO SOFT BALSA IN WING GLUE WELL. FAIR WITH 1/16" BALSA
18 G. WIRE GUIDE BIND & CEMENT
BOTTOM WING
TOP WING
DIHEDRAL BRACES 2 OFF EACH
1/16" PLY
WING RIB 4 OFF 1/8" BALSA
8 OFF 1/16" BALSA
24 OFF 1/16" BALSA
TO DOTTED LINE OF SPAR SLOT
TANK RIBS 2 OFF 1/16" PLY
TIGER MOTH
M A DE H.
269 F BUCKLAND 5/-
SPAN 26 LENGTH 22"
COPYRIGHT MODEL AIRCRAFT
19 20 NOEL ST. LONDON W1