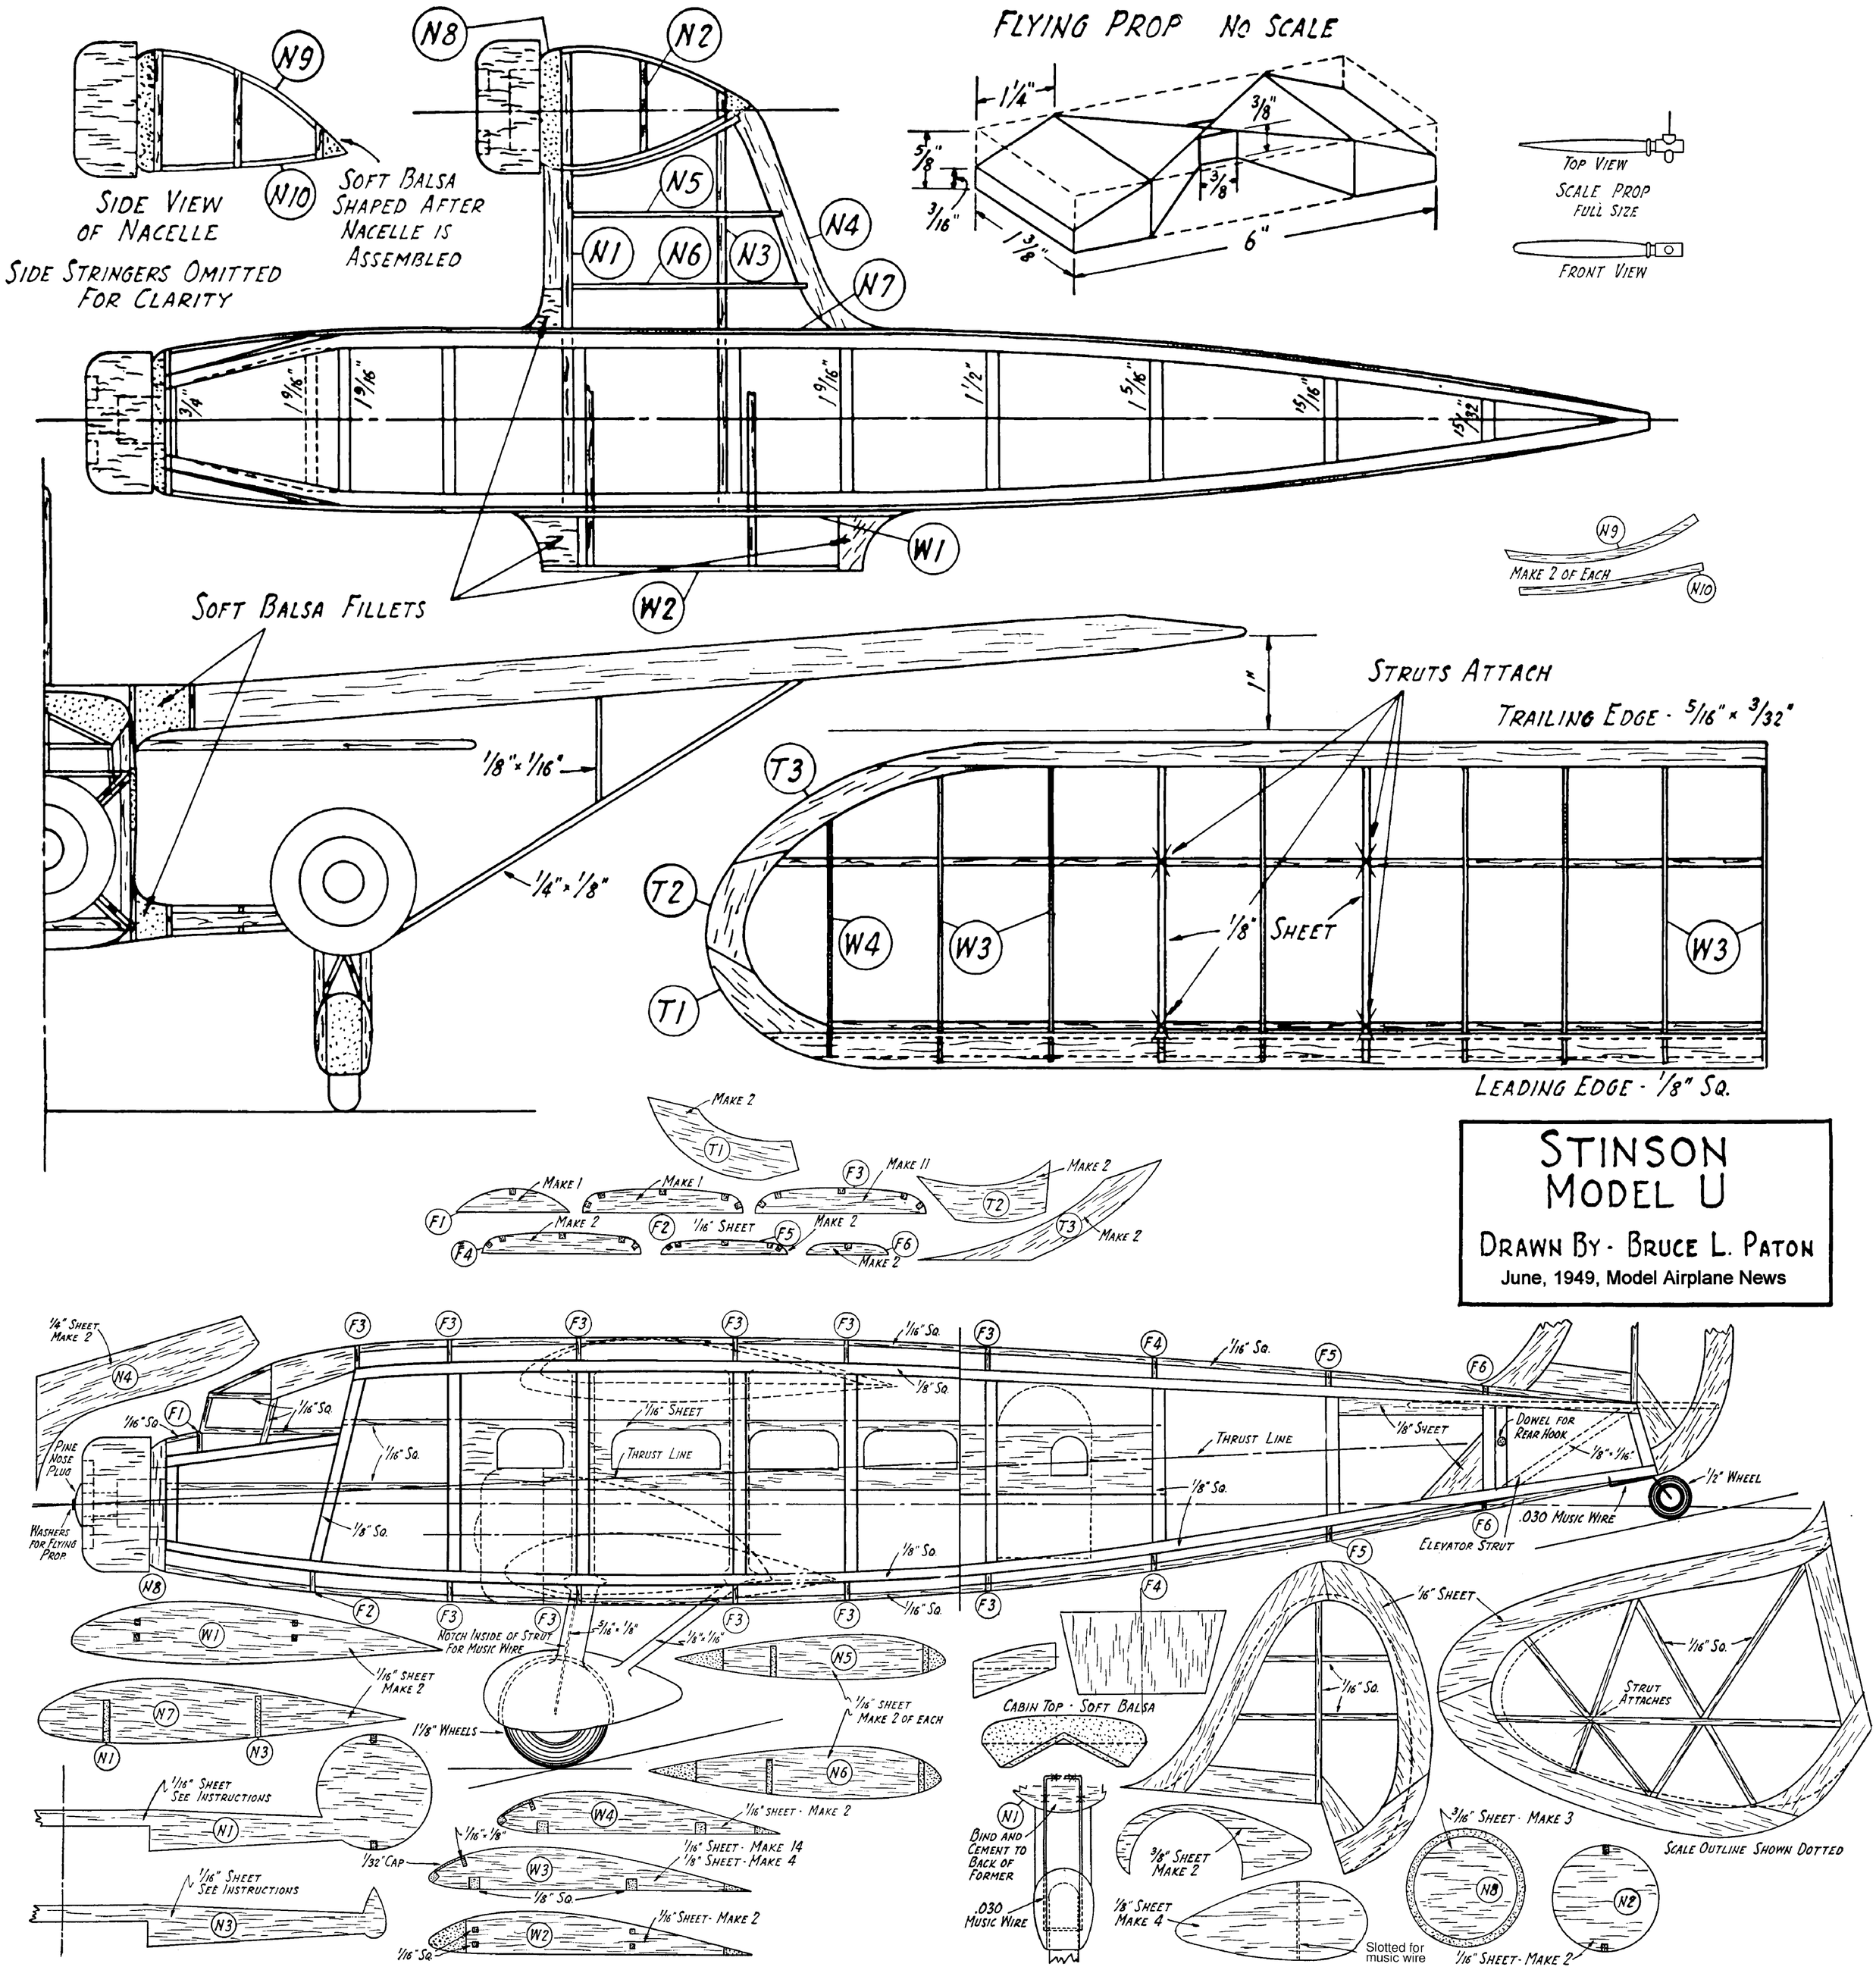
Side View of Nacelle
Side Stringers Omitted For Clarity
Soft Balsa Shaped After Nacelle is Assembled
N9
N10
N8
N2
N5
N1
N6
N3
N4
N7
Flying Prop No Scale
1 1/4"
3/8"
5/8"
3/16"
1 3/8"
6"
Top View
Scale Prop Full Size
Front View
3/4"
1 9/16"
1 9/16"
1 9/16"
1 1/2"
1 5/16"
15/16"
15/32"
W1
W2
Make 2 of Each
Soft Balsa Fillets
1/8" x 1/16"
1/4" x 1/8"
1"
Struts Attach
Trailing Edge - 5/16" x 3/32"
T3
T2
T1
W4
W3
1/8" Sheet
Leading Edge - 1/8" Sq.
Make 2
Make 1
Make 11
F1
F2
F3
F4
F5
F6
1/16" Sheet
Stinson Model U
Drawn By - Bruce L. Paton
June, 1949, Model Airplane News
1/4" Sheet Make 2
1/16" Sq.
1/8" Sq.
1/16" Sheet
Thrust Line
Pine Nose Plug
Washers for Flying Prop.
Dowel for Rear Hook
1/8" x 1/16"
1/2" Wheel
.030 Music Wire
Elevator Strut
Notch Inside of Strut for Music Wire
5/16" x 1/8"
1/16" Sheet Make 2
1 1/8" Wheels
1/16" Sheet Make 2 of Each
1/16" Sheet See Instructions
1/32" Cap
1/16" x 1/8"
1/16" Sheet - Make 14
1/8" Sheet - Make 4
1/16" Sheet - Make 2
Cabin Top - Soft Balsa
Bind and Cement to Back of Former
3/8" Sheet Make 2
1/8" Sheet Make 4
Slotted for music wire
3/16" Sheet - Make 3
Strut Attaches
Scale Outline Shown Dotted