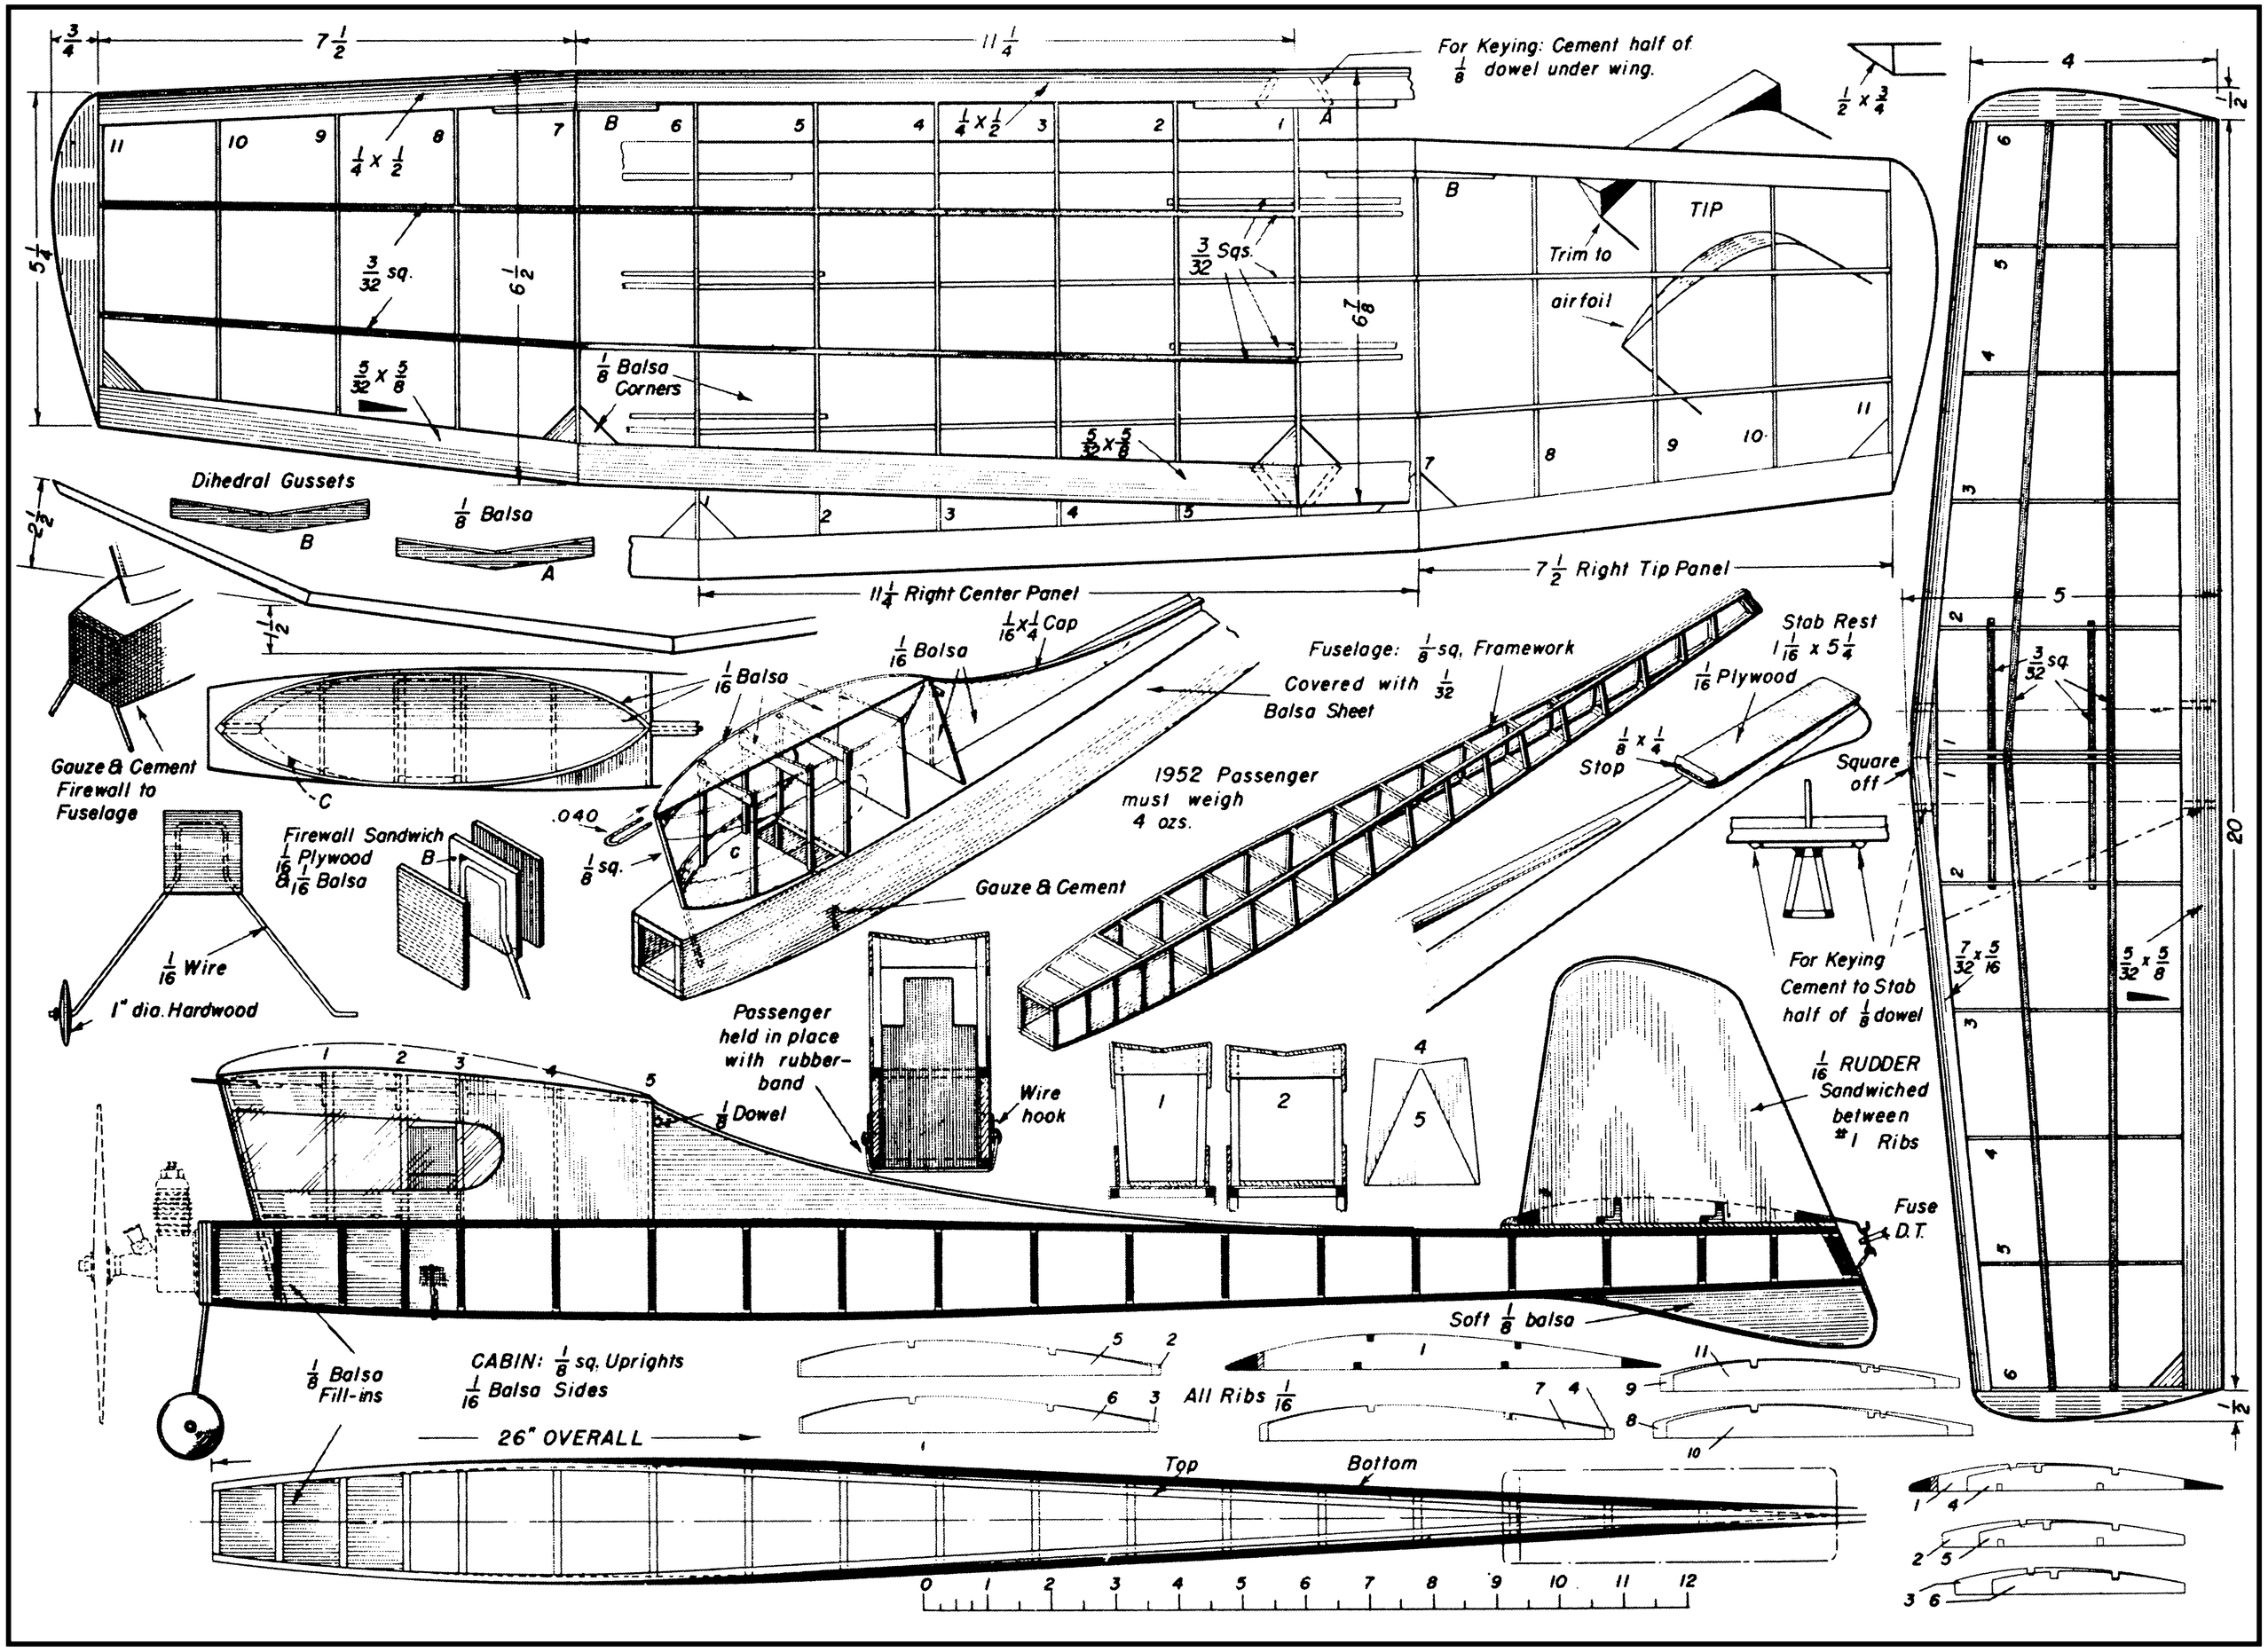
For Keying: Cement half of 1/8 dowel under wing.
1/4 x 1/2
3/32 sq.
5/32 x 5/8
1/8 Balsa Corners
3/32 Sqs.
Trim to airfoil
TIP
Dihedral Gussets
1/8 Balsa
7 1/2 Right Tip Panel
11 1/4 Right Center Panel
1/2 x 3/4
Stab Rest 1 1/16 x 5 1/4
1/16 Plywood
Square off
Fuselage: 1/8 sq. Framework
Covered with 1/32 Balsa Sheet
1/16 x 1/4 Cap
1/16 Balsa
1/8 x 1/4 Stop
1952 Passenger must weigh 4 ozs.
Gauze & Cement
Gauze & Cement Firewall to Fuselage
Firewall Sandwich 1/16 Plywood & 1/16 Balsa
.040
1/8 sq.
1/16 Wire
1" dia. Hardwood
Passenger held in place with rubber-band
Wire hook
1/8 Dowel
For Keying Cement to Stab half of 1/8 dowel
7/32 x 5/16
5/32 x 5/8
1/16 RUDDER Sandwiched between #1 Ribs
Fuse D.T.
Soft 1/8 balsa
1/8 Balsa Fill-ins
CABIN: 1/8 sq. Uprights
1/16 Balsa Sides
All Ribs 1/16
26" OVERALL
Top
Bottom