CHICKEN TRAINER

designed by

TERRY BADIS

Radio Modeller Plans Service

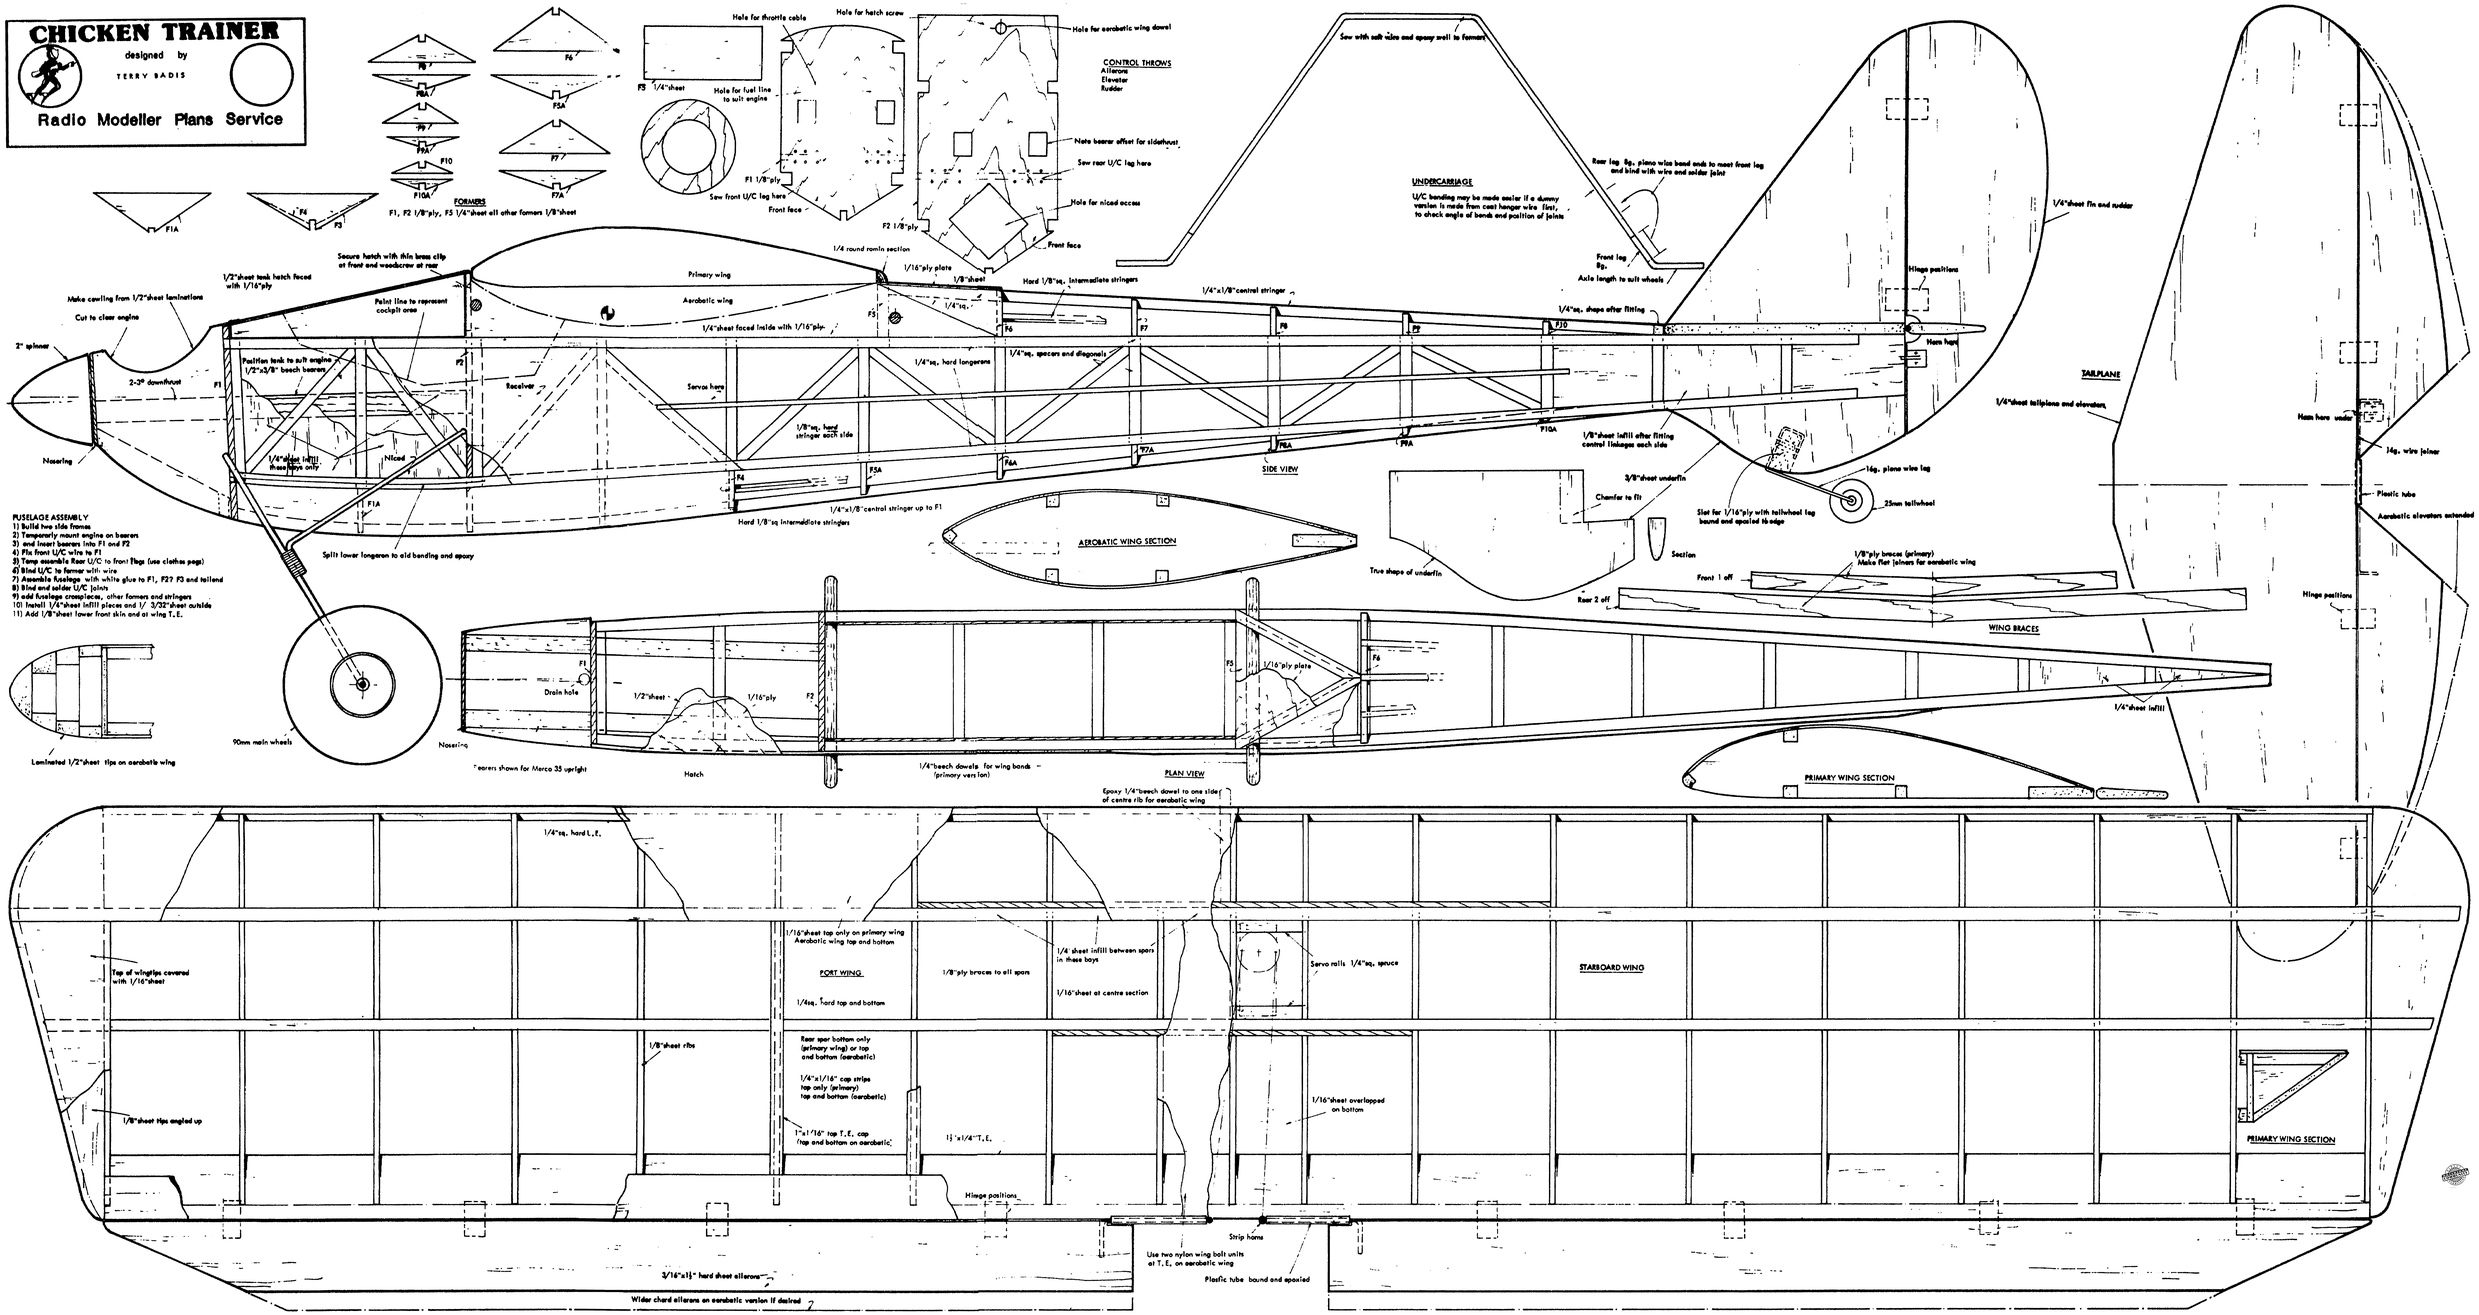

FUSELAGE ASSEMBLY

1) Build two side frames
2) Temporarily mount engine on bearers
3) and insert bearers into F1 and F2
4) Fit front U/C wire to F1
5) Temp assemble Rear U/C to front flags (use clothes pegs)
6) Bind U/C to former with wire
7) Assemble fuselage with white glue to F1, F2? F3 and tailand
8) Bind and solder U/C joints
9) add fuselage cowpiece, other formers and stringers
10) Install 1/4"sheet infill pieces and 1/ 3/32"sheet outside
11) Add 1/8"sheet lower front skin and at wing T.E.