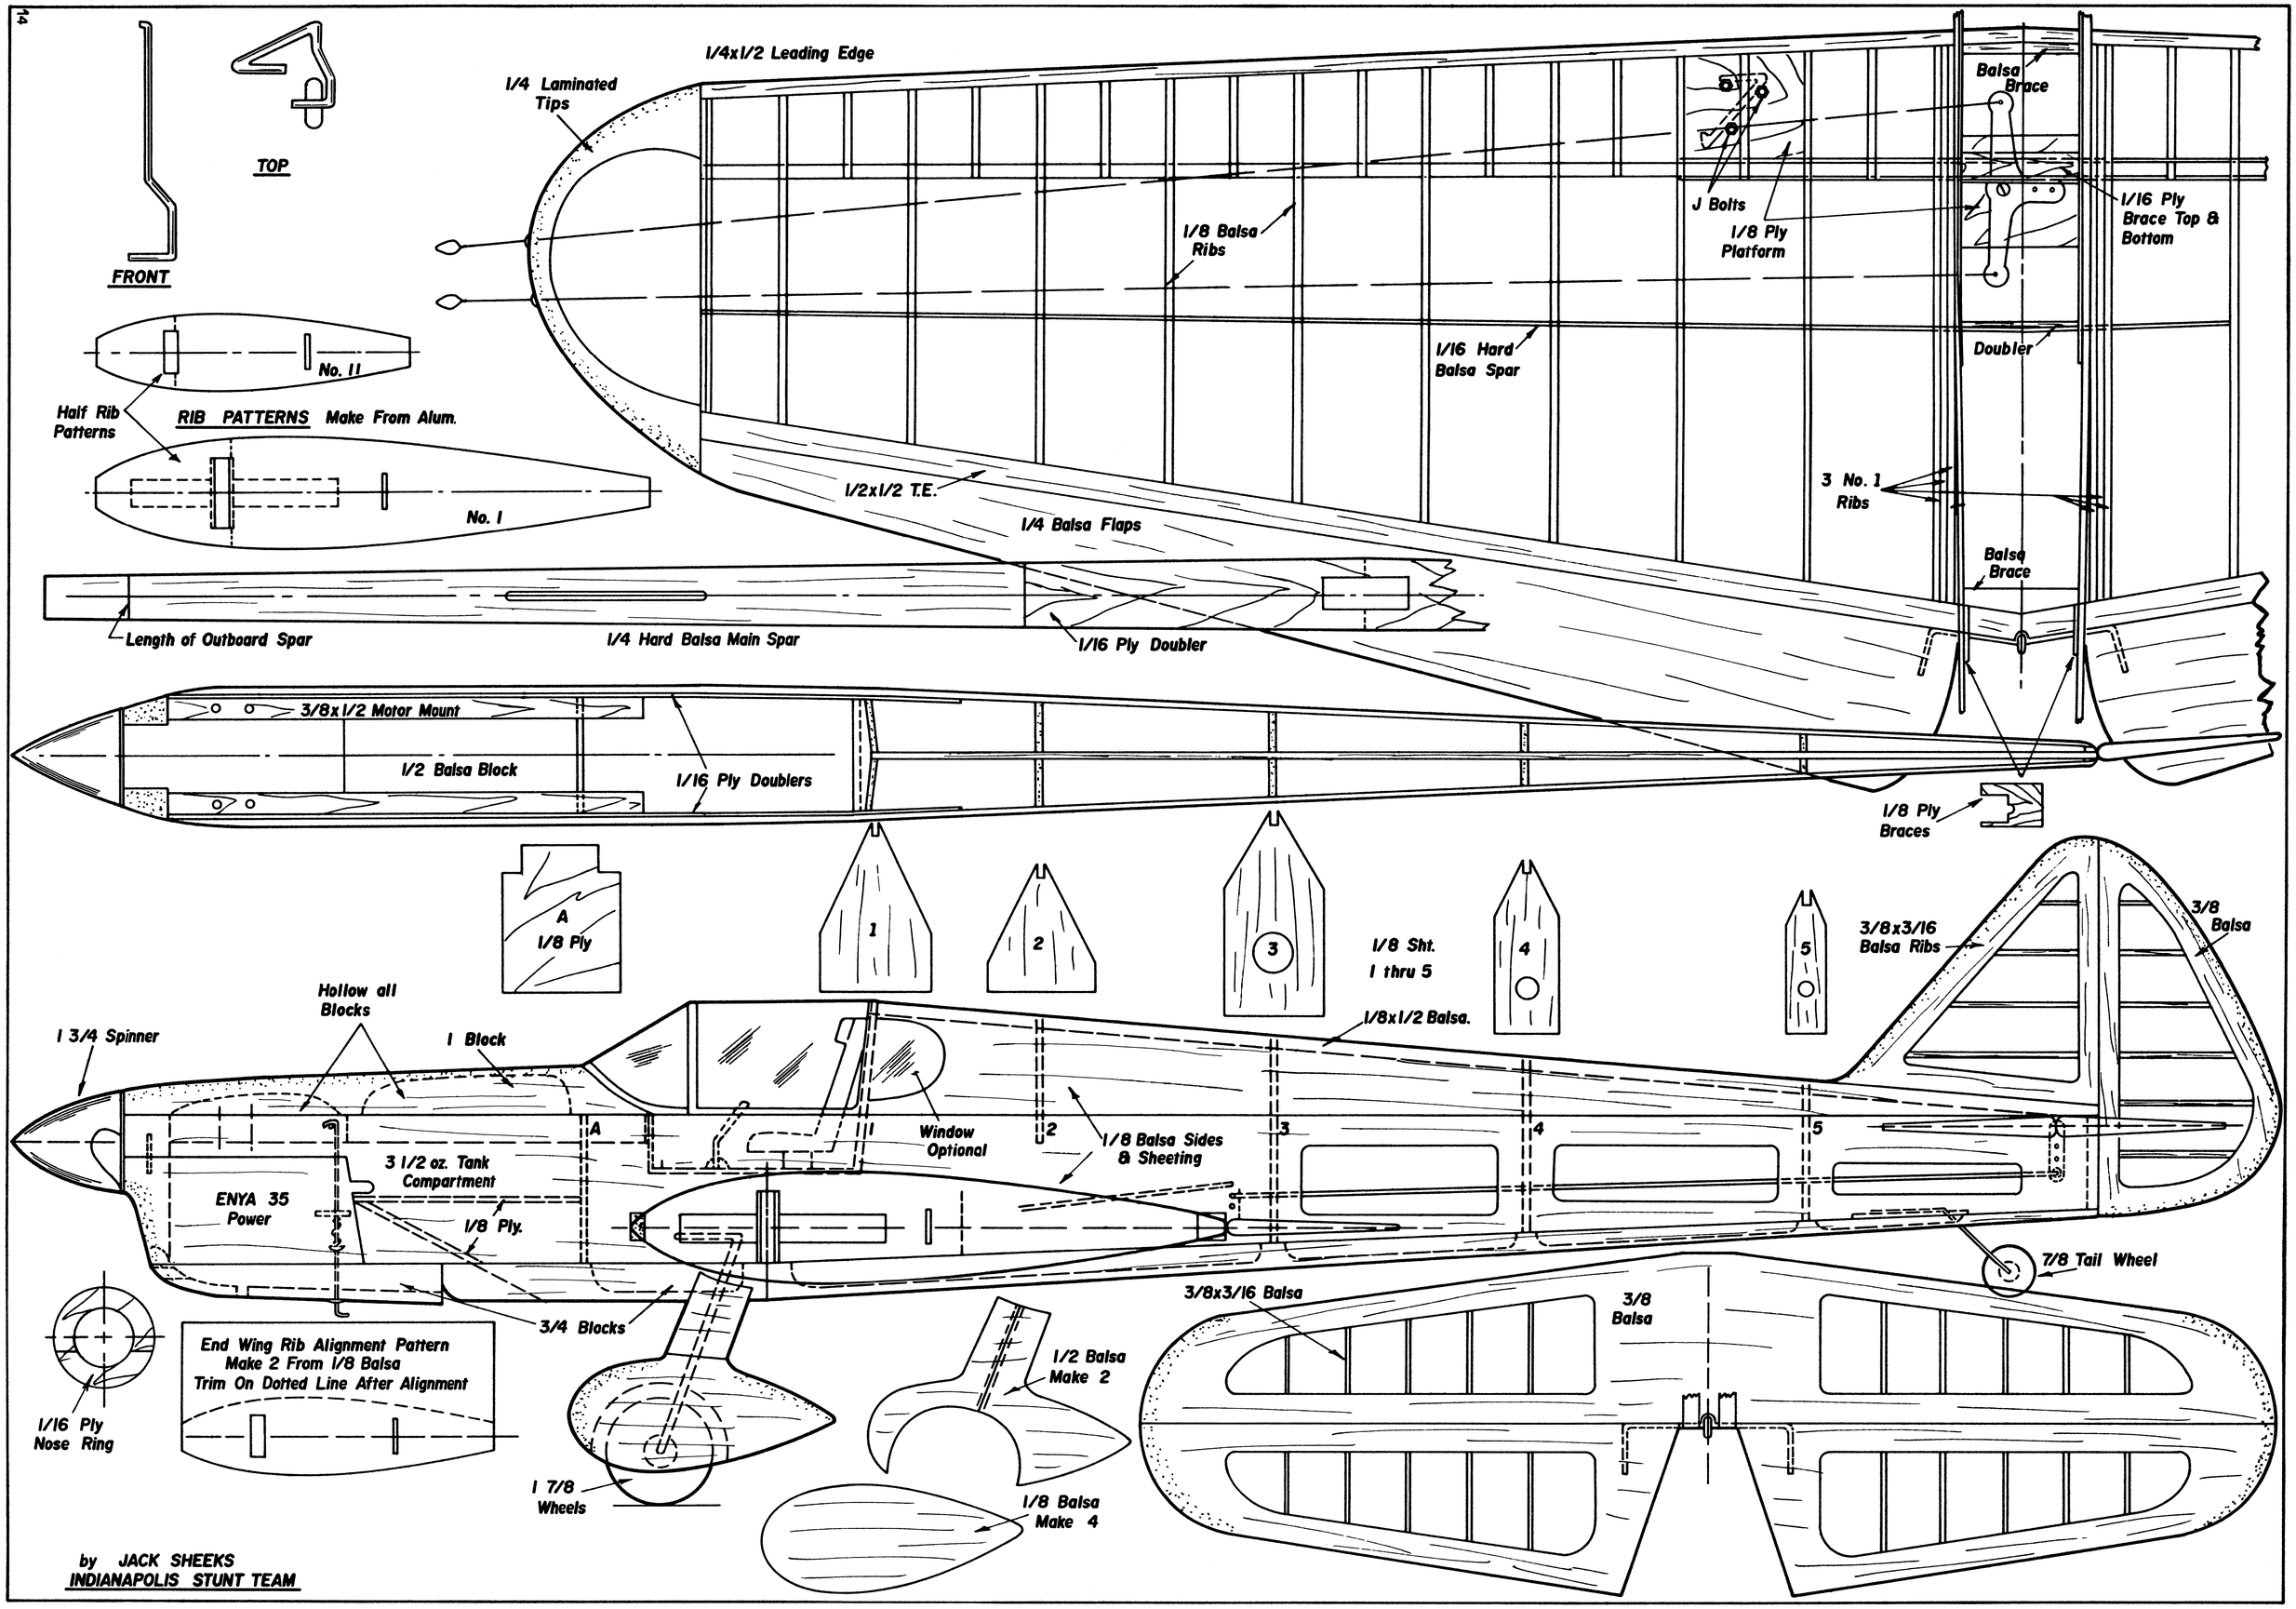
TOP
FRONT
1/4x1/2 Leading Edge
1/4 Laminated Tips
Balsa Brace
J Bolts
1/8 Ply Platform
1/16 Ply Brace Top & Bottom
1/8 Balsa Ribs
1/16 Hard Balsa Spar
Doubler
No. 11
Half Rib Patterns
RIB PATTERNS Make From Alum.
No. 1
1/2x1/2 T.E.
1/4 Balsa Flaps
3 No. 1 Ribs
Balsa Brace
Length of Outboard Spar
1/4 Hard Balsa Main Spar
1/16 Ply Doubler
3/8x1/2 Motor Mount
1/2 Balsa Block
1/16 Ply Doublers
1/8 Ply Braces
A
1/8 Ply
1
2
3
1/8 Sht.
1 thru 5
4
5
3/8x3/16 Balsa Ribs
3/8 Balsa
1 3/4 Spinner
Hollow all Blocks
1 Block
1/8x1/2 Balsa.
Window Optional
1/8 Balsa Sides & Sheeting
3 1/2 oz. Tank Compartment
ENYA 35 Power
1/8 Ply.
7/8 Tail Wheel
3/4 Blocks
3/8x3/16 Balsa
3/8 Balsa
End Wing Rib Alignment Pattern
Make 2 From 1/8 Balsa
Trim On Dotted Line After Alignment
1/16 Ply Nose Ring
1/2 Balsa Make 2
1 7/8 Wheels
1/8 Balsa Make 4
by JACK SHEEKS
INDIANAPOLIS STUNT TEAM