TO BUILD IT — FOLLOW THESE STEPS

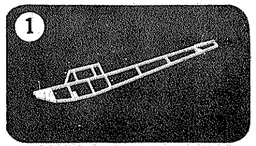

1. BUILD THE FUSELAGE SIDE FRAMES ON THE SHADED LAYOUT OF THE FUSELAGE SIDE VIEW. PUT WAX PAPER OVER THE LAYOUT TO KEEP THE GLUE FROM STICKING TO IT. USE STRAIGHT PINS TO HOLD THE STRIPS.

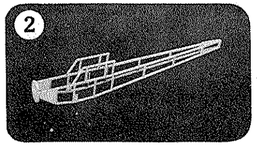

2. WHEN THE SIDES ARE MADE, GLUE FORMER F4 WHERE IT BELONGS BETWEEN THE TWO SIDES. NOW CEMENT BOTH BACK ENDS TOGETHER.

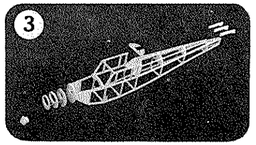

3. WHILE THAT IS DRYING, CUT THE CROSSBRACES YOU WILL NEED - 1 OF EACH. SEE NOTE NEAR FUSELAGE. NOW CEMENT THESE WHERE THEY BELONG WITH THE F PARTS YOU STILL HAVE. LOOK AT THE SIDE VIEW.

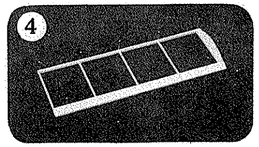

4. BUILD THE LEFT AND RIGHT WINGS ON THE LAYOUT. PUT WAX PAPER OVER IT FIRST, THEN PIN DOWN THE LEADING AND TRAILING EDGES AND W10. NOW GLUE IN WING TIPS W1 (FIRST) TO W4 (LAST) THEN ALL THE BASE STRIPS.

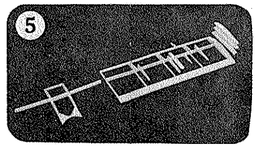

5. NOW YOU CEMENT ALL THE FRONT RIBS AGAINST THE BASE STRIPS. NEXT, CEMENT THE SPARS W13 AGAINST THE RIBS. NOW ALL THE BACK RIBS. GLUE IN GUSSETS W11 AND W12 TO W10. BUILD THE WING CENTER OVER THE PLAN.

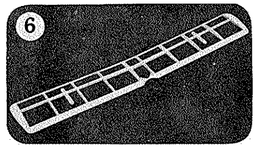

6. WHEN WING CENTER IS DRY, CEMENT IT BETWEEN THE WING FRAMES TO FINISH THE WING. SPAR BRACE W6 ALREADY HAS THE DIHEDRAL ANGLE IN IT (FOR FLYING STABILITY) - GLUE IT CAREFULLY TO THE WING SPARS W13. LET DRY WELL.

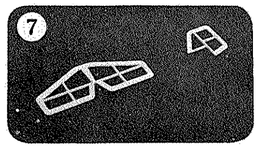

7. BUILD THE STABILIZER AND RUDDER OVER THE PLAN AS YOU DID THE WING AND FUSELAGE SIDES. ALL OF YOUR AIRPLANE'S FRAMEWORK MUST BE SANDPAPERED SMOOTH BEFORE COVERING IT WITH TISSUE. GLUE THE WING AND TAIL TO THE FUSELAGE ONLY AFTER THESE ARE COVERED. SEE TISSUE COVERING INSTRUCTIONS WITH KIT.

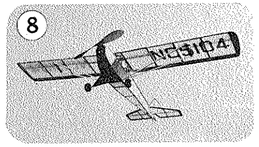

8. AN OVERHEAD VIEW OF THE TAYLOR CUB MODEL IN FULL FLIGHT

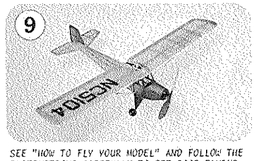

9. SEE "HOW TO FLY YOUR MODEL" AND FOLLOW THE INSTRUCTIONS CAREFULLY TO GET GOOD FLYING RESULTS. EVERYTHE YOU LET IT GO YOU SHOULD EXPECT A GOOD FLIGHT - IF IT ISN'T WINDY.

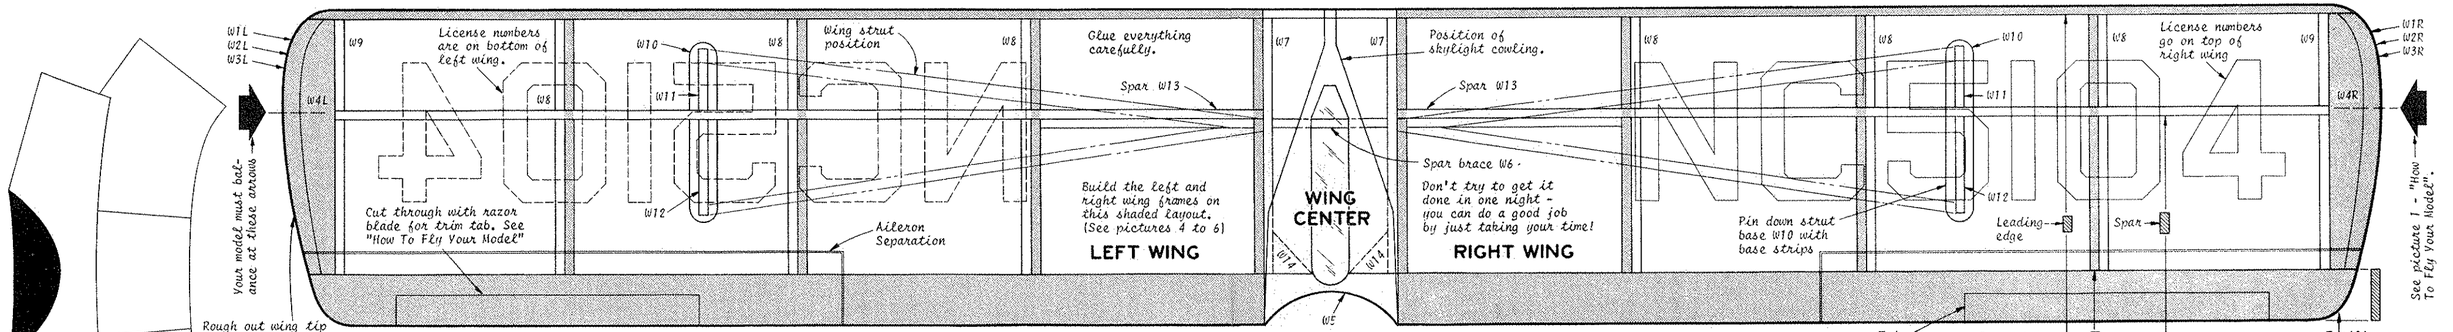

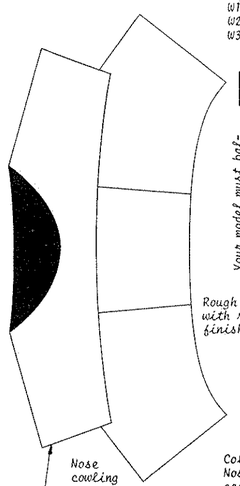

Color scheme:
Nose rudder and landing gear - green.
Wing, fuselage and stabilizer - yellow
Wing struts - yellow.

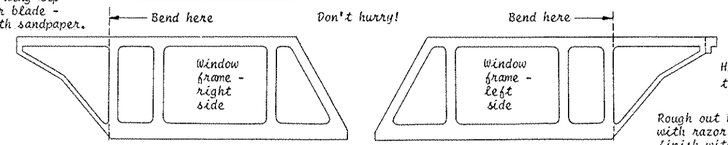

Windshield template
Put celluloid over this and window frames - then run a razor blade over outline. Dope tissue to frames and cut from plan. Attach to celluloid.

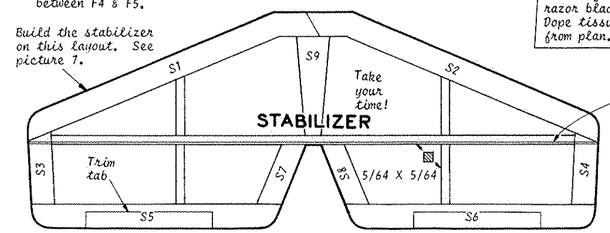

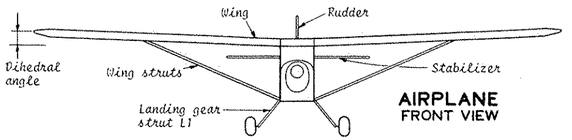

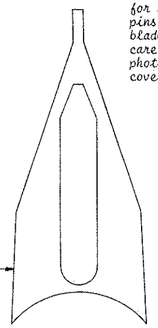

Skylight Cowling
Attach tissue and celluloid as you did with window frames - glue to model.

Use 2 strands or lengths of 1/8" flat rubber 8-1/4" long to power your plane.

Cut out instrument panel and glue to F5

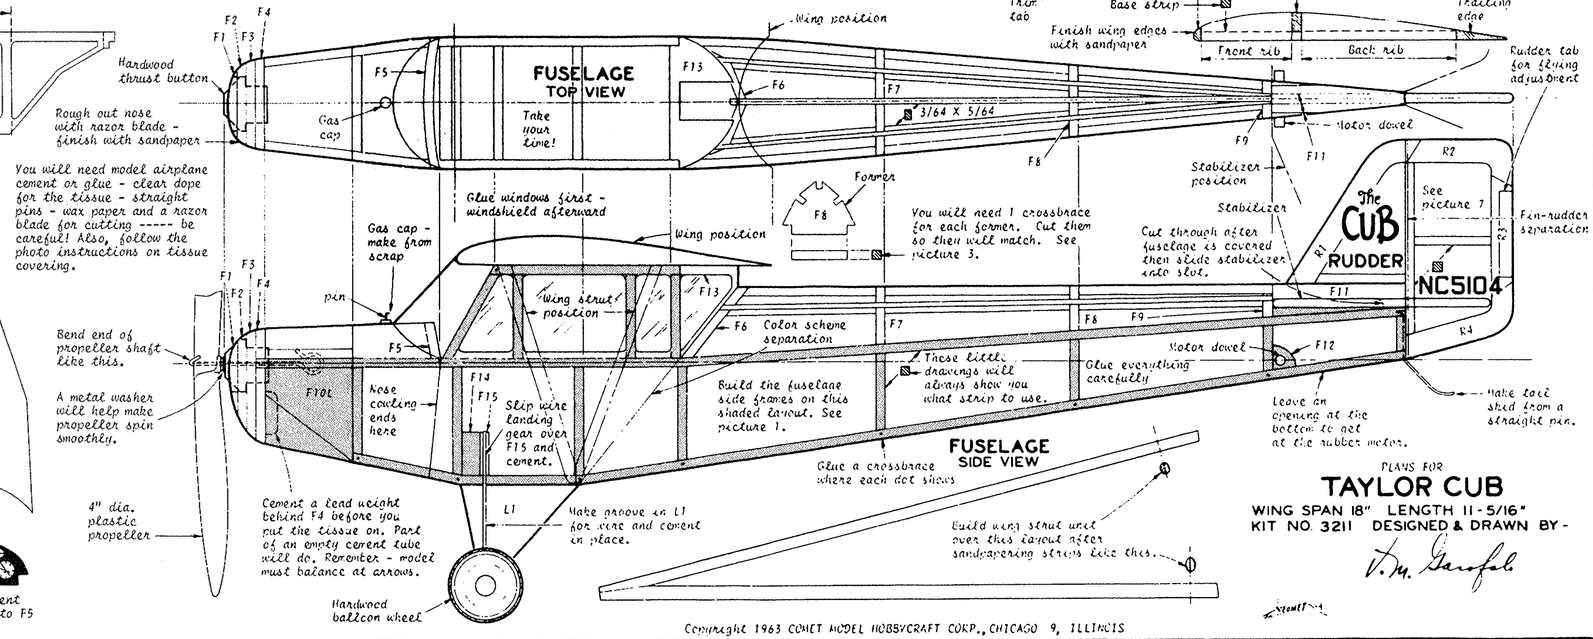

PLANS FOR

TAYLOR CUB

WING SPAN 18" LENGTH 11-5/16"
KIT NO. 3211 DESIGNED & DRAWN BY -

V. M. Garofalo

Copyright 1963 COMET MODEL HOBBYCRAFT CORP., CHICAGO 9, ILLINOIS

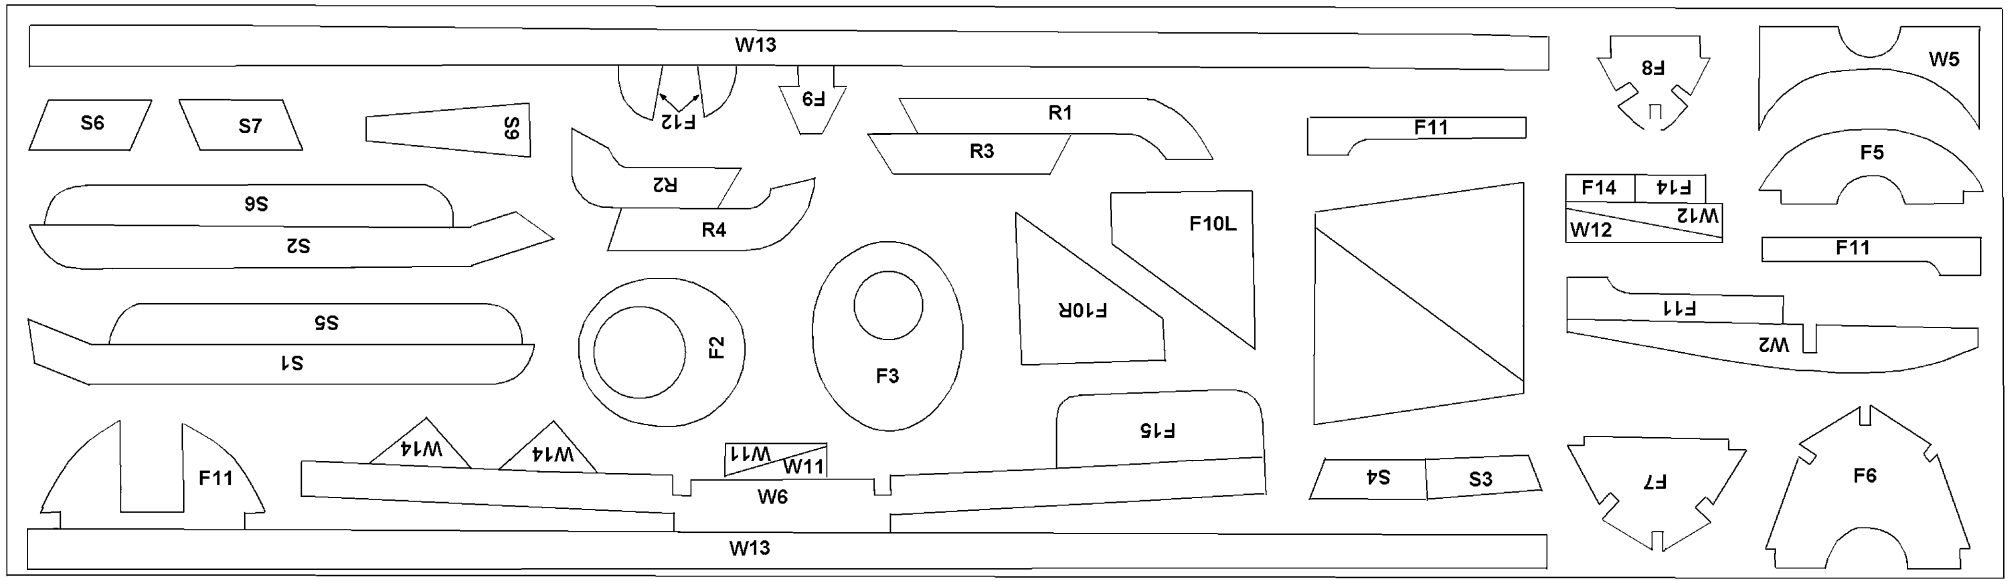
W13
F8
W5
S6
S7
S9
F12
F9
R1
R3
F11
F5
R2
R4
S6
S2
F14
F14
W12
W12
F10L
F11
F10R
F11
W2
S5
S1
F2
F3
F15
W11
W11
W14
W14
F11
W6
W13
S4
S3
F7
F6

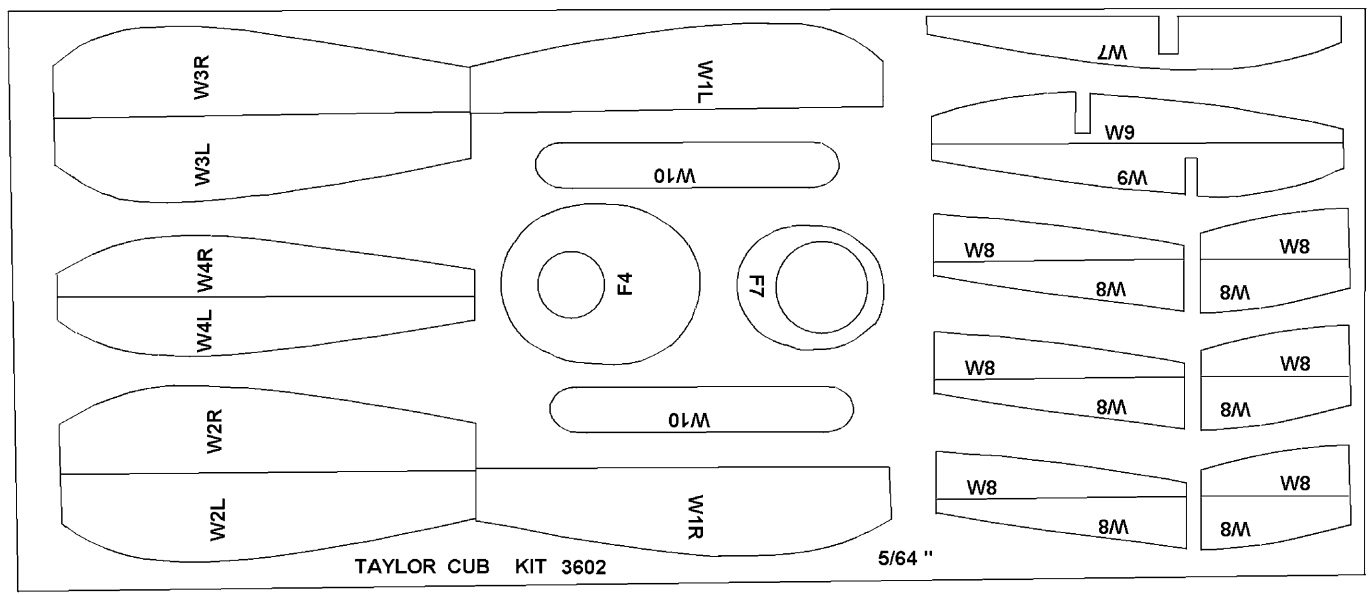
W7
W3R
W1L
W9
W3L
W10
W9
W8
W8
W4R
F4
F7
W8
W8
W4L
W8
W8
W8
W8
W2R
W10
W8
W8
W8
W8
W2L
W1R
TAYLOR CUB KIT 3602
5/64 "