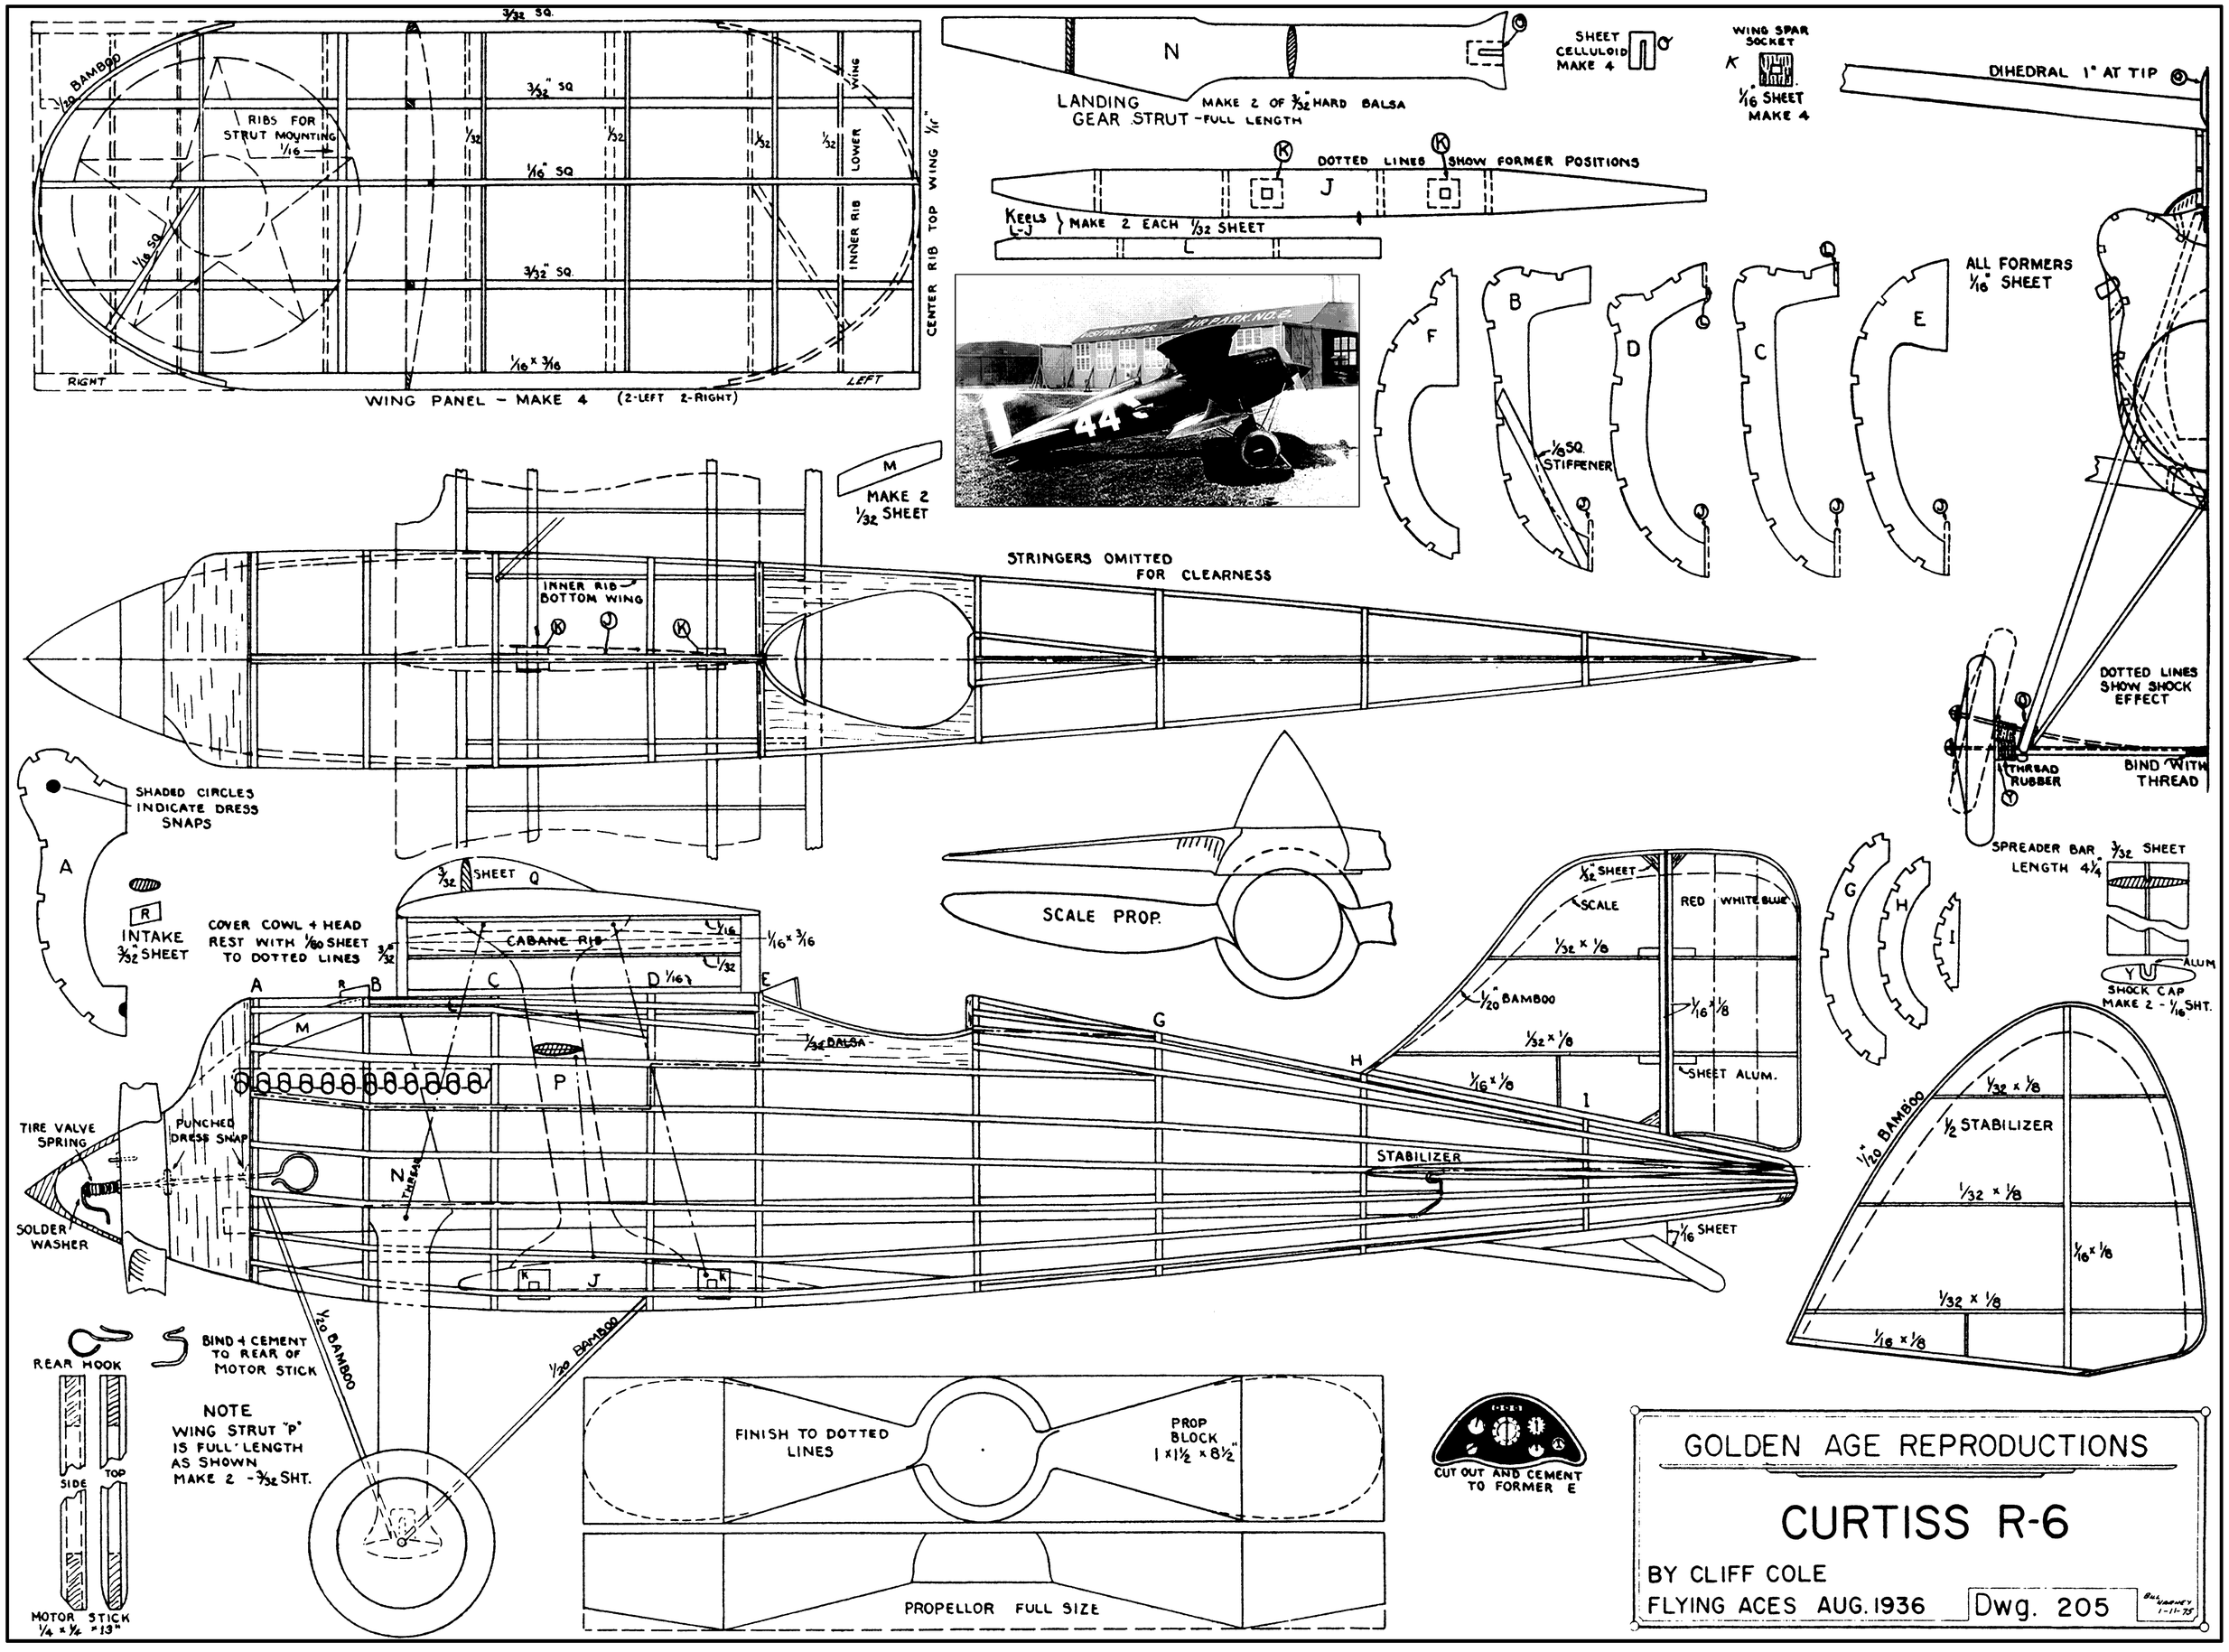
3/32 SQ.
BAMBOO 1/20
RIBS FOR STRUT MOUNTING 1/16
3/32" SQ
1/32
1/16" SQ
1/16 SQ
3/32" SQ.
1/16 x 3/16
RIGHT
LEFT
WING
LOWER
INNER RIB
CENTER RIB TOP WING 1/16"
WING PANEL - MAKE 4 (2-LEFT 2-RIGHT)
N
LANDING GEAR STRUT - FULL LENGTH
MAKE 2 OF 3/32" HARD BALSA
SHEET CELLULOID MAKE 4
WING SPAR SOCKET
1/16" SHEET MAKE 4
DIHEDRAL 1" AT TIP
DOTTED LINES SHOW FORMER POSITIONS
J
KEELS L-J MAKE 2 EACH 1/32 SHEET
L
AIR PARK NO. 2
44
F
B
D
C
E
ALL FORMERS 1/16" SHEET
1/8 SQ. STIFFENER
M
MAKE 2 1/32 SHEET
STRINGERS OMITTED FOR CLEARNESS
INNER RIB BOTTOM WING
DOTTED LINES SHOW SHOCK EFFECT
THREAD RUBBER
BIND WITH THREAD
SHADED CIRCLES INDICATE DRESS SNAPS
A
R
INTAKE 3/32" SHEET
COVER COWL + HEAD REST WITH 1/80 SHEET TO DOTTED LINES
3/32 SHEET Q
CABANE RIB
1/16 x 3/16
1/16
1/32
3/32
A
R
B
C
D 1/16
E
M
P
N THREAD
J
K
SCALE PROP.
SPREADER BAR 3/32 SHEET LENGTH 4 1/4"
ALUM
SHOCK CAP MAKE 2 - 1/16 SHT.
G
H
I
1/32" SHEET
SCALE
RED WHITE BLUE
1/32 x 1/8
1/20" BAMBOO
1/16 x 1/8
1/32 x 1/8
1/16 x 1/8
SHEET ALUM.
1/32 DALSA
G
H
I
STABILIZER
1/16 SHEET
TIRE VALVE SPRING
PUNCHED DRESS SNAP
SOLDER WASHER
1/20 BAMBOO
1/20 BAMBOO
1/20" BAMBOO
1/2 STABILIZER
1/32 x 1/8
1/16 x 1/8
1/32 x 1/8
1/16 x 1/8
REAR HOOK
BIND + CEMENT TO REAR OF MOTOR STICK
NOTE
WING STRUT "P" IS FULL LENGTH AS SHOWN MAKE 2 - 3/32 SHT.
SIDE
TOP
MOTOR STICK 1/4 x 1/4 x 13"
FINISH TO DOTTED LINES
PROP BLOCK 1 x 1 1/2 x 8 1/2"
PROPELLOR FULL SIZE
CUT OUT AND CEMENT TO FORMER E
GOLDEN AGE REPRODUCTIONS
CURTISS R-6
BY CLIFF COLE
FLYING ACES AUG. 1936
Dwg. 205