バルサ及びベニヤの抜型材を図面の番号と照合したのち
組み立てて下さい。

REED FALCON 120

製 作 ま え に

よりよい仕上りと一層の機能を発揮させるために、説明や図をよく読み、よく見て、順序よくていねいに正しく組み立てて下さい。
各部品は傷つけないようにカッターや小刀で切りはなし、組み合せ部分の切り込みやミゾなどは正確に切り取って無理なく組み合うように整形します。接合部には接着剤をつけ、釘・虫ピン・クリップ(洗たくバサミ)・糸・ゴムバンド・細い針金で仮り止めし、接着剤が完全に硬化したら、これらはすべて取り除きます。木部の加工や整形はカンナや小刀・ヤスリなどを使いますが、木片にサンドペーパーを巻くとヤスリと同じに使うことができます。

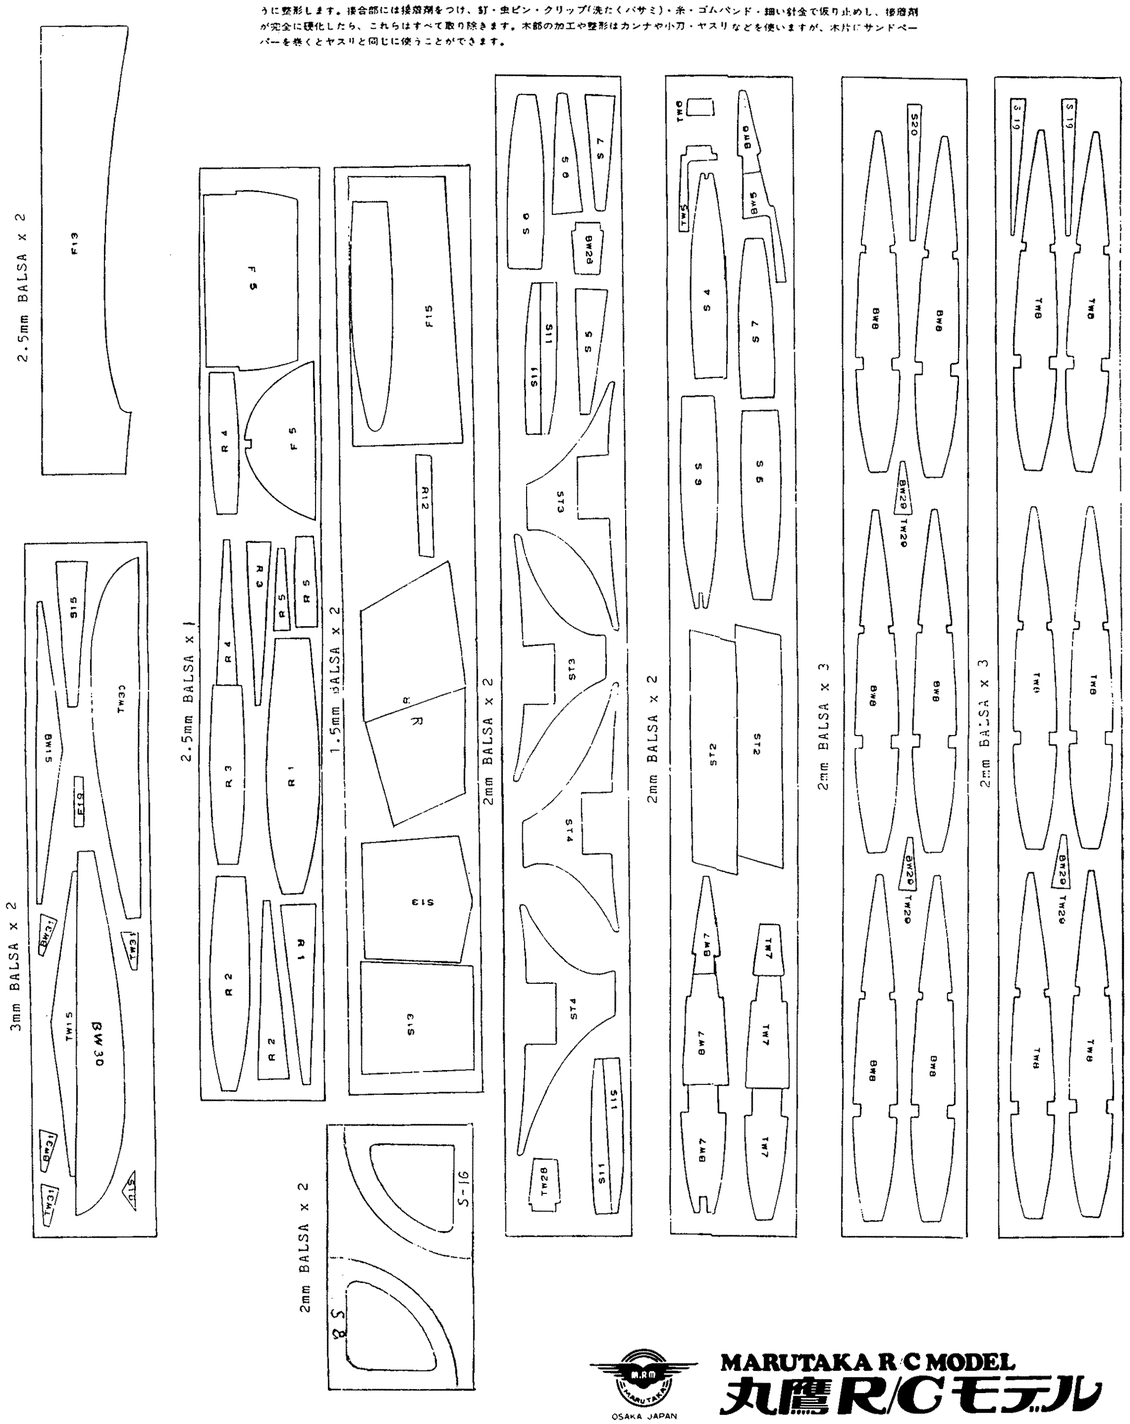

MARUTAKA R/C MODEL
丸鷹R/Cモデル
OSAKA JAPAN

REEO 120

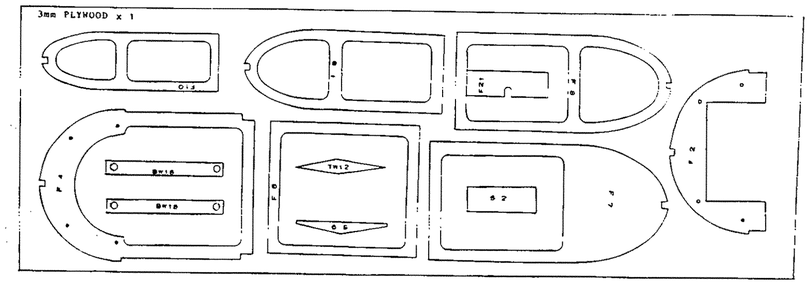

START ASSEMBLING AFTER REFERING THE DIE CUT BALSA AND PLYWOOD PARTS TO THE NUMBER ON THE PLANS.

BEFORE STARTING BUILDING

For better finish and flight performance, take time in reading building instruction and refering to the plans, and assemble in good order and correctly and carefully.
Cut off each part with cutter or razor blade avoiding damage, particularly on the joining cut out and slot.
If necessary, trim the parts for easier fitting. When cementing use thread, rubber band, pins, clothe clips etc.
Until cement sets for forming and working, cutter, balsa plane and/or file are to be used. Wood tip wrapped with sand paper can also be used as a file.

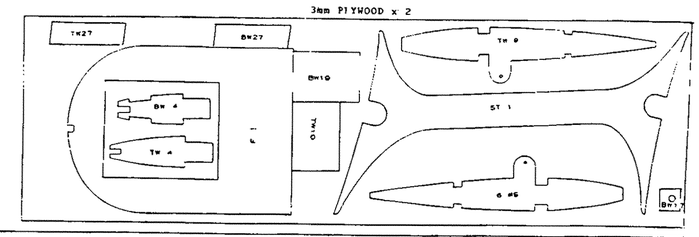

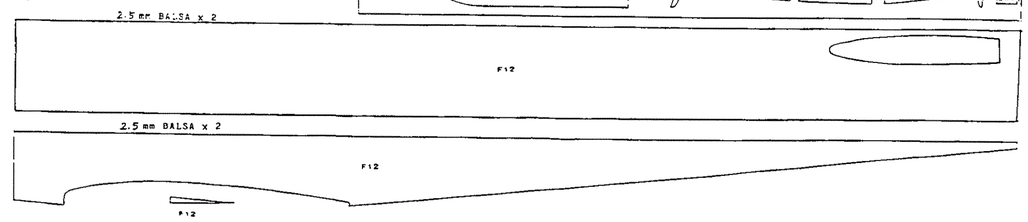

TW 1 BW 1		5X10X700 mm 3/16X3/8 SPRUCE 8 PCS.	R LAMINATE	1.5X15X270 mm 1/16X5/8 BALSA 4 PCS.
TW 2 BW 2		3X6X700 mm 1/8X1/4 SPRUCE 8 PCS.	TW 36	1.5X20X80 mm 1/16X13/16 BALSA 3 PCS.
TW 3 BW 3		3X10X700 mm 1/8X3/8 BALSA 4 PCS.		
TW 20 BW 20		1.5X80X700 mm 1/16X3 5/32 BALSA 8 PCS.	S 13 TW 23 BW 23	1.5X80X450 mm 1/16X3 5/32 BALSA 3 PCS.
TW 24 BW 24		1.5X5X600 mm 1/16X3/16 BALSA 12 PCS.	TW 21 BW 21	1.5X35X700 mm 1/16X1 3/8 BALSA 8 PCS.
TW 25 BW 25		8X20X440 mm 5/16X3/4 BALSA 4 PCS.		
TW 34 BW 34		1.5X13X300 mm 1/16X17/32 BALSA 1 PCS.	TW 21 BW 21	1.5X46X600 mm 1/16X1 13/16 BALSA 4 PCS.
TW 35 BW 35		7X13X700 mm 9/32X17/32 BALSA 4 PCS.		

FULL SIZE PARTS LIST REED FALCON 54

Top - yellow CH1
Top - CH6
Bottom - yellow - CH5
Bottom - CH7